

Released



Philips
wireless portable speaker

Bluetooth

Built-in microphone for calls
Rechargeable battery
2 W



BT1300R

Big sound in your palm

Take your music everywhere with an ultra-compact, rugged speaker. Built-in anti-clip technology gives better sound for its size and it can be angled for wider sound projection. A colourful silicone case adds style and protection.

Impressive sound

- Advanced audio performance with a handy pocket-size design
- Anti-clipping function for loud, distortion-free music

Simplicity in use

- Wireless music streaming via Bluetooth
- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device

Designed for grab and go

- Built-in rechargeable battery for music playback anywhere
- Carry it anywhere with the included finely knitted strip

PHILIPS

Specifications

Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S
- iPod touch: 3rd generation or later
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- work with: Bluetooth 4.0 or below
- other Bluetooth-enabled device

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)

Convenience

- Built-in microphone: for speaker conference

Sound

- Output power (RMS): 2 W
- Sound System: Mono



Loudspeakers

- Speaker driver: 1 x 1.75"

Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: 8 hr

Accessories


- Included accessories: carrying strap, USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

Dimensions

- Product dimensions (WxDxH): 55 x 55 x 55 mm
- Packaging dimensions (WxDxH): 96 x 78 x 122 mm
- Product weight: 0.12 kg
- Weight incl. Packaging: 0.2 kg


Highlights

Wireless music streaming

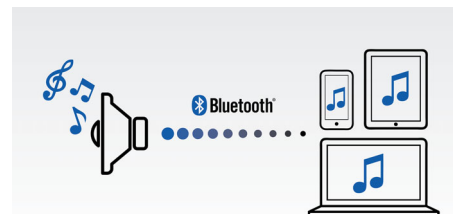

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

Anti-clipping function

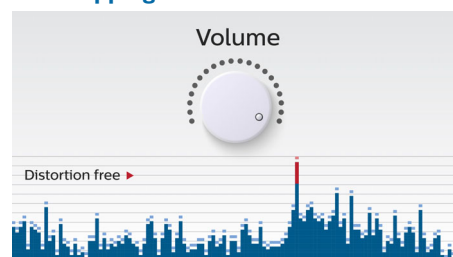

Anti-Clipping lets you play music louder and keeps the quality high, even when the battery is low. It accepts a range of input signals from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery, keeping music distortion-free.

Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

including finely knitted strip

In line with the Philips CitiScape Strada's headband series, which was inspired by fashionable sneakers and their vividly coloured shoe laces, our by-packed strip is made of a vibrant and finely knitted fabric sleeve making it stylish enough to be a fashion accessory.

Audio-in



Audio-in for easy connection to almost any electronic device



Issue date 2015-05-05

Version: 3.0.5

12 NC: 8670 001 17924
EAN: 04 89518 56023 32

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com