



Philips  
In-Ear Headphones

14.2 mm drivers/open-back  
Ear bud

SHE3205PP



## Rich bass, clear sound

Designed to comfortably fit the shape of your ear

Designed for optimal fit and comfort, the SHE3205 earphones feature 14.2 mm drivers and bass vents for rich bass and clear sound. The built-in mic lets you switch easily between music and calls. Available in a choice of 6 vibrant colours to match your Apple watch.

### Enjoy quality sound

- 14.2 mm speaker drivers for rich bass and clear sound
- Neodymium magnets enhance bass performance

### Ultimate wearing comfort

- Designed to comfortably fit the shape of your ear

### Design for convenience

- Flexi-Grip design for durability
- Built-in microphone switches you from music to phone calls

# PHILIPS

In-Ear Headphones  
14.2 mm drivers/open-back Ear bud


## Highlights

### 14.2 mm speaker drivers



Quality 14.2 mm speaker drivers with neodymium magnet delivers rich bass and clear sound.

### Built-in microphone

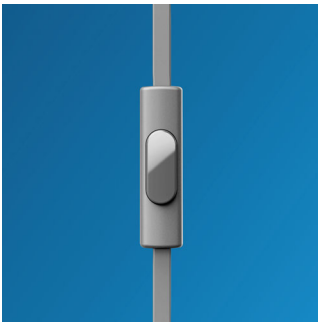


The built-in microphone lets you switch from listening to music to taking phone calls - easily, so you'll always stay connected with what matters most to you.

### Designed for comfort

The design is based on ear geometry for comfortable wear and a snug fit for everyone.

### Flexi-Grip

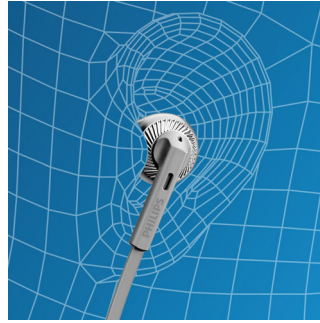

A soft, flexible part that connects the housing and the cable protects the cable connection from damage, even if bended heavily.

### Neodymium magnets



Neodymium is the best material for producing a strong magnetic field for greater sensitivity in a voice coil, providing a better bass response and higher overall sound quality.

SHE3205PP/00

## Specifications

### Sound

- Acoustic system: open
- Magnet type: Neodymium
- Impedance: 32 ohm
- Maximum power input: 30 mW
- Sensitivity: 107 dB
- Speaker diameter: 14.2 mm
- Frequency response: 8–24,000 Hz

### Connectivity

- Cable Connection: two-parallel, symmetric
- Cable length: 1 m
- Connector: 3.5 mm
- Finishing of connector: nickel plated
- Type of cable: copper

### Inner Carton

- Gross weight: 0.1164 kg
- GTIN: 2 69 25970 70797 2
- Inner carton (L x W x H): 18.1 x 8.2 x 6 cm
- Net weight: 0.0381 kg
- Number of consumer packages: 3
- Tare weight: 0.0783 kg

### Outer Carton

- Gross weight: 1.1612 kg
- GTIN: 1 69 25970 70797 5
- Outer carton (L x W x H): 35.3 x 19.9 x 16 cm
- Net weight: 0.3048 kg
- Number of consumer packages: 24
- Tare weight: 0.8564 kg

### Packaging dimensions

- Packaging dimensions (W x H x D): 5 x 17.3 x 2.5 cm
- EAN: 69 25970 70797 8
- Gross weight: 0.0298 kg
- Net weight: 0.0127 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.0171 kg
- Type of shelf placement: Both



Issue date 2016-11-16

Version: 1.0.3

12 NC: 8670 001 31364  
EAN: 69 25970 70797 8

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)