## Always there to help you

Register your product and get support at www.philips.com/welcome



HTB7150/93



# User manual



	有毒有害物质或元素 Hazardous/Toxic Substance					
部件名称 Name of the Parts	铅 (Pb, Lead)	汞(Hg, Mercury)	镉(Cd, Cadmium)	六价铬 (Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	0	0	0	0	0	0
DVD loader DVD 光盒	Х	0	0	0	0	0
Subwoofer 超重低音箱	Ο	Ο	0	0	0	0
Loudspeakers 喇叭单元	0	0	0	0	0	0
PWBs 电路板组件	Х	Ο	0	0	0	0
Accessories (Remote control & cables) 附件(遥控器, 电源线,连接线)	Х	Ο	Ο	Ο	0	Ο
Batteries in Remote Control (ZnC) 遥控器电池	Х	0	0	0	0	0

○:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 - 2006 标准规定的限量要求以下。 O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.

×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363 - 2006 标准规定的限量要求。X: Indicates that this toxic or hazardous substance contained in at least one of the

homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



#### 环保使用期限 Environmental Protection Use Period

此标识指期限(十年), 电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发 生外泄或突变,用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重损害 的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

#### 电池标识 Battery labeling logo



#### <u> 环保使用期限 Environmental Protection Use Period</u>

此标识指期限(五年),电池中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变,用户使用该电池产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。

This logo refers to the period (5 years) during which the toxic or hazardous substances or elements contained in the **battery** will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

## Contents

1	<b>Help and support</b> Use onscreen help (user manual) Navigate onscreen help	4 4 4
2	<b>Important</b> Safety Care for your product Care of the environment 3D health warning	5 5 6 6
3	<b>Your home theater</b> Remote control Main unit Connectors	8 8 9 10
4	Connect and set up Placement Connect to TV Connect audio from TV and other devices Set up EasyLink (HDMI-CEC control) Connect and set up a home network	12 12 12 13 13 14
5	Use your home theater Access the home menu Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player iPod or iPhone Smartphone control Browse PC through DLNA Choose sound	177 177 199 200 211 222 233 233 255 266
6	<b>Change settings</b> Language settings Picture and video settings Audio settings Parental control settings Display settings	28 28 28 28 28 29 29

	Energy saving settings	29
	Speaker settings	29
	Restore default settings	30
7	Update software	31
	Check software version	31
	Update software through USB	31
	Update software through the Internet	32
	Update the onscreen help	32
8	Wall mount your home theater	34
	Wall mount	34
9	Product specifications	35
10	Troubleshooting	39
11	Notice	42
	Copyright	42
	Open source software	42
	RMVB end user agreement (Asia	
	Pacific and China only)	42
	Compliance	43
	Trademarks	43
12	Language code	45

13 Index

46

## 1 Help and support

Philips provides extensive online support.Visit our website at www.philips.com/support to:

- download the complete user manual
- print the quick start guide
- watch video tutorials (available only for selected models)
- find answers to frequently answered questions (FAQs)
- email us a question

• chat with our support representative. Follow the instructions on the website to select your language, and then enter your product model number.

Alternatively, you can contact Philips Consumer Care in your country. Before you contact Philips, note down the model number and serial number of your product. You can find this information on the back or bottom of your product.

## Use onscreen help (user manual)

For easy access, the onscreen help (user manual) is stored on your home theater. The onscreen help has two panels.

- The left panel contains two tabs -Contents and Index. Navigate the Contents or Index to select a topic. The legends used to display the Contents are as follows:
  - ▶ : Press 确认 to expand the subtopics.
  - ▼: Press 确认 to collapse the subtopics, or press Navigation buttons (up/ down) to select a topic.
- To move between the left and right panel, press **Navigation buttons** (left/right).
- The right panel contains the content of the selected topic. For additional help on

the content, scroll down the page to see **Related topics**.

Use the home theater remote control to select and navigate the onscreen help.

### Navigate onscreen help

Press a button on your remote control to use onscreen help.

Button	Action	
帮助	Access or exit onscreen help.	
 确认	Display the selected page, or expand subtopics in <b>Contents</b> .	
Navigation buttons	Up: Scroll up or move to the previous page.	
	Down: Scroll down or move to the next page. Right: Navigate to the right panel	
	or next index entry. Left: Navigate to the left panel or previous index entry.	
★ 返回	Move up in the <b>Contents</b> or <b>Index</b> . From the right panel, move to the	
	<b>Contents</b> on the left panel.	
I◀ (Previous)	Display the last viewed page in history.	
►I (Next)	Display the next page from history.	

## 2 Important

Read and understand all instructions before you use your product. If damage is caused by failure to follow instructions, the warranty does not apply.

## Safety

#### Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

#### Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

#### Risk of injury or damage to the home theater!

• For wall-mountable products, use only the supplied wall mount bracket. Secure the

wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.

- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

#### Risk of overheating!

• Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

#### Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaine, etc.).
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

#### Risk of swallowing batteries!

• The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.

- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.



This is CLASS II apparatus with double insulation, and no protective earth provided.

### Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

### Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

### 3D health warning

If you or your family has a history of epilepsy or photosensitive seizures, consult a medical professional before exposing yourself to flashing light sources, rapid image sequences or 3D viewing.


To avoid discomfort such as dizziness, headache or disorientation, we recommend not watching 3D for extended periods of time. If you experience any discomfort, stop watching 3D and do not immediately engage in any potentially hazardous activity (for example driving a car) until your symptoms have disappeared. If symptoms persist, do not resume watching 3D without consulting a medical professional first. Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above. Watching 3D is not recommended for children under six years of age as their visual system is not fully developed yet.

# 3 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers(e.g. notification of product software upgrade), register your product at www.philips.com/welcome.

### Remote control

This section includes an overview of the remote control.

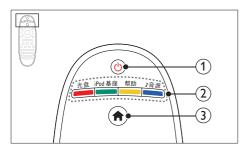

#### 1 (Standby-On)


- Switch the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

#### 2 Source buttons / Color buttons

- Color buttons: Select tasks or options for Blu-ray discs.
- 光盘 : Switch to disc source.
- iPod 基座 : Switch to Philips dock for iPod or iPhone.
- 帮助: Access the onscreen help.
- ♪音源: Select an audio input source or radio source.

#### 3 ♠ (Home)

Access the home menu.

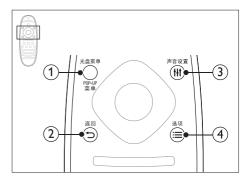

#### 1 光盘菜单 / 💥

Access or exit the disc menu when you play a disc.

2 5 返回


- Return to a previous menu screen.
- In radio mode, press and hold to erase the current preset radio stations.

#### 3 ₩ 声音设置

Access or exit sound options.

#### ④ Ⅲ选项

- Access more play options while playing a disc or a USB storage device.
- In radio mode, set a radio station.

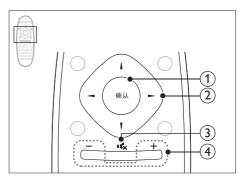

#### 1 确认

Confirm an entry or selection.

#### 2 Navigation buttons

- Navigate menus.
- In radio mode, press left or right to start auto search.


- In radio mode, press up or down to tune the radio frequency.
- During network and password setup, press left to delete a character.

#### 3 🔩 (Mute)

Mute or restore volume.

#### (4) +/- (Volume)

Increase or decrease volume, or restore volume when muted.

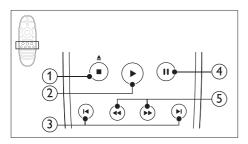

#### ① ■ (Stop) / ≜ (Eject)

- Stop play.
- Press and hold for three seconds to eject a disc.
- 2 ► (Play)


Start or resume play.

#### ③ I / ►I (Previous/Next)

- Skip to the previous or next track, chapter or file.
- In radio mode, select a preset radio station.
- (4) II (Pause)

Pause play.

(5) ◀◀ / ▶▶ (Fast Backward/Fast Forward) Search backwards or forward. Press repeatedly to change the search speed.

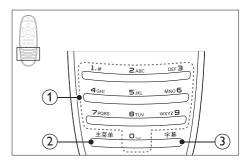

#### (1) Alphanumeric buttons

- Enter values or letters (using SMS style entry).
- In radio mode, select a preset radio station.

#### 主菜单


Access the main menu of a video disc.

3 字幕

Select subtitle language for video.

## Main unit

This section includes an overview of the main unit.

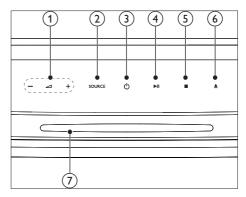



Increase or decrease volume.

#### 2 SOURCE

Select an audio or video source for the home theater.

(3) (Standby-On)

Switch the home theater on or to standby.

(4) ►II (Play/Pause)

Start, pause or resume play.

- (5) (Stop)
  - Stop play.
  - In radio mode, press and hold to erase the current preset radio stations.
- (6) **▲** (Eject)


Press and hold for three seconds to eject a disc.

(7) Disc compartment

Connectors

This section includes an overview of the connectors available on your home theater.

#### Side left




#### MUSIC iLINK

Audio input from an MP3 player with 3.5mm jack.

#### (2) •<₽ (USB)

Audio, video or picture input from a USB storage device.

#### Rear left

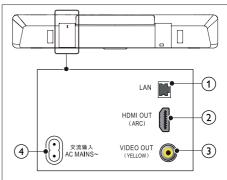

#### (1) LAN

Connect to the LAN input on a broadband modem or router.

(2) HDMI OUT (ARC)

Connect to the HDMI input on the TV.


#### (3) VIDEO OUT

Connect to the composite video input on the TV.

(4) AC MAINS~

Connect to the power supply.

### Rear right

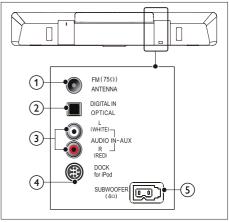

#### (1) ANTENNA FM 75 $\Omega$

Signal input from an antenna, cable or satellite.

#### 2 DIGITAL IN-OPTICAL

Connect to an optical audio output on the TV or a digital device.

#### 3 AUDIO IN-AUX

Connect to an analog audio output on the TV or an analog device.

#### ④ DOCK for iPod

Connect to a Philips dock for iPod or iPhone.(Model: Philips DCK306x, sold separately)

#### 5 SUBWOOFER

Connect to the supplied subwoofer.

## 4 Connect and set up

This section helps you connect your home theater to a TV and other devices, and then set it up.

For information about the basic connections of your home theater and accessories, see the quick start guide.




- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

## Placement

Place the subwoofer at least 1 meter (3 feet) away from your home theater, and ten centimeters away from the wall.

For best results, place your subwoofer as shown below.

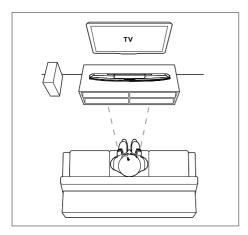

## Connect to TV


Connect your home theater to a TV to watch videos. You can listen to the TV audio through your home theater speakers.

Use the best quality connection available on your home theater and TV.

## Option 1: Connect to TV through HDMI (ARC)

#### Best quality video

Your home theater supports HDMI version with Audio Return Channel (ARC). If yourTV is HDMI ARC compliant, you can hear the TV audio through your home theater by using a single HDMI cable.

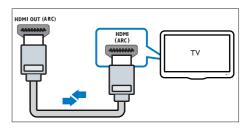


- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI ARC connector on the TV.
  - The HDMI ARC connector on the TV might be labeled differently. For details, see the TV user manual.
- On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
  - If you cannot hear the TV audio through your home theater, set up the audio manually.

## Option 2: Connect to TV through standard HDMI

Best quality video

If your TV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.

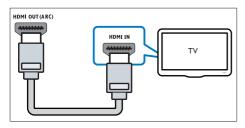


- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI connector on the TV.
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 13).
- 3 On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
  - HDMI-CEC is a feature that enables CEC compliant devices that are connected through HDMI to be controlled by a single remote control, such as volume control for both the TV and the home theater. (see 'Set up EasyLink (HDMI-CEC control)' on page 14)
- If you cannot hear the TV audio through your home theater, set up the audio manually. (see 'Set up the audio' on page 15)
  - Note
- If yourTV has a DVI connector, you can use an HDMI/ DVI adapter to connect to TV. However, some of the features may not be available.

## Option 3: Connect to the TV through composite video

#### Basic quality video

If your TV does not have HDMI connectors, use a composite video connection. A composite connection does not support high-definition video.



- Using a composite video cable, connect the VIDEO OUT connector on your home theater to the VIDEO IN connector on the TV.
  - The composite video connector might be labeled AV IN, COMPOSITE, or BASEBAND.
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 13).
- 3 When you watch TV programs, press ♪音源 on your home theater repeatedly to select the correct audio input.
- 4 When you watch videos, switch your TV to the correct video input. For details, see the TV user manual.

## Connect audio from TV and other devices

Play audio from TV or other devices through your home theater speakers.


Use the best quality connection available on your TV, home theater, and other devices.



When your home theater and TV are connected through HDMI ARC, an audio connection is not required (see 'Option 1: Connect to TV through HDMI (ARC)' on page 12).

#### Option 1: Connect audio through a digital optical cable


#### Best quality audio



- 1 Using an optical cable, connect the **OPTICAL** connector on your home theater to the OPTICAL OUT connector on the TV or other device.
  - The digital optical connector might be labeled SPDIF or SPDIF OUT

#### Option 2: Connect audio through analog audio cables

Basic quality audio

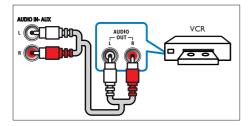

1 Using an analog cable, connect the AUX connectors on your home theater to the AUDIO OUT connectors on the TV or other device.

## Set up EasyLink (HDMI-CEC control)

This home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLinkcompliant devices that are connected through HDMI can be controlled by a single remote control



#### Note

- Depending on the manufacturer, HDMI-CEC is known by many names. For information on your device, see the user manual of the device.
- Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

#### Before you start

- Connect your home theater to the HDMI-CEC compliant device through HDMI connection.
- Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater

#### Enable EasyLink

- 1 Press **†** (Home).
- Select [Setup], and then press 确认.
- Select [EasyLink] > [EasyLink] > [On].
  - On yourTV and other connected devices, turn on HDMI-CEC control, For details, see the user manual of the TV or other devices
    - On your TV, set the audio output to 'Amplifier' (instead of TV speakers). For details, see the TV user manual.

#### EasyLink controls

With EasyLink, you can control your home theater, TV, and other connected HDMI-CEC compliant devices with a single remote control.

- [One Touch Play] (One-touch play): When a video disc is in the disc compartment, press ▶ (Play) to wake up the TV from standby, and then play a disc.
- [One Touch Standby] (One-touch standby): If one-touch standby is enabled, your home theater can switch to standby with the remote control of the TV or other HDMI-CEC devices.
- [System Audio Control] (System audio control): If system audio control is enabled, the audio of the connected device is output through your home theater speakers automatically when you play the device.
- [Audio Input Mapping] (Audio input mapping):If system audio control does not work, map the connected device to the correct audio input connector on your home theater.

#### - Note

 To change the EasyLink control settings, press (Home), select [Setup] > [EasyLink].

#### Set up the audio

If you cannot hear the audio output of a connected device through your home theater speakers, do the following:

- Check that you have enabled EasyLink on all the devices, (see 'Set up EasyLink (HDMI-CEC control)' on page 14) and
- on your TV, set the audio output to "Amplifier" (instead of TV speakers). For details, see the TV user manual, and
- setup the EasyLink audio control.
- 1 Press **A** (Home).
- 2 Select **[Setup]**, and then press 确认.
- 3 Select [EasyLink] > [System Audio Control] > [On].
  - To play the audio from the TV speakers, select **[Off]**, and skip the following steps.

- 4 Select [EasyLink] > [Audio Input Mapping].
- 5 Follow the onscreen instructions to map the connected device to the audio inputs on your home theater.
  - If you connect your home theater to the TV through an HDMI ARC connection, make sure that the TV audio is mapped to the ARC input on your home theater.

## Connect and set up a home network

Connect your home theater to a network router through wired or wireless network connection, and enjoy:

- Streamed multimedia content
- Smartphone control
- Software update (see 'Update software through the Internet' on page 32)

#### Caution

 Familiarize yourself with the network router, media server software and networking principles. If necessary, read documentation that accompanies the network components. Philips is not responsible for lost, damaged, or corrupt data.

#### Before you start


- For software update, make sure that the network router has access to the Internet with high-speed connection and is not restricted by firewalls or other security systems.
- Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

#### Set up the wired network

#### What you need

A network cable (RJ45 straight cable).

• A network router (with DHCP enabled).

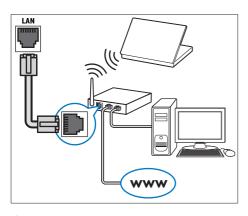


- Using a network cable, connect the LAN connector on your home theater to the network router.
- 2 Press ♠ (Home).
- 3 Select [Setup], and then press 确认.
- 4 Select [Network] > [Network installation] > [Wired (Ethernet)].
- 5 Follow the onscreen instructions to complete the setup.
  - If connection fails, select **[Retry]**, and then press 确认.
- 6 Select [Finish], and then press 确认 to exit.
  - To view the network settings, select [Setup] > [Network] > [View network settings].

#### Set up the wireless network

Your home theater has a built-in Wi-Fi for easy access to a wireless network.

#### What you need

• A network router (with DHCP enabled). For best wireless performance, coverage, and compatibility, use 802.11n router.

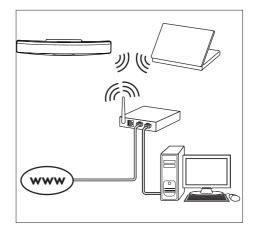

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press 确认.
- 3 Select [Network] > [Network installation] > [Wireless (Wi-Fi)], and then press 确认.
- 4 Follow the onscreen instructions to select and set up the wireless network.
  - If connection fails, select **[Retry]**, and then press 确认.
- 5 Select [Finish], and then press 确认 to exit.
  - To view the network settings, select [Setup] > [Network] > [View wireless settings].

#### Personalize the network name

Name your home theater to easily identify it on your home network.

- 1 Press ♠ (Home).
- 2 Select **[Setup]**, and then press 确认.
- 3 Select [Network] > [Name your Product:].
- 4 Press the Alphanumeric buttons to enter the name.
- 5 Select [Done], and then press 确认 to exit.

# 5 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

#### Before you start

- Make the necessary connections described in the quick start guide and the user manual.
- Complete the first-time setup. First-time setup appears when you turn on your home theater for the first time or if you do not complete the setup.
- Switch the TV to the correct source for your home theater (for example, HDMI, AV IN).

### Access the home menu

The home menu provides easy access to connected devices, setup and other useful features in your home theater.

1 Press **A** (Home).

→ The home menu is displayed.

- 2 Press the Navigation buttons and 确认 to select the following:
  - [play Disc]: Start disc play.
  - [browse USB]: Access the USB content browser
  - [browse iPod]: Access the iPod or iPhone content browser.
  - [browse PC]: Access the computer content browser.
  - [Setup]: Access menus to change video, audio and other settings.
  - [Help]: Access onscreen user manual.
- 3 Press ♠ (Home) to exit.

### Discs

Your home theater can play DVDs, VCDs, CDs, and Blu-ray discs. It can also play discs that you've made at home, such as CD-R discs of photos, videos, and music.

- 1 Insert a disc into the home theater.
- 2 If the disc does not play automatically, press DISC or select [play Disc] from the home menu.

**3** Use the remote control to control play (see 'Remote control' on page 8).

• It is normal to hear a little noise when you play a Blu-ray disc. This does not mean that your home theater is faulty.

#### Play buttons

Button	Action
Navigation	Navigate menus.
buttons	Up/Down: Rotate the picture
	clockwise or counter-clockwise.
确认	Confirm an entry or selection.
► (Play)	Start or resume play.
11	Pause play.
	Stop play.
<b></b>	Press and hold for three seconds
	to eject a disc.
◀ / ▶	Skip to the previous or next track,
	chapter or file.
<b>◀◀</b> / ▶▶	Search fast backwards or forward.
	When a video is paused, search
	slow backwards or forward.
字幕	Select subtitle language for video.
光盘菜单	Access or exit the disc menu.
/ POP-UP 菜单	
🔚 选项	Access the advanced options
	when you play your audio, video,
	or media files (see 'Audio, video,
	and picture options' on page 20).

#### Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

- 1 Press Ⅲ 声音设置。
- 2 Select AUD SYNC, and then press 确认.
- **3** Press the **Navigation buttons** (up/down) to synchronize the audio with the video.
- **4** Press 确认 to confirm.

### Play Blu-ray 3D disc

Your home theater can play Blu-ray 3D video. Read the 3D health warning before playing a 3D disc.

#### What you need

- A 3DTV
- A pair of 3D glasses that are compatible with your 3D TV
- A 3D Blu-ray video
- A high speed HDMI cable
- 1 Using the high speed HDMI cable, connect your home theater to a 3D compatible TV.
- 2 Make sure that the 3D video setting is enabled. Press ♠ (Home), select [Setup] > [Video] > [Watch 3D video] > [Auto].
  - To play 3D discs in 2D mode, select [Off].
- **3** Play a Blu-ray 3D disc and put on the 3D glasses.
  - During video search and in certain play modes, the video is displayed in 2D. The video display returns to 3D when you resume play.

• To avoid flickering, change the brightness of the display.

#### Bonus View on Blu-ray

On Blu-ray discs that support the Bonus View, enjoy extra content such as commentaries in a small screen window. Bonus View is also known as picture-in-picture.

- 1 Enable Bonus View in the Blu-ray disc menu.
- While you play the movie, press Ⅲ 选项.
   → The options menu is displayed.
- **3** Select [PIP selection] > [PIP].
  - Depending on the video, PIP menu [1] or [2] is displayed.
  - To disable Bonus View, select [Off].
- 4 Select [2nd audio language] or [2nd Subtitle Language].
- 5 Select the language, and then press 确认.

#### BD-Live on Blu-ray

Access additional features on the Blu-ray discs with BD-Live content, such as internet chats with the director, the latest movie trailers, games, wallpaper, and ringtones.

BD-Live services and content vary from disc to disc.

#### What you need

- Blu-ray disc with BD-Live content.
- Storage device:
  - a USB storage device, with at least 1 GB of memory.
- Connect your home theater to a home network with Internet access (see 'Connect and set up a home network' on page 15).
- 2 Connect a USB storage device to your home theater.
- 3 Press ♠ (Home) and select [Setup].
- 4 Select [Advanced] > [Local storage].
- 5 Select [USB].
  - Use either a USB storage device to store the downloaded BD-Live content.

Note

- 6 Select [Advanced] > [BD-Live security] > [Off] to enable BD-Live.
  - To disable BD-Live, select [On].
- 7 Select the BD-Live icon in the disc menu, and then press 确认.
  - ➡ BD-Live starts to load. The loading time depends on the disc and your internet connection.
- 8 Press the Navigation buttons to navigate BD-Live, and then press 确认 to select an option.
  - Note
  - To clear the memory on the storage device, press (Home), select [Setup] > [Advanced] > [Clear memory]

## Data files

Your home theater can play pictures, audio and video files contained in a disc or a USB storage device. Before you play a file, check that the file format is supported by your home theater (see 'File formats' on page 35).

- 1 Play the files from a disc or USB storage device.
- 2 To stop play, press 📕.
  - To resume the video from where you stopped, press ► (Play).
  - To play the video from the start, press 确认.
  - Note

 To play DivX DRM protected files, connect your home theater to a TV through an HDMI cable.

#### Subtitles

If your video has subtitles in multiple languages, select a subtitle language.



#### Note

- Make sure that the subtitle file has the exact same name as the video file. For example, if the video file is named 'movie.avi', name the subtitle file as 'movie.srt' or 'movie.sub'.
- Your home theater supports the following file formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. If the subtitles do not appear correctly, change the character set.
- 1 While playing video, press 字幕 to select a language.
- 2 For DivX or RMVB/RM videos, if the subtitles do not appear correctly, continue the following steps to change the character set.
- 3 Press Ⅲ 选项
  - → The options menu is displayed.
- 4 Select [Character set], and then select a character set that supports the subtitle.

#### Europe, India, LATAM, and Russia

Character Set	Language
[Standard]	English, Albanian, Danish, Dutch, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish
[Central Europe]	Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Sorbian
[Cyrillic]	Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian and Ukrainian
[Greek]	Greek
[Baltic]	Estonian, Latvian and Lithuanian

#### Asia Pacific and China

Character Set	Language
[Standard]	Albanian, Danish, Dutch, English, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish, Turkish
[Chinese]	Simplified Chinese
[Chinese- Traditional]	Traditional Chinese
[Korean]	English and Korean

#### VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

- 1 Press 🕈 (Home).
- 2 Select [Setup], and then press 确认.
- 3 Select [Advanced] > [DivX®VOD Code].
  - → The DivX VOD registration code for your home theater is displayed.

### USB storage devices

Enjoy pictures, audio, and video stored on a USB storage device such as an MP4 player or digital camera.

#### What you need

- A USB storage device that is formatted for FAT or NTFS file systems, and complies with the Mass Storage Class.
- A media file in one of the supported file formats (see 'File formats' on page 35).
  - Note
- If you use a USB extension cable, USB HUB, or USB multi-reader; the USB storage device may not be recognized.

- Connect a USB storage device to the 

   (USB) connector on your home theater.
- 2 Press ♠ (Home).
- 3 Select [browse USB], and then press 确认. → A content browser is displayed.
- 4 Select a file, and then press 确认.
- 5 Press the play buttons to control play (see 'Play buttons' on page 17).

## Audio, video, and picture options

Use advanced features when you play pictures, audio and video files from a disc or a USB storage device.

#### Audio options

While playing audio, repeat an audio track, a disc, or a folder:

- 1 Press : 送项 repeatedly to cycle through the following functions:
  - **RPT TRAC** / **RPT FILE**: Repeat the current track or file.
  - **RPT DISC** / **RPT FOLD**: Repeat all the tracks on the disc or the folder.
  - **RPT RAND**: Play audio tracks in random order.
  - **RPT OFF**: Turn off the repeat mode.

#### Video options

While watching video, select options such as subtitles, audio language, time search, and picture settings. Depending on the video source, some options are not available.

- 1 Press ≔选项
  - $\mapsto$  The video options menu is displayed.
- 2 Press the Navigation buttons and 确认 to select and change:
  - [Audio language]: Select audio language for video.

- [Subtitle Language]: Select subtitle language for video.
- [Subtitle shift]: Change the subtitle position on the screen.
- [Info]: Display information about what is playing.
- [Character set]: Select a character set that supports the DivX subtitle.
- **[Time search]**: Skip to a specific part of the video by entering the time of the scene.
- [2nd audio language]: Select the second audio language for Blu-ray video.
- [2nd Subtitle Language]: Select the second subtitle language for Blu-ray video.
- [Titles]: Select a specific title.
- [Chapters]: Select a specific chapter.
- [Angle list]: Select a different camera angle.
- [Menus]: Display the disc menu.
- **[PIP selection]**: Display Picture-in-Picture window when playing a Blu-ray disc that supports the Bonus View.
- **[Zoom]**: Zoom into a video scene or picture. Press the **Navigation buttons** (left/right) to select a zoom factor.
- **[Repeat]**: Repeat a chapter or title.
- [Repeat A-B]: Mark two points within a chapter or track to repeat play, or turn off the repeat mode.
- [Picture settings]: Select a predefined color setting.
- [Audio sync]: Delay the audio to match the video.
- [2D to 3D]: Select 2D or 3D video.

#### Picture options

While viewing a picture, zoom into the picture, rotate it, add animation to a slideshow, and change the picture settings.

- 1 Press ≔ 选项.
  - $\mapsto$  The picture options menu appears.

- 2 Press the Navigation buttons and 确认 to select and change the following settings:
  - [Rotate +90]: Rotate the picture 90 degree clockwise.
  - [Rotate -90]: Rotate the picture 90 degree counter-clockwise.
  - **[Zoom]**: Zoom into a video scene or picture. Press the **Navigation buttons** (left/right) to select a zoom factor.
  - [Info]: Display picture information.
  - [Duration per slide]: Select the display speed for each picture in a slide show.
  - [Slide animation]: Select animation for the slide show.
  - [Picture settings]: Select a predefined color setting.
  - [Repeat]: Repeat a selected folder.
  - [2D to 3D]: View 2D or 3D photo slideshow.

#### Musical slideshow

If the picture and audio files are from the same disc or USB storage device, you can create a musical slideshow.

- 1 Select an audio track, and then press 确认.
- 2 Press ∽ 返回, and go to the picture folder.
- 3 Select a picture, and then press ► (Play) to start the slideshow.
- 4 Press to stop slideshow.
- 5 Press again to stop music.

#### - Note

 Make sure that the picture and audio formats are supported by your home theater (see 'File formats' on page 35).

## Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.



- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- 1 Connect the FM antenna to the ANTENNA FM 75  $\Omega$  on your home theater.
  - For the best reception, place the antenna away from yourTV or other sources of radiation.
- 2 Press ♪音源 repeatedly until RADIO appears on the display panel.
  - ➡ If you have already installed the radio stations, the last channel that you listened to is played.
  - If you have not installed any radio stations, the message AUTO INSTALL...PRESS PLAY appears on the display panel. Press ► (Play).
- **3** Use the remote control to listen or to change radio stations.

#### Play buttons

Button	Action
I <b>⊲</b> / ►I	Select a preset radio station.
or	
Alphanumeric	
buttons	
Navigation	Left/Right: Search for a radio
buttons	station.
	Up/Down: Fine tune a radio
	frequency.
	Press to stop the installation
	of radio stations.
★ 返回	Press and hold to erase the
	preset radio station.

🔚 选项	Manual:
	1) Press 🔚 选项, 2) Press 🖊
	/ ▶I to select your preset, 3)
	Press 🔚 选项 again to store
	the radio station.
	Automatic: Press and hold for
	three seconds to reinstall the
	radio stations.
 字幕	Toggle between the stereo
	and mono sounds.

#### Tuning grid

In some countries, you can toggle the FM tuning grid between 50 kHz and 100 kHz. When you switch the tuning grid, all preset radio stations are erased.

- 1 Press ♪音源 repeatedly until RADIO appears on the display panel.
- 2 Press 🗖
- 3 Press and hold ► (Play) to toggle between 50 kHz or 100 kHz.

## MP3 player

Connect a MP3 player to play audio files.

#### What you need

- An MP3 player.
- A 3.5mm stereo audio cable.
- Using the 3.5mm stereo audio cable, connect the MP3 player to the MUSIC iLINK connector on your home theater.
  - If you use 6.5mm stereo audio cable, connect the MP3 player to your home theater using a 3.5mm - 6.5mm converter jack.
- 2 Press ≯音源 repeatedly until MUSIC I-LINK appears on the display panel.
- **3** Press the buttons on the MP3 player to select and play audio files.

### iPod or iPhone

Connect a Philips dock to play music, photos, and videos from your iPod or iPhone.

#### What you need

- A Philips dock (model: Philips DCK306x, sold separately): to purchase it, visit www. philips.com/welcome
- A yellow composite video cable.
- 1 Connect the Philips dock to the iPod 基座 connector on your home theater.
- 2 To view slideshow from your iPod or iPhone on your TV, connect the dock to the TV by using the yellow composite cable.
- **3** Switch on the iPod or iPhone, and place it on the dock.
  - Charge your iPod/iPhone on the dock while the home theater is in iPod mode.

#### Play music

- 1 Dock your iPod or iPhone.
- 2 Press iPod 基座 on the home theater remote control.
- **3** Browse your iPod or iPhone screen to select the music.
- 4 Play the music on your iPod or iPhone.
  - → The music is heard on your home theater.

## Browse the audio content from your TV (extended mode):

- 1 Press ♠ (Home).
- 2 Select [browse iPod], and then press 确认.
   → A content browser is displayed.
- **3** Press Navigation buttons to browse the audio content.
- 4 Press the play buttons to control play (see 'Play buttons' on page 17).

- The local keys on your iPod or iPhone are disabled.
- 5 To exit the dock mode, press ♠ (Home).

#### Play video and slideshow

- 1 Dock your iPod or iPhone (see 'iPod or iPhone' on page 23).
- 2 Press iPod 基座 on the home theater remote control.
- 3 Switch the TV to the AV/VIDEO source (corresponding to the yellow composite cable).
  - ightarrow The TV screen goes blank.
- 4 From the iPod or iPhone screen, browse and play a video or photo slideshow.
  - → The video or photo slideshow is displayed on your TV.

### Smartphone control

Use your mobile device such as iPhone (iOS 3.1.3 and above), Android phone (2.1 and above), iPad, or tablet to:

- Control your home theater
- Browse a data disc or USB storage device
- Switch to FM radio
- Personalize your sound settings
- Stream and share content from the devices on your home network

#### Before you start

- Connect your home theater, mobile device, and other DLNA-compatible devices to the same home network.
  - For better video quality, use wired connection whenever possible.
- Personalize the network name for your home theater (see 'Personalize the network name' on page 16).
- Download Philips **MyRemote** application on your mobile device.
  - For iPhone or iPad, search for the app in **App Store** (App Store).

• For Android based phone or tablet, search for the app in **Market** (Market).

#### Control your home theater

- 1 On the mobile device, access MyRemote application.
- 2 Select your home theater (by its network name) from the home screen.
  - → A browsing bar is displayed at the bottom of the screen.
  - If your home theater is not found, check the network connection or tap the **Devices** tab on your mobile device to search again.
- **3** Select one of the following tabs to access more options.
  - To return to the previous screen, press back button.

Option	Action			
Арр	Return to the home screen of your			
Home	device.			
Media	DISC: Browse and play a file stored			
	on a data disc.			
	USB: Browse and play a file stored			
	on a USB storage device.			
	FM radio: Switch to FM radio.			
Remote	Access the remote control on your			
	mobile device. Swipe the screen			
	to the left or right to access more			
	buttons. Only the relevant buttons			
	are enabled on your mobile device.			
	Some functions such as standby			
	and long press, are not available on			
	the mobile device.			
Sound	MySound: Personalize the sound			
	setting to suit your preference.			
	Surround: Select a surround sound			
	setting.			

4 Follow the onscreen instructions to select an option or complete the set up.

## Stream multimedia content (SimplyShare)

Philips SimplyShare allows you to use your smartphone to stream multimedia content (such as pictures, audio and video files), and play through your home theater or any DLNAcompatible device in the same home network. **Before you start** 

- Install a DLNA-compliant media server application on your mobile device, such as Twonky Media Server.
- Enable media sharing of files. For details, check the user manual of the media server software software.
- 1 On the mobile device, launch the media server application. For iPhone or Android phone, access **MyRemote** application.
- 2 From the menu of your mobile device, select SimplyShare.
  - → Your home theater and other devices on the home network are automatically detected and displayed on the screen.
- **3** Select a device on the network.
  - ➡ The folders in the selected device are displayed. Depending on the media server, the folder names may vary.
  - If you cannot see the folders, make sure that you enable media sharing on the selected device so that the content is available for sharing.

4 Select a media file to play.

- 5 From the menu on your mobile device, select the home theater to stream the media file to your home theater.
  - Some media files may not display or play due to compatibility issues. For your home theater, check the supported file formats.
- 6 Use your mobile device to control play.

## Browse PC through DLNA

Access and play the pictures, audio and video files from a computer or media server on the home network through your home theater:

#### Before you start

- Install a DLNA-compliant media server application on your device. Make sure that you download an application that works best for you. For example,
  - Windows Media Player 11 or higher for PC
  - Twonky Media Server for Mac or PC
- Enable media sharing of files. For ease of use, we have included the steps for the following applications:
  - Windows Media Player 11 (see 'Microsoft Windows Media Player 11' on page 25)
  - Windows Media Player 12 (see 'Microsoft Windows Media Player 12' on page 25)
  - Twonky Media for Mac (see 'Macintosh OS X Twonky Media (v4.4.2)' on page 26)
  - Note

 For additional help on these applications or other media servers, check the user manual of the media server software software.

#### Set up media server software

To enable media sharing, set up the media server software.

#### Before you start

- Connect your home theater to a home network. For better video quality, use wired connection whenever possible.
- Connect the computer and other DLNAcompatible devices to the same home network.

- Make sure that your PC firewall allows you to run Media Player programs (or the firewall's exemption list has the media server software included).
- Switch on your computer and the router.

#### Microsoft Windows Media Player 11

- 1 Start Windows Media Player on your PC.
- Click the Library tab, and then select Media Sharing.
- 3 The first time you select Media Sharing on your PC, a pop-up screen appears. Check the Share my media box and click OK.
  - → The Media Sharing screen is displayed.
- 4 In the Media Sharing screen, make sure that you see a device marked as Unknown Device.
  - → If you don't see an unknown device after a minute or so, check that your PC firewall is not blocking the connection.
- 5 Select the unknown device and click Allow.
  - → A green tick appears next to the device.
- 6 By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, select Library > Add to Library.
  - → The Add to Library screen is displayed.
  - If necessary, select Advanced options to display a list of monitored folders.
- 7 Select My folders and those of others I can access, and then click Add.
- 8 Follow the onscreen instructions to add the other folders that contain your media files.

#### Microsoft Windows Media Player 12

- 1 Start Windows Media Player on your PC.
- 2 In Windows Media Player, click the Stream tab, and then select Turn on media streaming.
  - → The Media streaming options screen is displayed.
- 3 Click Turn on media streaming.

- → You return to Windows Media Player screen.
- 4 Click the Stream tab and select More streaming options.
  - → The Media streaming options screen is displayed.
- 5 Make sure that you see a media program in the Local network screen.
  - → If you don't see a media program, check that your PC firewall is not blocking the connection.
- 6 Select the media program and click Allowed.
  - A green arrow appears next to the media program.
- By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, click the Organize tab and select Manage libraries > Music.
  - → The Music Library Locations screen is displayed.
- 8 Follow the onscreen instructions to add the other folders that contain your media files.

#### Macintosh OS X Twonky Media (v4.4.2)

- 1 Visit www.twonkymedia.com to purchase the software, or download a free 30-day trial to your Macintosh.
- 2 Start Twonky Media on the Macintosh.
- 3 In the Twonky Media Server screen, select Basic Setup and First Steps.
  - $\mapsto$  The First steps screen is displayed.
- 4 Type a name for your media server, and then click Save changes.
- 5 Back in the Twonky Media screen, select Basic Setup and Sharing.
  - → The Sharing screen is displayed.
- 6 Browse and select folders to share, and then select **Save Changes**.

→ Your Macintosh rescans the folders automatically so that they are ready to share.

#### Play files from your PC

#### - Note

- Before you play multimedia content from the computer, make sure that the home theater is connected to the home network, and the media server software is properly set up.
- 1 Press ♠ (Home).

2

- Select **[browse PC]**, and then press 确认. → A content browser is displayed.
- **3** Select a device on the network.
  - ➡ The folders in the selected device are displayed. Depending on the media server, the folder names may vary.
  - If you cannot see the folders, check that you have enabled media sharing on the selected device so that the content is available for sharing.
- **4** Select a file, and then press 确认.
  - Some media files may not play due to compatibility issues. Check the file formats supported by your home theater.
- 5 Press the play buttons to control play (see 'Play buttons' on page 17).

### Choose sound

This section helps you choose the ideal sound for your video or music.

1
2

Press III 声音设置。

Press the **Navigation buttons** (left/right) to access the sound options on the display.

Description	
Select a sound mode.	
Select surround sound or	
stereo sound.	
Delay the audio to match the	
video.	

- 3 Select an option, and then press 确认.
- 4 Press 🕁 返回 to exit.
  - If you do not press a button within a minute, the menu exits automatically.

#### Surround sound mode

Experience an immersive audio experience with surround sound modes.

- 1 Press Ⅲ 声音设置,
- 2 Select SURROUND, and then press 确认.
- **3** Press the **Navigation buttons** (up/down) to select a setting from your display:
  - AUTO: Automatically select a sound setting based on the sound stream.
  - **AMBISOUND MOVIE**: Multi-channel sound for best cinematic experience.
  - AMBISOUND MUSIC: Multi-channel sound for music and live concerts.
  - **STEREO**: Two-channel stereo sound. Ideal for listening to music.
- **4** Press 确认 to confirm.

#### Sound mode

Select predefined sound modes to suit your video or music.

- 1 Make sure that audio post processing is enabled at the speakers (see 'Speaker settings' on page 29).
- 2 Press Ⅲ 声音设置,
- 3 Select SOUND, and then press 确认.
- **4** Press the **Navigation buttons** (up/down) to select a setting on the display:

- AUTO:Intelligently select the best sound setting based on the audio played.
- BALANCED: Experience the original sound of your movies and music, without added sound effects.
- POWERFUL: Enjoy thrilling arcade sounds, ideal for action-packed videos and loud parties.
- **BRIGHT**: Spice up your dull movies and music with added sound effects.
- CLEAR: Hear every detail in your
   music and clear voices in your movies.
- WARM: Experience spoken words and music vocals in comfort.
- **PERSONAL**: Personalize the sound based on your preferences.
- 5 Press 确认 to confirm.

#### Equalizer

Change the high frequency (treble), mid frequency (mid), and low frequency (bass) settings of the home theater.

- 1 Press Ⅲ 声音设置,
- 2 Select SOUND > PERSONAL, and then press Navigation buttons (right).
- **3** Press the Navigation buttons (up/down) to change bass, mid or treble frequency.
- **4** Press 确认 to confirm.

## 6 Change settings

The home theater settings are already configured for optimal performance. Unless you have a reason to change a setting, we recommend that you keep the default setting.



- You cannot change a setting that is grayed out.
- To return to the previous menu, press → 返回. To exit the menu, press ↑ (Home).

## Language settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press 确认.
- 3 Select [Preference], and then press 确认.
- 4 Press the Navigation buttons and 确认 to select and change:
  - [Menu language]: Select a display language for menu.
  - [Audio]: Select an audio language for discs.
  - [Subtitle]: Select a subtitle language for discs.
  - [Disc menu]: Select a menu language for discs.

#### Note

- If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 45).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

## Picture and video settings

1 Press ♠ (Home).

4

- 2 Select [Setup], and then press 确认.
- **3** Select **[Video]**, and then press 确认.
  - Press the **Navigation buttons** and 确认 to select and change:
    - **[TV display]**: Select a picture format to fit the TV screen.
    - [HDMI video]: Select the resolution of video signal that is output from HDMI OUT (ARC) on your home theater. To enjoy the selected resolution, make sure that your TV supports the selected resolution.
    - [HDMI Deep Color]: Recreate the natural world on your TV screen by displaying vivid images using billion colors. Your home theater must be connected to a Deep Color enabled TV through an HDMI cable.
    - [Picture settings]: Select pre defined color settings for the video display. Select [User] to create your own setting.
    - [Watch 3D video]: Set HDMI video to support 3D or 2D video.

#### Note

 If you change a setting, make sure that the TV supports the new setting.

## Audio settings

- 1 Press ♠ (Home).
  - Select **[Setup]**, and then press 确认 .
- Select [Audio], and then press 确认.
  - Press the **Navigation buttons** and 确认 to select and change:
    - [Night mode]: For quiet listening, decrease the volume of loud sounds

on your home theater. Night mode is only available in DVDs and Blu-ray discs with Dolby Digital, Dolby Digital Plus, and Dolby True HD soundtracks.

- [HDMI Audio]: Set the HDMI audio output from your TV, or disable HDMI audio output from the TV.
- [Audio sync]: Set audio delay if audio and video cannot be matched.
- [Ambisound setup]: Set up Ambisound to give the best surround sound effect. Follow the instructions on the TV to complete the setup.

### Parental control settings

- 1 Press **†** (Home).
- 2 3 Select [Setup], and then press 确认.
- Select [Preference], and then press 确认.
- Press the Navigation buttons and 确认 to select and change:
  - [Change Password]: Set or change your password for parental control access. If you do not have a password or have forgotten your password, enter 0000
  - [Parental control]: Restrict access to discs that are recorded with age ratings. To play all discs, irrespective of the ratings, select 8 or [Off].

## **Display settings**

- Press **†** (Home).
- 23 Select [Setup], and then press 确认.
- Select [Preference], and then press 确认.
- Press the Navigation buttons and 确认 to select and change:
  - [Auto subtitle shift]: Enable or disable automatic repositioning of subtitles on TVs that support this feature.

- [Display panel]: Set the brightness of the home theater front panel display.
- [VCD PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.

### Energy saving settings

- 1 Press **†** (Home).
- 2 Select [Setup], and then press 确认.
- 3 Select [Preference], and then press 确认.
- Press the Navigation buttons and 确认 to select and change:
  - [Screen saver]: Switch the home theater to screen saver mode after 10 minutes of inactivity.
  - [Auto standby]: Switch the home theater to standby after 30 minutes of inactivity. This timer works only when a disc or USB play is paused or stopped.
  - [Sleep timer]: Set the duration of the sleep timer so that the home theater is switched to standby after the specified period.

### Speaker settings

- 1 Press **†** (Home).
- Select [Setup], and then press 确认. 3
  - Select [Advanced], and then press 确认.
- 4 Press the Navigation buttons and 确认 to select and change:
  - [Enhanced audio]: Select [On] to enable audio post processing at the speaker and enable karaoke settings (if your product supports Karaoke). To play the original audio of the disc, select [Off].

### 🔆 Тір

• Enable audio post processing before you select a predefined sound mode (see 'Sound mode' on page 27).

### Restore default settings

- 1 Press ♠ (Home).
- Select [Setup], and then press 确认.
   Select [Advanced] > [Restore defa
- 3 Select [Advanced] > [Restore default settings], and then press 确认.
- 4 Select [OK], and then press 确认 to confirm.
  - → Your home theater is reset to its default settings except for some settings such as parental control and DivX VOD registration code.

## 7 Update software

Philips continually tries to improve its products. To get the best features and support, update your home theater with the latest software.

Compare the version of your current software with the latest version on www.philips.com/ support. If the current version is lower than the latest version available on the Philips support website, upgrade your home theater with the latest software.

#### Caution

 Do not install a lower version of software than the current version installed on your product. Philips is not liable for problems caused due to software downgrade.

### Check software version

Check the version of the current software installed on your home theater.

- 1 Press **↑** (Home).
- 2 Select [Setup], and then press 确认.
- 3 Select [Advanced] > [Version information].
  - → The software version is displayed.
  - 'System SW' displayed indicates the overall software version. 'Subsystem SW' indicates the version of different features. For example, if 'Subsystem SW' is '35-00-00-05'', the last two digits ('05') indicate the current version of the onscreen help installed on your home theater.

## Update software through USB

#### What you need

- A USB flash drive that is FAT or NTFSformatted, with at least 100MB of memory. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format.

#### Step 1: Download the latest software

- Connect a USB flash drive to your computer.
- 2 In your web browser, go to www.philips. com/support.
- 3 At the Philips Support website, find your product and locate the Software and drivers.
  - → The software update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the software update file in the root directory.
  - → The files are extracted under the **UPG** folder of your USB flash drive.
- **6** Disconnect the USB flash drive from your computer.

#### Step 2: Update the software

#### Caution

- Do not switch off the home theater or remove the USB flash drive during the update.
- 1 Connect the USB flash drive containing the downloaded file to your home theater.
  - Make sure that no disc is inside the disc compartment.

- 2 Press ♠ (Home).
- 3 Select [Setup], and then press 确认.
- 4 Select [Advanced] > [Software update] > [USB].
- 5 Follow the onscreen instructions to confirm the update.
  - → Update process takes about 5 minutes to complete.
  - → Once complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it.

## Update software through the Internet

- 1 Connect your home theater to a home network with a high-speed Internet access (see 'Connect and set up a home network' on page 15).
- Press ♠ (Home).
   Select [Setup], and
- **3** Select **[Setup]**, and then press 确认.
  - Select [Advanced] > [Software update] > [Network].
    - If an upgrade media is detected, you are prompted to start or cancel the update.
    - Downloading of the upgrading file may take long, depending on your home network condition.
- 5 Follow the onscreen instructions to confirm the update.
  - → Update process takes about 5 minutes to complete.
  - → Once complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it.

## Update the onscreen help

If the current version of the onscreen help is lower than the latest version available on www. philips.com/support, download and install the latest onscreen help (see 'Check software version' on page 31).

#### What you need

- A USB flash drive that is FAT or NTFSformatted, with at least 35MB of memory. Do not use a USB hard drive.
- A computer with internet access.
- An archive utility that supports the ZIP file format.

## Step 1: Download the latest onscreen help

- 1 Connect a USB flash drive to your computer.
- 2 In your web browser, go to www.philips. com/support.
- 3 At the Philips support website, find your product and click on User manuals, and then locate the User Manual Upgrade Software.
  - → The help update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the help update file in the root directory.
  - → A file named 'HTSxxxxeDFU.zip' is extracted under the UPG folder of your USB flash drive, 'xxxx' being the model number of your home theater.
- 6 Disconnect the USB flash drive from your computer.

#### Step 2: Update onscreen help

#### Caution

• Do not switch off the home theater or remove the USB flash drive during the update.

- 1 Connect the USB flash drive containing the downloaded file to your home theater.
  - Make sure that no disc is inside the disc compartment.
- 2 3 Press A (Home).
- Enter **338** on the remote control.
- **4** Follow the onscreen instructions to confirm the update.
- 5 Disconnect the USB flash drive from the home theater.

## 8 Wall mount your home theater

Before you mount your home theater on the wall, read all safety precautions. (see 'Safety' on page 5)


### Wall mount



- Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage. If you have any query, contact Philips Consumer Care in your country.
- Secure the wall mount to a wall that can support the combined weight of the product and the wall mount bracket.

#### Screw length/diameter

Depending on the type of wall mounting this wall mount bracket, make sure that you use screws of a suitable length and diameter.

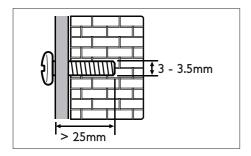

For information about how to wall mount your home theater, see the wall mount guide.

# 9 Product specifications

#### Note

• Specifications and design are subject to change without notice.

#### Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

Country	DVD	BD
Europe, United Kingdom		
Asia Pacific, Taiwan, Korea		
Latin America		
Australia, New Zealand		
Russia, India		0
China		0

#### Media formats

 AVCHD, BD, BD-R/ BD-RE, BD-Video, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX Plus HD media, USB storage device

#### File formats

- Audio:
  - .aac, .mka, .mp3, .wma, .wav, .mp4, .m4a, .flac, .ogg
  - .ra (Available only in Asia Pacific and China)
- Video:
  - .avi, .divx, .mp4, .m4v, .mkv, .m2ts, .mpg, .mpeg, .flv, .3gp
  - .asf, .wmv, .rmvb, .rm, .rv (Available only in Asia Pacific and China)
- Picture: .jpg, .jpeg, .gif, .png

#### Audio formats

Your home theater supports the following audio files.

Extension		Audio	Bit rate
	tainer	codec	
.mp3	MP3	MP3	Upto 320 kbps
.wma	ASF	WMA	Upto 192 kbps
		WMA Pro	Upto 768 kbps
.aac	AAC	AAC, HE- AAC	Upto 192 kbps
.wav	WAV	PCM	27.648 Mbps
.m4a	MKV	AAC	192 kbps
.mka	МКА	PCM	27.648 Mbps
		Dolby	640 kbps
		Digital	
		DTS core	1.54 Mbps
		MPEG	912 kbps
		MP3	Upto 320 kbps
		WMA	Upto 192 kbps
		WMA Pro	Upto 768 kbps
		AAC, HE- AAC	Upto 192 kbps
.ra	RM	AAC, HE- AAC	Upto 192 kbps
		Cook	96469 bps
.flac	FLAC	FLAC	Upto 24 bps
.ogg	OGG	Vorbis	Variable bit rate, maximum block size 4096

Extension	Con-	Audio	Bit rate
	tainer	codec	
		FLAC	Upto 24 bps
		OGGPCM	No limit
		MP3	Upto 320 kbps
-	•		

#### Video formats

If you have a high definition TV, your home theater allows you to play your:

- video files with a resolution of 1920  $\times$  1080 pixels (except DivX, which has a resolution of 77220  $\times$  576) and frame rate of 6  $\sim$  30 frames per second.
- photo files with a resolution of 18 M pixels.

#### .avi files in AVI container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital, DTS core, MP3, WMA	DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x	10 Mbps max
	MPEG 1, MPEG 2	40 Mbps
	MPEG 4 SP / ASP	38.4 Mbps
	H.264/AVC upto HiP@5.1	25 Mbps
	WMV9	45 Mbps

#### .divx files in AVI container

Audio codec	Video codec	Bit rate
PCM, Dolby	DivX 3.11,	10
Digital, MP3,	DivX 4.x, DivX 5.x,	Mbps
WMA	DivX 6.x	max

#### .mp4 or .m4v files in MP4 container

Video codec	Bit rate
MPEG 1,	40 Mbps
MPEG 2	
	MPEG 1,

MPEG 4 ASP	38.4
	Mbps
H.264/AVC	25 Mbps
HiP@5.1	

#### .mkv files in MKV container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital, DTS core, MPEG, MP3, WMA, AAC, HE- AAC, DD+	DivX Plus HD	30 Mbps
	MPEG 1, MPEG 2	40 Mbps
	MPEG 4 ASP	38.4 Mbps
	H.264/AVC HiP@5.1	25 Mbps
	WMV9	45 Mbps

#### .m2ts files in MKV container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital,	MPEG 1,	40 Mbps
DTS core, MPEG,	MPEG 2	
MP3, WMA, AAC,		
HE-AAC, DD+		
	MPEG 4 ASP	38.4
		Mbps
	H.264/AVC	25 Mbps
	HiP@5.1	
	WMV9	45 Mbps

#### .asf and .wmv files in ASF container

Audio codec	Video codec	Bit rate
Dolby Digital, MP3, WMA, DD+	MPEG 4 ASP	38.4 Mbps
	H.264/AVC HiP@5.1	25 Mbps
	WMV9	45 Mbps

#### .mpg and .mpeg files in PS container

Audio codec	Video codec	Bit rate
PCM, DTS core,	MPEG 1,	40
MPEG, MP3	MPEG 2	Mbps

#### .flv files in FLV container

Audio codec	Video codec	Bit rate
MP3, AAC	H.264/AVC upto HiP@5.1	25 Mbps
	H.263	38.4 Mbps
	On2VP6	40 Mbps

#### .3gp files in 3GP container

Audio codec	Video codec	Bit rate
AAC, HE- AAC	MPEG 4 ASP	38.4 Mbps
	H.264/AVC upto HiP@5.1	25 Mbps max

#### .rm, .rv, and .rmvb files in RM container (Available only in Asia Pacific and China)

Audio codec	Video codec	Bit rate
AAC, COOK	RV30, RV40	40 Mbps

## Amplifier

- Total output power:
  - HTB7150: 480W RMS (+/- 0.5 dB, 30% THD) / 400W RMS (+/- 0.5 dB, 10% THD)
  - HTB9150: 600W RMS (+/- 0.5 dB, 30% THD) / 500W RMS (+/- 0.5 dB, 10% THD)
- Frequency response: 20 Hz-20 kHz / ±3 dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX: 600 mV
  - Music iLink: 300 mV

## Video

- Signal system: PAL / NTSC
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p24

### Audio

- S/PDIF Digital audio input:
   Optical:TOSLINK
- Sampling frequency:
  - MP3: 32 kHz, 44.1 kHz, 48 kHz
  - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 32 kbps 320 kbps
  - WMA: 48 kbps 192 kbps

### Radio

- Tuning range:
  - Europe/Russia/China: FM 87.5-108 MHz (50 kHz)
  - Asia Pacific/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 180 Hz-12.5 kHz / ±3 dB

## USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: USB Mass Storage Class (MSC)
- File system: FAT16, FAT32, NTFS

## Main unit

- Power supply:
  - Europe/China: 220-240 V~, 50 Hz
  - Latin America/Asia Pacific: 110-127 V/220-240 V~, 50-60 Hz
  - Russia/India: 220-240 V~, 50 Hz
- Satellite speakers:
  - HTB7150: 4 × 2.5" woofer speakers
  - **HTB9150**: 6 × 2.5" woofer speakers
  - Power consumption:
    - HTB7150: 80 W

- HTB9150: 85 W
- Standby power consumption: 0.2 0.25 W
- Dimensions (WxHxD): 927 x 150 x 87 mm
- Weight:
  - HTB7150: 4.6 KG
  - HTB9150: 5.0 KG

### Subwoofer

- Impedance: 4 ohm
- Speaker drivers: 1 x 6.5" woofer
- Dimensions (WxHxD): 196 x 392 x 300 mm
- Weight:
  - HTB7150: 4.5 KG
  - HTB9150: 4.8 KG

## Remote control batteries

• 2 × AAA-R03-1.5 V

### Laser

- Laser Type (Diode): InGaN/AIGaN (BD), AIGaInP (DVD/CD)
- Wave length: 405 +7 nm/-7 nm (BD), 655 +10 nm/-10 nm (DVD), 790 +10 nm/-20 nm (CD)
- Output power (Max. ratings): 20 mW (BD), 6 mW (DVD), 7 mW (CD)

# 10 Troubleshooting

### Warning

• Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www. philips.com/support.

## Main unit

The buttons on the home theater do not work.

- Disconnect the home theater from the power supply for a few minutes, then reconnect.
- Make sure that the touch buttons surface is not in contact with any conductive material, like water drop, metal, etc.

## Picture

#### No picture.

• Make sure that the TV is switched to the correct source for the home theater.

#### No picture on a TV connected through HDMI.

- Make sure that you use a High Speed HDMI cable to connect the home theater and TV. Some Standard HDMI cables do not display properly for some images, 3D video, or Deep Color.
- Make sure that the HDMI cable is not faulty. If it is faulty, replace it with a new cable.
- Press ♠ (Home) and then 731 on the remote control to restore the default picture resolution.

• Change the HDMI video setting, or wait for 10 seconds for auto recovery.

#### Disc does not play high-definition video.

- Make sure that the disc contains highdefinition video.
- Make sure that the TV supports highdefinition video.
- Use an HDMI cable to connect to the TV.

### Sound

#### No sound from home theater speakers.

- Connect the audio cable from your home theater to your TV or other devices. However, you do not need a separate audio connection when the home theater and TV are connected through an HDMI ARC connection.
- Set up the audio for the connected device.
- Reset your home theater to its factory settings, and then switch it off and switch on again.
- On your home theater, press SOURCE repeatedly to select the correct audio input.

#### Distorted sound or echo.

 If you play audio from the TV through the home theater, make sure that the TV is muted.

### Audio and video are not synchronized.

 1) Press Ⅲ 声音设置 . 2) Press the Navigation buttons (left/right) to select. AUD SYNC, and then press 确认. 3) Press the Navigation buttons (up/down) to synchronize the audio with the video.

### Play

#### Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 35).

- Make sure that the home theater supports the region code of the disc.
- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized.

### Cannot play a DivX file.

- Make sure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Make sure that the DivX file is complete.

# DivX or RMVB/RM subtitles do not display correctly.

- Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 19).
- Select the correct character set: 1) Press . 2) Select **[Character set]**. 3) Select the supported character set. 4) Press 确认.

# Cannot read the contents of a USB storage device.

- Make sure that the format of the USB storage device is compatible with the home theater.
- Make sure that the file system on the USB storage device is supported by the home theater.

### 'No entry' or 'x' sign appears on the TV.

• The operation is not possible.

#### EasyLink does not work.

- Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is turned on (see 'Set up EasyLink (HDMI-CEC control)' on page 14).
- For TVs from different manufacturers, the HDMI CEC could be called differently. Check theTV user manual on how to enable it.

# When you switch on the TV, the home theater automatically switches on.

 This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

### Cannot access BD-Live features.

- Make sure that the home theater is connected to the network. Use a wired network connection or wireless network connection.
- Make sure that the network is set up. Use a wired network installation or wireless network installation.
- Make sure that the Blu-ray disc supports BD-Live features.
- Clear memory storage.

# Cannot play video or photos from an iPod or iPhone on the TV.

- Browse and select videos and photos from the iPod or iPhone screen, and play them on your TV.
- Make sure that the iPod or iPhone software has not been tampered with or illegally modified.

# Cannot view pictures from an iPod or iPhone on the TV.

- Connect a yellow composite cable to the iPod dock and the TV.
- Switch the TV to the **AV/VIDEO** source (corresponding to the yellow composite cable).
- Press the play button on the iPod or iPhone to start a slideshow.
- Make sure that the iPod or iPhone software has not been tampered with or illegally modified.

### My 3D video played in 2D mode.

- Make sure that your home theater is connected to a 3DTV through an HDMI cable.
- Make sure that the disc is a Blu-ray 3D disc, and the Blu-ray 3D video option is on.

# TV screen is black when you play a Blu-ray 3D video or a DivX copy protected video.

- Make sure that the home theater is connected to the TV through an HDMI cable.
- Switch to the correct HDMI source on the TV.

## Network


### Wireless network distorted or not found.

- Make sure that the wireless network is not disturbed by microwave ovens, DECT phones, or other neighboring Wi-Fi devices.
- Place the wireless router and the home theater within five meters of each other.
- If the wireless network does not work properly, try a wired network installation.

# 11 Notice

This section contains the legal and trademark notices.

# Copyright



This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

#### Cinavia notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at http://www.cinavia.com. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

# Open source software

Philips Electronics Singapore Pte Ltd hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open. source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven. The Netherlands". If you do not receive timely confirmation of your letter, please email to the email address above. The texts of the licenses and acknowledgements for open source software used in this product are included in the user manual.

# RMVB end user agreement (Asia Pacific and China only)

#### Notes to End User:

By using this product with RealNetworks software and services, the end user agrees to the following terms of REALNETWORKS, INC:

- End User may only use the software for private, non-commercial use in accordance with the terms of RealNetworks EULA .
- End User is not allowed to modify, translate, reverse engineer, decompile, dissemble or use other means to discover the source code or otherwise replicate the functionality of the Real Format Client Code, except to the extent that this restriction is expressly prohibited by applicable law.
- RealNetworks Inc. disclaims all warranties and conditions other than those set forth

in this Agreement which are in lieu of all other warranties, whether express and implied, including but not limited to any implied warranties or conditions of merchantability and fitness for a particular purpose; and effectively exclude all liability for indirect, special, incidental and consequential damages, such as but not limited to lost profits.

# Compliance

# € € 0560 ①

This product complies with the radio interference requirements of the European Community.



\* Wireless and Ethernet LAN functions are authorized for indoor use only.

Hereby, Philips Consumer Lifestyle, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the EC declaration of Conformity is available in the Portable Document Format (PDF) version of the user manual at www. philips.com/support.

# Trademarks



"Blu-ray 3D" and "Blu-ray 3D" logo are trademarks of Blu-ray Disc Association.



#### BONUSVIEW™

'BD LIVE' and 'BONUSVIEW' are trademarks of Blu-ray Disc Association.



'DVD Video' is a trademark of DVD Format/ Logo Licensing Corporation.



Java and all other Java trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio | Essential is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.



DivX °, DivX Certified °, DivX Plus ° HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

ABOUT DIVX VIDEO: DivX ° is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified ° device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified ° device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

# 

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



(Available only in Asia Pacific and China) RealNetworks, Real, the Real logo, RealPlayer, and the RealPlayer logo are trademarks or registered trademarks of RealNetworks, Inc.



# 12 Language code

Abkhazian	6566
Afar	6565
Afrikaans	6570
Amharic	6577
Arabic	6582
Armenian	7289
Assamese	6583
Avestan	6569
Aymara	6589
Azerhaijani	6590
Bahasa Melayu	7783
Bashkir	6665
Belarusian	6669
Bengali	6678
Bihari	6672
Bislama	6673
Bokmål, Norwegian	7866
Bosanski	6683
Brezhoneg	6682
Bulgarian	6671
Burmese	7789
Castellano, Español	6983
Castenano, Espanor	
Catalán	6765
Chamorro	6772
Chechen	6769
Chewa; Chichewa; Nyanj	a 7889
中文	9072
Chuang; Zhuang	9065
Church Slavic; Slavonic	6785
Chuvash	6786
Corsican	6779
Česky	6783
Dansk	6865
Deutsch	6869
Dzongkha	6890
English	6978
Esperanto	6979
Estonian	6984
Euskara	6985
Ελληνικά	6976
Faroese	7079
Français	7082
Frysk	7089
Fijian	7074
Gaelic; Scottish Gaelic	7168
Gallegan	7176
Georgian	7565
Gikuyu; Kikuyu	7573
Guarani	7178
Gujarati	7185
Hausa	7265
Herero	7290
Hindi	7273
Hiri Motu	7279
Hrwatski	6779
Ido	7379
Interlingua (Internationa	
Interlingue	7365
Inuktitut	7385

Inupiaq	7375
lrish	7165
lslenska	7383
Italiano	7384
lvrit	7269
apanese	7465
avanese	7486
Kalaallisut	7576
Kannada	7578
Kashmiri	7583
Kazakh	7575
Kernewek	7587
Khmer	7577
Kinyarwanda	8287
Kirghiz	7589
Komi	7586
Korean	7579
Kuanyama; Kwanyama	7574
Kurdish	7585
Lao	7679
Latina	7665
Latvian	7686
Letzeburgesch;	7666
Limburgan; Limburger	7673 7678
Lingala Lithuanian	7684
	7666
Luxembourgish; Macadapian	
Macedonian Malagasy	7775 7771
	7285
Magyar Malayalam	7776
Malayalam Maltese	7784
Manx	7186
Maori	7773
Marathi	7782
Marshallese	7772
Moldavian	7779
Mongolian	7778
Nauru	7865
Navaho; Navajo	7886
Ndebele, North	7868
Ndebele, South	7882
Ndonga	7871
Nederlands	7876
Nepali	7869
Norsk	7879
Northern Sami	8369
North Ndebele	7868
Norwegian Nynorsk;	7878
Occitan; Provencal	7967
Old Bulgarian; Old Slavonic	6785
Oriya	7982
Oromo	7977
Ossetian; Ossetic	7983
Pali	8073
Panjabi	8065
Persian	7065
Polski	8076
Português	8084

Pushto	8083
Russian	8285
Quechua	8185
Raeto-Romance	8277
Romanian	8279
Rundi	8278
Samoan	8377
Sango	8371
Sanskrit	8365
Sardinian	8367
Serbian	8382
Shona	8378
Shqip	8381
Sindhi	8368
Sinhalese	8373 8373
Slovensky Slovenian	8375
Somali	8379
Sotho; Southern	8384
South Ndebele	7882
Sundanese	8385
Suomi	7073
Swahili	8387
Swati	8383
Svenska	8386
Tagalog	8476
Tahitian	8489
Tajik	8471
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga (Tonga Islands)	8479
Tsonga	8483
Tswana	8478
Türkçe	8482
Turkmen	8475
Twi	8487
Uighur	8571
Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapuk	8679
Walloon Welsh	8765 6789
Wolof	6789 8779
Xhosa	8779
Yiddish	8973
Yoruba	8979
Zulu	9085
2010	/000

# 13 Index

# 2

-	
2nd audio language	18
2nd subtitle language	18

# 3

18
6
18

# Α

29
37
12
35
13
28
20
29
28
29
29

# В

batteries	38
BD-Live	18
Blu-ray	17
Bonus View	18
brightness	29

# С

change password	29
character set	19
clear BD-Live memory	18
connect to TV	12
connectors	10
control buttons (disc)	17
control buttons (USB)	17
customer support	4

# D

6	
data files	19
deep color	28
default settings	30
device name	16
disc language	28
disc menu	28
display panel	29
disposal	6
DivX	19

# Е

Easylink (HDMI-CEC)	14
eject disc	9
enhanced audio	29
environment	6

# F

1	
factory settings	30
FAQs	4
file formats	35

# Н

11	
HDMIARC	12
HDMI audio	28
HDMI-CEC	14
home menu	17
home network	15

## Ī

5
3
3

## L

language code	45

# Μ

main unit	9
media formats	35
media sharing	25
menu language	28

21

# Ν

network	15
night mode	28

# 0

one-touch play	14
one-touch standby	14
options	20

# Ρ

•	
parental control	29
PBC (play back control)	29
picture options	21
picture resolution	28
picture settings	28
picture-in-picture	18
play disc	17
play from iPod	23
play from PC	26
play USB storage device	20
play video and slideshow from iPod	23
power settings	29
predefined sound mode	27
preference	28

# R

recycling	6
region codes	35
remote control	8
repeat	20

# S

•	
shuffle	20
sleep timer	29
slide animation	21
software update	31
software version	31
sound	26
speaker specifications	35
subtitle language	28
subtitle position	29
surround sound	27

synchronize picture and sound

# Т

troubleshooting (network)	41
troubleshooting (picture)	39
troubleshooting (play)	39
troubleshooting (sound)	39
tuning grid	22

# U

update onscreen help (user manual)	32
update software (through Internet)	32
USB storage device	20
user manual	4

## V

VCD	29
video connection (composite video)	13
video connection (HDMI ARC)	12
video connection (standard HDMI)	12
video formats	37
video options	20
video settings	28
VOD code (DivX)	20

## W

watch 3D	18
wired network	15
wireless network	16



Specifications are subject to change without notice  $\circledcirc$  2012 Koninklijke Philips Electronics N.V. All rights reserved.

HTB7150\_93\_UM\_e7

