




Philips  
Wireless Microphones

SBCMC8650

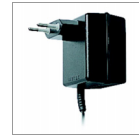

## 30m Wireless

This wireless microphone combines performance with freedom of movement to liven up any occasion

### Bring the occasion to life

- Omni-directional design picks up sound from all directions

### Always ready

- Choose from 2 channels to minimize interference
- Auto Mute means no more hiss when there's no signal
- Wireless technology that gives you freedom of movement

# PHILIPS

# Specifications

## Sound

- Frequency response: 10 - 10 000 Hz
- Impedance: 600
- Polar pattern: Omni directional
- Sensitivity microphone: -55 dB +/- 3 dB
- Type: Electret

## Tuner/Reception/Transmission

- Effective range: 30 m
- Frequency range: 863.3 - 863.7 MHz
- Modulation: FM

## Connectivity

- Connector: 3.5 - 6.3 mm mono

## Convenience

- Operating time: 12 hours

## Power

- Battery type: 6LR61
- Adaptor type: 12V 200mA
- Battery voltage: 9 V
- Number of batteries: 1

## Inner Carton

- EAN: 87 10895 81551 2
- Number of consumer packagings: 2
- Gross weight: 1.875 kg
- Inner carton (L x W x H): 18.1 x 15.9 x 26.4 cm
- Nett weight: 1.7 kg
- Tare weight: 0.175 kg

## Outer Carton

- EAN: 87 10895 81552 9
- Number of consumer packagings: 8
- Gross weight: 8.04 kg
- Outer carton (L x W x H): 38.4 x 33.3 x 29 cm
- Nett weight: 4.936 kg
- Tare weight: 3.104 kg

## Packaging dimensions

- EAN: 87 10895 81550 5
- Number of products included: 1
- Packaging type: Carton
- Packaging dimensions (W x H x D): 17.1 x 27.7 x 7.5 cm
- Gross weight: 0.85 kg
- Nett weight: 0.617 kg
- Tare weight: 0.233 kg

# Highlights

## Omni-directional design

This microphone's sensor is equally sensitive to sound from all directions.

## 2 transmission channels

With a choice of two transmission channels your listening pleasure is protected because you can easily switch to the one with the best reception.

## Auto mute

Should you walk outside the operational range or the reception quality temporarily drops, the auto mute simply mutes the headphone's audio output and prevents you hearing the discomforting hissing noise. Once you're back in range, the audio is automatically restored.

## Wireless

Wireless systems using an ultra high frequency (UHF) signal carrier, ensure clear, sharp reception, so you will never have to be restricted by cables again. Walk and sit where you like, and forget about tripping over your headphone's cable.



Issue date 2014-02-06

Version: 3.1.6

12 NC: 9082 100 02901  
EAN: 87 10895 81550 5

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)