




Philips BeNear  
Cordless phone with  
answering machine

**6000-series**

Black

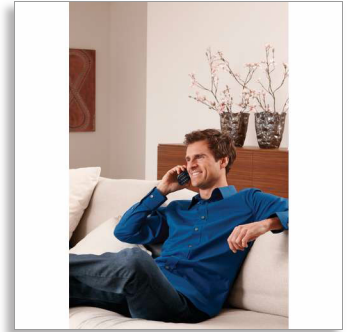

**CD6951B**

## Bringing people closer

Sounds as refined as it looks

The elegant and chic Philips 6000 series delivers stunning sound reproduction of HQ-Sound. Enjoy a host of great features like an extra-large, high-contrast colour TFT display and an in-built answering machine.

### Exceptional sound

- HQ-Sound: high quality acoustic engineering for superb sound
- MySound profiles to match your sound preference
- Full-duplex echo cancellation ensures a smooth conversation
- Optimised antenna layout for great reception in any room
- Handset speakerphone allows you to talk hands-free

### Experience true convenience

- High contrast, 6.1 cm (2.4") TFT colour display
- Icon-based menu for easy navigation
- Up to a 60 min. message on your answering machine
- Up to 22 hours talk time
- Save up to 200 of your favourite contacts in your phonebook

### Eco-conscious product

- 60% reduction of radiation when ECO mode is activated
- Low power consumption: < 0.55 W in standby mode

**PHILIPS**  
sense and simplicity

Cordless phone with answering machine  
6000-series Black

# Highlights

## HQ-Sound




HQ-Sound: high quality acoustic engineering for superb sound reproduction. We build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything — high quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

## Full-duplex echo cancellation



Natural conversation does not involve taking turns — there is always some natural overlap. Now, thanks to our full-duplex echo cancellation, you can hear perfectly, even if you are both talking at the same time.

## MySound profiles

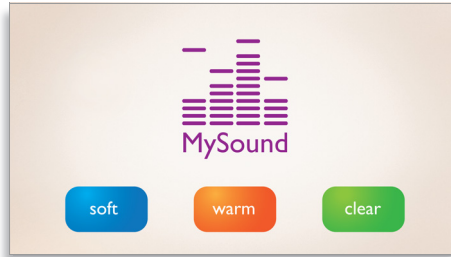

Sound perception is subjective, and everyone has their own listening preference. MySound brings personality back to every conversation by allowing you to choose the audio profile that best matches your sound preferences: Clear—to make voices sound crisper and clearer; Soft—for friendly, softer tones; Warm—to make voices sound welcoming and warm.

## Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.


## 200-name phone book



Always have the phone numbers of your loved ones available: Save up to 200 names in your phonebook.

CD6951B/22

## 6.1 cm (2.4") TFT colour display

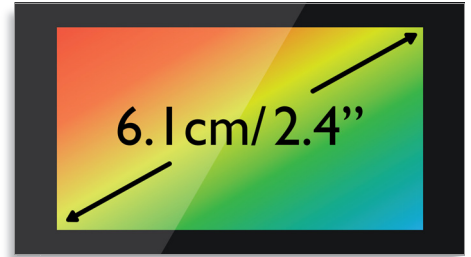

High contrast, 6.1 cm (2.4") TFT colour display

## Icon menu



With an easy-to-use, modern icon menu, you can find everything you need at a glance.

## Up to 60 min. recording



With up to 60 minutes of recording time, you'll never miss an important message.

## Optimised antenna layout



Our optimised antenna layout ensures strong and stable reception, even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

# Specifications

## Sound

- HQ-Sound
- Sound Profile: MySound
- Volume control on handset
- Ringtones on handset: 10 polyphonic HQ + 5 standard

## Picture/Display

- Display size: 6.1 cm/2.4"
- Display type: TFT colour 256,000
- Backlight: Yes
- Backlight colour: White

## Answering Machine

- Recording time capacity: up to 60 minutes with both OGM+ICM with bit-rate 4 kbps with VBR
- Pre-recorded OGM
- Message counter on base: Amber counter (2 x 7 segments)
- Answering machine control: from base and handset
- Loud speaker on base

## Convenience

- Menu structure in the handset: Icon Menu
- Speakerphone — talk hands-free
- Personalisation: Silence mode and Night mode
- Call barring: Restrict the phone from making specific outgoing calls
- Signal strength indicator: 3- bar indicator
- Battery level indicator: 5- bar battery icon
- Intercom — multiple handsets
- Room monitoring
- Date/Time display
- Alarm Clock
- Event light on the handset
- Battery charge indication
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting, Caller ID, Microphone mute, Missed Calls, Received Calls
- Key tone on/off
- Auto Registration

- Auto hang up
- Multi-base capability: 1
- Multi-handset capability: Up to 5
- Number of keys: 22
- Backlit keypad: White
- Enlarge dialling digit
- Base Station keys: Paging key
- Up to 300 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Range: Open field <300 m; indoor <50 m
- Up to 22 hrs talk time

## Memory Capacity

- VIP Caller Identification
- Phonebook: 200 names and numbers
- Redial List Capacity: 20 entries
- Call log entries: 50 entries
- Phonebook store in the base

## Power

- Battery capacity: 600 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240 V ~50/60 Hz
- Power Consumption: < 0.55 W

## Security

- Transmission encryption: Yes

## Network Features

- Compatible: GAP
- Network service menu: Available only for Operator

## SAR Value

- Philips handsets: <0.1 W/kg

## Eco Design

- EcoMode: automatic and manual



Issue date 2013-03-13

Version: 2.0.7

12 NC: 8670 000 80104  
EAN: 87 12581 61459 1

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)