



## True Wireless Headphones

- Detailed, natural sound
- Noise Canceling Pro
- Clearer calls on the go
- Reliable in-ear fit

TAA5508BK/00

# Your workout essential

Gym to street, these noise canceling true wireless sports headphones will motivate your moves! Music and podcasts sound great, and you'll be heard clearly if you stop to take a call. A reliable in-ear fit keeps the earbuds nicely in place.

## Benefits

### Detailed, energizing sound

- Immerse freely. Noise Canceling Pro
- Clearer calls on the go. They'll hear you, not the noise
- Warm, detailed, natural. Philips sound signature
- 8 mm graphene-coated drivers

### For your kind of active life

- Reliable in-ear fit. Move it, don't lose it
- Better connectivity and sound. Next-generation Bluetooth\*
- Get out there. IPX5 water resistant

- Textured silicone ear-tips and reflective earbuds


### Seamlessly brilliant

- No worries. Up to 28 hours play time with the case
- Philips Headphones app. Control noise canceling and more
- Multipoint, earbud touch controls, and voice assistants
- Quick charge for 5 minutes and get an extra hour

# PHILIPS

## Features

### Noise Canceling Pro

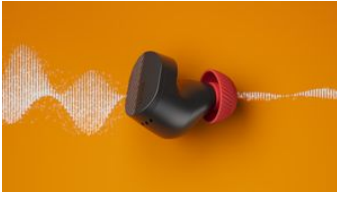

Busy gym? Windy park? Adaptive noise cancellation quickly reacts to your surroundings to suppress external noise, including wind, in real time. If your run takes you near busy roads, you can tap an earbud to activate Awareness Mode and let outside sounds in.

### Clearer calls on the go




When you're on a call, a dedicated mic picks up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, not the traffic or the chatter of people standing next to you!

### Reliable in-ear fit



Doesn't matter how you move, these buds stay put. The silicone ear-tips feature a textured grip pattern, which helps the earbuds stay in your ears and makes them easy to hold with sweaty hands. The surface of the earbuds is reflective, which can help with visibility at night.

### Next-generation Bluetooth

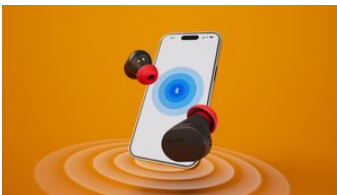

These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec to give you a steadier connection and noticeably better sound. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag if watching movies or gaming.\*

## Specifications

[field not found 'disclaimer\_text']

### Sound

Impedance	16 Ohm
Speaker diameter	8 mm
Sensitivity	110 dB (1K Hz)
Frequency range	20 - 20,000 Hz
Maximum power input	5 mW
Driver type	Graphene coated

### IPX5 water protection



An IPX5 rating means these headphones don't mind a drop of rain or a downpour, so they'll never give you an excuse to stay on the couch! If you get a sweat on in the gym, the headphones won't mind that either.

### 28 hours play time with case



Don't want to worry about daily charging? You get 7 hours play time and an extra 21 hours from the small charging case. Pop the earbuds back in and they'll recharge fully in 2 hours: if you need a quick boost, just 5 minutes gives you an extra hour. The case can be charged via USB-C.

### Philips sound signature

Go big on the tunes that get you going! You get detailed, energizing sound with rich bass as the graphene-coated drivers reproduce every sparkling high and weighty low. Android or iOS, you'll enjoy all the immersion you need to keep your energy up.

### Philips Headphones app

You can use the Philips Headphones app to customize noise canceling, turn auto wind noise reduction off, and adjust the level of transparency when using Awareness Mode. An equalizer lets you fine-tune your sounds, and you can keep your headphone's software up to date via the app too.

### Multipoint connectivity

Bluetooth multipoint lets you connect to two devices at once: great if you're streaming from a phone and getting training alerts from your smartwatch. Touch controls on the earbuds cover calls, music playback, and more. Siri and the Google Assistant are both supported.

### ANC features

ANC (Active Noise Canceling)	Yes
ANC technology	Hybrid, ANC Pro
Awareness mode	Yes
Adaptive ANC	Yes
Auto wind noise cancelation	Yes

## Telecommunication

Microphone for call 2 AI mics

Voice assistant support Yes

## Connectivity

Bluetooth version 5.3  
Supported codec AAC  
SBC  
LC3  
Maximum range Up to 10 m  
Bluetooth profiles A2DP  
AVRCP  
HFP  
Multipoint connection Yes  
Type of wireless transmission Bluetooth  
Wireless Yes

## Accessories

Eartips 3 pairs(S/M/L)  
Charging cable USB-C cable, 200 mm  
Others 1 pcs lanyard  
Quick Start Guide Yes

## Convenience

Google fast pair Yes  
Philips Headphones app support Yes  
Firmware updates possible Yes  
Water resistance IPX5  
Type of controls Touch  
Mono mode for TWS Yes

## Dimensions

Earbud dimension(WxDxH) 2.00 x 2.57 x 2.14 cm  
Charging case dimension(WxDxH) 5.49 x 2.90 x 4.15 cm  
Total weight 0.045 kg

## Design

Color Black  
Ear fitting In-ear  
Ear coupling material Silicone  
In-ear fitting type Silicone ear tip

## Packaging dimensions

Packaging type Carton  
Number of products included 1  
Type of shelf placement Hanging  
Height 13.02 cm  
Width 11.4 cm  
Depth 5.37 cm  
Gross weight 0.132 kg  
Nett weight 0.075 kg  
Tare weight 0.057 kg  
EAN 48 95229 13147 7

## Power

Music play time (ANC on) 7 + 21 hr  
Music play time (ANC off) 8 + 23 hr  
Battery type(Earbud) Lithium Polymer (Built-in)  
Battery capacity(Earbud) 53 mAh  
Battery type(Charging case) Lithium Polymer (Built-in)  
Battery capacity(Case) 600 mAh  
Battery life standby time 200 hr  
Charging time 2 hr  
Fast charging time 5 mins for 1 hr  
Number of batteries 3 pcs  
Battery weight (Total) 10.1 g

## Outer Carton

Number of consumer packagings 24  
Length 34.3 cm  
Width 29.8 cm  
Height 30.6 cm  
Gross weight 4.544 kg  
Nett weight 1.8 kg  
Tare weight 2.744 kg  
GTIN 1 48 95229 13147 4

## Voice assistant

Voice assistant compatible Apple Siri  
Google Assistant  
Voice assistant activation Manual

## Inner Carton

Number of consumer packagings 3  
Length 16.2 cm  
Width 14 cm  
Height 13.8 cm  
Gross weight 0.49 kg  
Nett weight 0.225 kg  
Tare weight 0.265 kg  
GTIN 2 48 95229 13147 1

## UPC

UPC 8 40063 20307 5

\* Requires a software update. The Philips Headphones app will notify you when the latest software version is available.



data subject to change  
2023, December 8

Version: 5.0.1  
EAN: 4895229131477

© 2023 Koninklijke Philips N.V.  
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)