




Philips  
Professional DJ  
headphones

Professional DJ headphones

Over-ear  
Deluxe breathable ear cushions  
Full folding

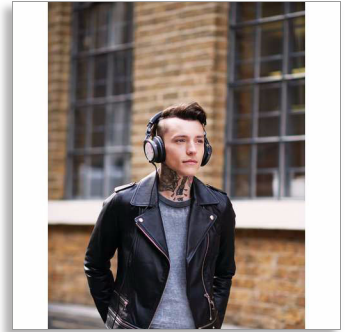

A3PRO



# Professional DJ Headphones

in collaboration with Armin van Buuren

Created in collaboration with 5-time world's best DJ award winner, Armin van Buuren, the A3PRO headphones are made for the electronic music life. On the move or by the mixing desk these headphones will add power and vibrance to every tune.

## For DJs and audio professionals

- Source-accurate sound for as-recorded music enjoyment
- 50mm drivers handling 3000mW for distortion-free music
- Superior sound isolation for use in high noise environments
- Closed-back and isolating cushions for total sound isolation

## Comfortable for long sessions

- 90 degree swivel ear-shells for DJ monitoring
- Deluxe breathable ear cushions for comfort and ergonomic fit
- Soft silicone headband for long-wearing comfort

## Functional and durable

- Ultra compact folding design for easy storing and carrying
- Coiled cable stretches to 1.8m for more freedom of movement

## Ideal DJ accessories

- 6.3mm threaded adaptor connects to any music equipment
- Twist-and-click detachable easy replacement ear cushions

# PHILIPS

Professional DJ headphones  
Professional DJ headphones Over-ear, Deluxe breathable ear cushions, Full folding

A3PRO/00

## Highlights

### 50mm drivers handling 3000mW



High powered 50mm neodymium drivers, engineered for 3000mW of power deliver clear, dynamic and distortion-free music even at high volumes or with high audio input power.

### 6.3mm threaded adapter

The Philips professional DJ headphones come with a 6.3mm threaded adapter that can plug into anything. Simply slip it over your headphones connector and plug it into your DJ turntable for unbelievable sound right from your decks. Do the same with your home Hi-Fi for a home music experience like no other.

### Closed-back design



A closed-back architecture maximizes bass and helps you listen to your music as loud as you want without leaking, while supra-aural cushions seal the gap between your ears and the headphones for superior sound isolation.

### Coiled cable expands to 1.8m

Enjoy greater freedom of movement with a 1.4m long cable with a coiled section that can extend to 1.8m. The coil also reduces the strain on parts caused by pulling, while providing extra extension without the tangled mess of cables.

### Detachable ear cushions



Bayonet mount ear cushions easily twist and click into place with the same secure mechanism of a camera lens. The soft ear cushions provide long-wearing comfort.

### Source-accurate sound

Source-accurate sound reproduction brings you sound as it was recorded in the booth, without distortion or alteration, so the sound you hear is true to the original.

### Superior sound isolation

Soft sealing cushions isolate your ears from the outside world, so you can focus on the beat without distraction.

### Ultra compact folding design

Designed to give you the best experience on the go, your Philips professional DJ headphones can be folded away for perfect portability and easy storage. Smart design and careful selection of components, like well-built hinges, allow the headphone parts to be maneuvered with ease.

### 90 degree swivel ear-shells




Designed with the professional DJ in mind, the earpieces on these headphones can each rotate 90° – for convenient one-ear listening while track mixing. The swivel can also be put to good use even in more casual listening, when temporary attention has to be paid to outside sounds.

### Deluxe breathable ear cushions

The materials used are carefully selected to ensure long-wearing comfort and enhanced sound performance. Deluxe breathable ear pads are designed for optimal ergonomic fit. The earpads also seals in bass sounds while keeping out ambient noise.

### Soft silicone headband

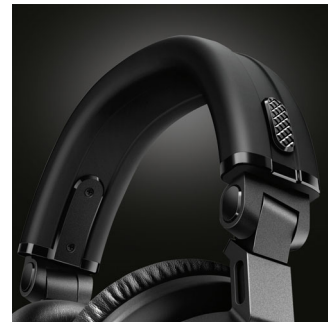

The A3-PRO professional DJ headphones come with a soft silicone headband that makes them so comfortable you can forget you are wearing them even after hours of mixing.

# Specifications

## Sound

- Acoustic system: closed
- Frequency response: 12 - 23,000 Hz
- Maximum power input: 3000 mW
- Diaphragm: PET
- Distortion: < 0.5%
- Impedance: 16 ohm
- Magnet type: Neodymium
- Sensitivity: 108 dB
- Speaker diameter: 50 mm
- Type: Dynamic

## Connectivity

- Cable Connection: one-sided

## Packaging dimensions

- EAN: 69 23410 72871 2

- Packaging dimensions (W x H x D):  
19.5 x 24 x 11 cm
- Gross weight: 0.6745 kg
- Nett weight: 0.3845 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.29 kg
- Type of shelf placement: Both

## Outer Carton

- Gross weight: 1.579 kg
- GTIN: 1 69 23410 72871 9
- Outer carton (L x W x H): 24 x 21.5 x 27.5 cm
- Nett weight: 0.769 kg
- Number of consumer packagings: 2
- Tare weight: 0.81 kg



Issue date 2016-06-03

Version: 3.3.5

12 NC: 8670 001 12561  
EAN: 06 92341 07287 12

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* 90mm replaceable ear cushions sold separately [shop.philips.com](http://shop.philips.com) and [armadashop.com](http://armadashop.com)  
\* Replaceable cables sold separately [shop.philips.com](http://shop.philips.com) and [armadashop.com](http://armadashop.com)