



Philips
Soundbar speaker

3.1 CH wired subwoofer

Bluetooth®
HDMI ARC
150 W

HTL2183B

Unmatched voice clarity from 3.1 channels of sound with subwoofer

Upgrade your TV with enhanced voice clarity and virtual surround sound for a better cinematic experience, plus wireless music streaming over Bluetooth.

Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Audio-in to enjoy music from iPod/iPhone/MP3 player
- Enjoy MP3 music directly from your portable USB devices

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Touch panel for intuitive playback and volume control

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- External subwoofer adds thrill to the action
- Dolby Digital and Pro Logic II surround sound
- Dedicated centre-channel speaker for superior voice clarity

PHILIPS

Soundbar speaker
3.1 CH wired subwoofer Bluetooth®, HDMI ARC, 150 W

HTL2183B/93


Highlights

Centre-channel speaker



A centre-channel speaker dedicated especially to voice frequencies anchor speech to the centre of the screen. This offers improved voice positioning and clarity, increasing immersion in movies.

Virtual Surround Sound

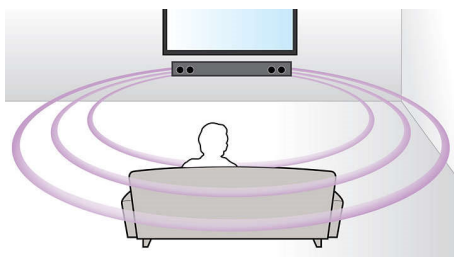

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Bluetooth



Bluetooth is a short-range wireless communication technology that is both stable and energy efficient. The technology allows for

easy wireless connection to other Bluetooth devices, so you can play your favourite music from any smartphone, tablet or laptop, including the iPod or iPhone, with a Bluetooth-enabled speaker.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Enjoy MP3 music directly

Enjoy MP3 music directly from your portable USB devices

Low-rise profile




Low-rise profile for the perfect fit in front of your TV

Works with multiple devices


Works with TVs, BD/DVD players, gaming consoles, MP3 players

Dolby Digital and Pro Logic II

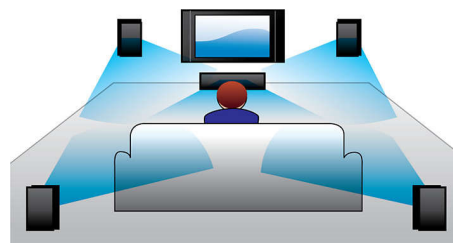

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Touch panel for playback

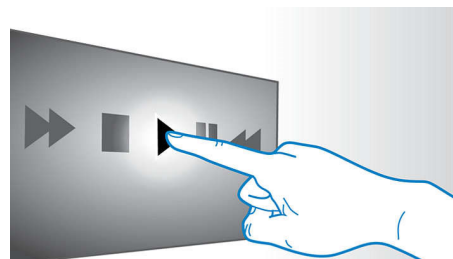

Intuitive touch panel control allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.



easy
LINK



HDMI™



Specifications

Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control, Night Mode, Audio sync, Movie, Music, Voice
- Sound System: Dolby Digital, Dolby pro-logic 2
- Subwoofer output power: 55 W
- Speaker output power: 32W x 3
- Total Power RMS @ 10% THD: 150 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Subwoofer impedance: 2 ohm
- Speaker Impedance: 4 ohm
- Drivers per Soundbar: 3 x race track woofers

Connectivity

- Integrated Connections: Bluetooth
- Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in, HDMI 1.4 output (ARC)
- iPod/iPhone: via 3.5 mm Audio In, via Bluetooth
- Top connections: Audio In (3.5 mm), USB 2.0

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play,

One touch standby, Remote Control-Passthrough, System standby

Power

- Power consumption: 30 W
- Power supply: 100–240 VAC, 50–60 Hz
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: AAA Battery (x1), Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, AC Adapter, Screws (x6)

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 950 x 51 x 69 mm
- Weight incl. Packaging: 6.6 kg
- Main Unit Weight: 1.62 kg
- Packaging (W x H x D): 395 x 418 x 295 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Subwoofer Weight: 2.78 kg
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: MP3



Issue date 2024-04-13

Version: 1.0.4

EAN: 69 25970 70611 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com