



Philips Fidelio
SoundSphere mini docking
speakers

for iPod/iPhone



DS6600

Feel the emotions of a live performance

with this docking speaker

Bring life back into your music with deeper & more sound delivered through SoundSphere speaker technology with the Philips DS6600/10. Dock iPod/iPhone for playing and charging, or connect directly to PC to enjoy the sound of your content.

Peerless sound quality

- SoundSphere for natural, deeper and wider sound impression
- FullSound enhances sound detail for rich and powerful sound
- Bass-reflex design for deep, tight bass reproduction
- 2x25W RMS total output power

Exquisite design and finishing

- Sophisticated design with high-quality aluminum finish

Advanced versatility

- Dock any iPod/iPhone, even in its case
- Powerful audio for your computer

Intuitive control

- SoundStudio app for complete control of audio settings
- PC synchronization with your iPod/iPhone
- Remote control complements speaker design and finishing

PHILIPS
Fidelio


Highlights

SoundSphere



Bask in the glory and energy of music as SoundSphere gives you each note as the artist intended. Delivering clear and natural audio, SoundSphere creates a sound impression that is deeper and wider. The result is life-like audio that will make you believe the artists are performing before you. Each SoundSphere speaker features a tweeter that hangs above the speaker box. The tweeter is able to emit sound more clearly and in all directions. Precise audio crossover engineering and careful positioning of the woofer to embrace the tweeter ensures minimized interference and even more natural sound.

FullSound™

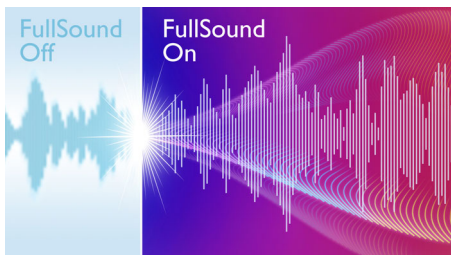

Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analyzed and optimized


to let you experience music with great detail and warmth.

Bass-reflex design



Bass-reflex acoustic load uses a bass pipe tuned to the acoustic volume of the speaker box, in order to reproduce deep bass from compact enclosures. The carefully designed profiled bass-pipe helps air flow and allows for deep and impactful bass, even at loud volumes while minimizing air turbulence that may cause distortion.

SoundStudio App

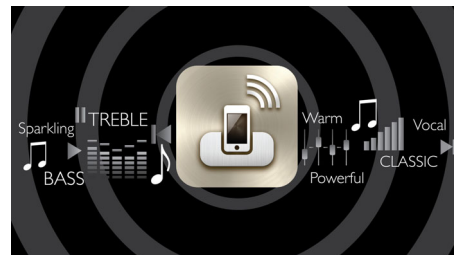

Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your

favorite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.

PC synchronization

Dock it, play it, sync it and charge it! Dig in to your favorite music on your iPod or iPhone while it charges and synchronizes with your PC via USB – and enjoy superb sound quality together with thoroughly unbeatable convenience. Let the great tunes go on and on – without ever running out of power.

Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adaptors. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

Specifications

Compatibility

- Compatible with: all iPod and iPhone

iPod/iPhone/iPad App

- Compatibility: iOS 4.3 to iOS 10.3

iPod/iPhone App

- App name: DockStudio, Free download from App store
- Compatibility: iPod Touch, iPhone iOS 4.3 or later

Loudspeakers

- Speaker drivers: 2 x 3/4" / 20mm tweeter, 2 x 3" / 8cm midwoofer
- Output power (RMS): 2 x 25W

Accessories

- Included accessories: Remote Control, 3.5mm

stereo line in cable, AC Power Cord, Quick install guide, Warranty certificate, World Wide Warranty leaflet

Connectivity

- Aux in
- USB: for connection to PC

Dimensions

- Product dimensions: [speakers] 145 (diameter) x 263 (height) mm
- Packaging dimensions (WxDxH): 577 x 249 x 217 mm
- Product weight: 3 kg
- Weight incl. Packaging: 4.2 kg

Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2017-12-22

Version: 9.0.4

12 NC: 8670 000 81007
EAN: 87 12581 61802 5

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com