



Philips  
Digital tuning clock radio

**FM, Digital tuning**  
Dual alarm  
Time & alarm backup

**AJ3116W**

## Start your day, your way!

Wake up with radio or buzzer

This stylish Philips clock radio looks nice and wakes you in time. It has built-in FM radio and gives you a choice of waking up to your favorite station or the buzzer.

### **Start the day your way**

- Wake up to your favorite radio tune or a buzzer
- FM digital tuning with presets
- Gentle wake for a pleasant wake up experience
- Repeat alarm for additional snooze

### **Easy to use**

- Dual alarm to wake you and your partner at different times
- Sleep timer for easy falling asleep to your favorite music
- Battery back-up ensures memory of time during power failure

**PHILIPS**

# Highlights

## Wake up to radio or a buzzer



Wake up to sounds from your favorite radio station or a buzzer. Simply set the alarm on your Philips Clock radio to wake you with the radio station you last listened to or choose to wake up with a buzzer sound. When the wake up time is reached, your Philips Clock radio will automatically turn on that radio station or trigger the buzzer to sound.

## FM digital tuning with presets




Digital FM radio offers you additional music options to your music collection on your Philips audio system. Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

## Gentle wake



Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

## Repeat alarm

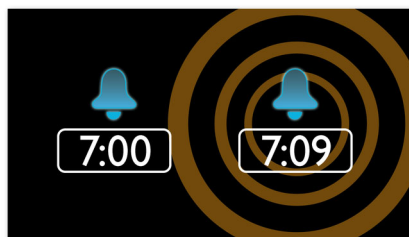


To counter oversleeping, the Philips Clock radio has a snooze feature. Should the alarm ring and you wish to continue sleeping a bit longer, simply press the Repeat Alarm button once and go back to sleep. Nine minutes later the alarm will ring again. You can continue to press the Repeat Alarm button every nine minutes until you turn off the alarm altogether.

## Sleep timer



Sleep timer lets you decide how long you want to listen to music, or a radio station of your choice, before falling asleep. Simply set a time limit (up to 1 hour) and choose a radio station to listen to while you drift off to sleep. The Philips radio set will continue to play for the selected duration and then automatically switch to a power-efficient and silent stand-by mode. Sleep Timer lets you fall asleep to your favourite radio DJ without counting sheep, or worrying about wasting power

## Dual alarm

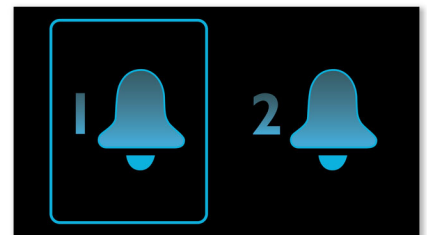

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

## Battery back-up

Battery back-up ensures memory of time during power failure

# Specifications

## Clock

- Type: Digital
- Display: LED
- Time format: 12H

## Alarm

- No. of alarms: 2
- Alarm source: Buzzer, FM radio
- Snooze (repeat alarm): Yes, 9mins
- 24 hours alarm reset
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

## Tuner/Reception/Transmission

- Tuner bands: FM
- FM frequency range: 87.5 - 108 MHz
- No. of preset stations: 10 FM
- Antenna: FM antenna

## Sound

- Sound system: mono
- Output power (RMS): 200 mW
- Volume Control: digital

## Power

- Power type: AC Input
- AC power input: 100-240V, 50/60 Hz
- Operation power consumption: <5W
- Standby power consumption: <1W
- Battery type: AAA
- Number of batteries: 2

## Dimensions

- Packaging type: D-box
- Product dimensions (WxDxH): 130 x 46 x 130 mm
- Packaging dimensions (WxDxH): 137 x 58 x 164 mm
- Product weight: 0.26 kg
- Weight incl. Packaging: 0.3 kg

## Accessories

- Quick start guide
- Warranty: Warranty leaflet



Issue date 2022-04-29

Version: 3.0.6

12 NC: 8670 001 18302  
UPC: 4 89518 56060 0

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)