


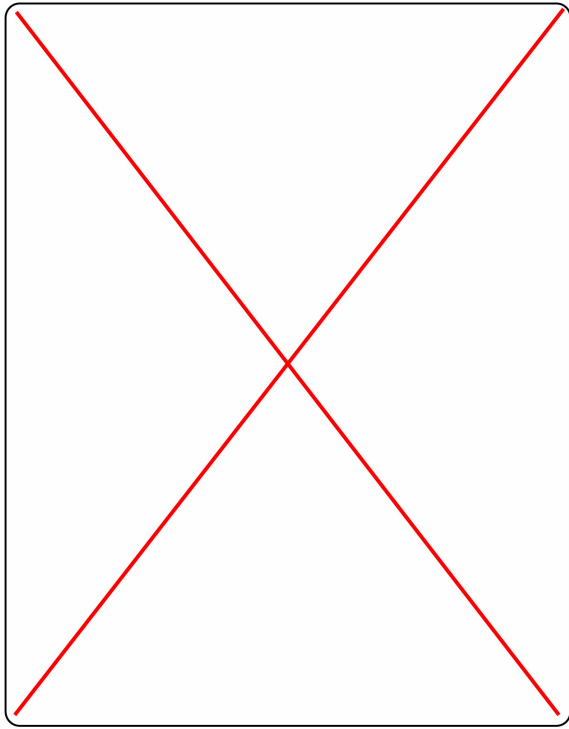

Philips
DVD receiver

CAD820

Enjoy your DVD movie and music on the road

Multiple sources for more choices

- Plays, DVD, DVD+R and DVD+RW discs
- MP3-CD, CD-R/RW compatible
- Photos: Picture CD (JPEG)
- CD changer control for non-stop music on the road
- FM/MW stereo tuner

Powerful Sound

- 4x55W Maximum music power
- Digital signal processing for clear sound and pure silence
- Subwoofer Out to connect a subwoofer for deeper bass sound

Easy to use

- Digital tuning with presets
- ESP for skip-free music on the move
- Multi-functional LCD display
- Handy remote control

PHILIPS
sense and simplicity

Specifications

Sound

- Sound System: Stereo
- Output Power: 4x55W Maximum music power
- Volume Control: rotary
- Equalizer settings: Pop, Rock, Classic, Jazz

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play, 20-Track Programmable
- Loader Type: Slot
- Number of decks: 1
- Programmable Tracks: 20

Tuner/Reception/Transmission

- Antenna: AM Antenna, FM Antenna
- Auto digital tuning
- Tuner Bands: FM, FM Stereo, AM
- Station presets: 30

Convenience

- Display Type: Dot Matrix LCD



- Remote Control: Multi-functional
- Electronic Shock Proof(ESP): 10 s

Dimensions

- Product dimensions (W x H x D): 182 x 52 x 180 mm
- Product weight: 2.5 kg

Power

- Mains power: 12V DC

Connectivity

- Aux in: 1x(L/R)/ RCA
- Subwoofer out: 1x
- Other connections: Composite video (CVBS) out 2x, Center pre-out, Line out, Antenna

Video Playback

- Playback Media: DVD-Video, DVD+R/+RW, Video CD, Picture CD

Accessories

- Included Accessories: Remote Control, User Manual

Highlights

Plays DVD, DVD+R and DVD+RW

Plays, DVD, DVD+R and DVD+RW discs

MP3-CD, CD-R/RW compatible

MP3-CD, CD-R/RW compatible

Picture CD (JPEG)

Multi-format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.

CD changer control

CD changer control for non-stop music on the road

FM/MW stereo tuner

FM/MW stereo tuner

4x55W Maximum music power

4x55W Maximum music power

DSP-Digital signal processing

Advanced digital signal processing technology applied to the entire audio path and it ensures crystal clear sound and pure silence when it is important.

Subwoofer Out

An output is provided on the rear of the TV to allow you to connect a subwoofer to improve the bass in your TV.

Digital tuning with presets

Digital tuning with presets

Electronic Skip Protection

Electronic Skip Protection ensures skip-free music even when your player is subjected to knocks and jolts while you're jogging or on the move. As your CD plays, music is constantly fed into the player's memory buffer, which temporarily stores your music. When the device is subjected to knocks or jolts - accidentally or during sports - you will still experience uninterrupted sound from the music stored in the buffer while the laser promptly refocuses to the point at which the shock occurred, and recommences playing to refill the buffer.

Multi-functional LCD display

Multi-functional LCD display

Handy remote control

Handy remote control



Issue date 2011-04-28

Version: 1.0.2

12 NC: 9073 100 12575
EAN: 87 10895 88244 6

© 2011 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com