


Philips
Speaker Dock



SBD6040

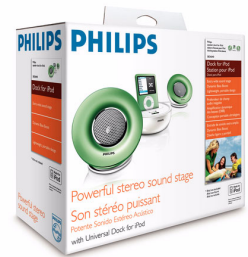

Powerful stereo sound stage

Powerful XSL Acoustics

Enjoy the powerful and wide sound stage of the SBD6000. The speakers and dock for iPod easily slip into your bag so that you can enjoy your music with friends wherever you are and experience amazing rich bass even at low volume.

Powerful Sound

- Dynamic Bass Boost electronically enhances the low tones
- Built-in speakers featuring XSL Acoustics for dynamic sound
- Extra wide soundstage for 3-dimensional and realistic sound
- Metal speaker grill protects speaker drivers

Take your music with you

- Carrying pouch to protect your speakers when not in use
- Cable winding system with detachable cable for neat storage
- Lightweight, portable design for music enjoyment anytime

Always ready to go

- Cable neatly stored when not in use
- Battery or AC power option for music enjoyment anywhere
- Store your receiver on the convenient docking station

PHILIPS
sense and simplicity

Specifications

Sound

- Frequency response: 100 - 18 000 Hz
- Impedance: 3 Ohm

Connectivity

- Connector: iPod dedicated

Convenience

- Operating time: 10 hours
- Power on indication
- Volume control

Accessories

- AC/DC Adaptor
- Pouch

Power

- Adaptor type: 9V 1.5A
- Battery type: AAA, LR03
- Battery voltage: 1.5 V
- Number of batteries: 6

Packaging dimensions

- Packaging dimensions (W x H x D):

- 10.4 x 8.9 x 4.5 inch
- Nett weight: 1.219 lb
- Gross weight: 1.929 lb
- Tare weight: 0.710 lb
- UPC: 6 09585 15109 3
- Number of products included: 1
- Packaging type: Carton

Outer Carton

- Outer carton (L x W x H): 29.6 x 11.1 x 10.4 inch
- Nett weight: 7.315 lb
- Gross weight: 15.245 lb
- Tare weight: 7.930 lb
- GTIN: 2 06 09585 15109 7
- Number of consumer packagings: 6

Inner Carton

- Inner carton (L x W x H): 10.7 x 9.4 x 9.6 inch
- Nett weight: 2.438 lb
- Gross weight: 4.436 lb
- Tare weight: 1.997 lb
- GTIN: 1 06 09585 15109 0
- Number of consumer packagings: 2

Highlights

DBB Dynamic Bass Boost

Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

XSL Acoustics

Enjoy dynamic sound and powerful bass performance from your ShoqBox with XSL Acoustics. Impressive sound is produced by combining bright, brisk treble and mid range sound with elastic, powerful bass. Innovative use of high-tech materials like titanium cone and neodymium magnet deliver sound output that's nearly double the power of a traditional speaker driver of the same size. Precise tuning between the speaker driver, the small acoustic architecture and the circuitry ensures superbly dynamic sound and optimizes bass performance from the smallest sound enclosure.

Carrying pouch

Look after your speaker and stop the cable getting tangled by storing it in this handy soft pouch when not in use.

Speaker cable management

With it's unique design, cable storage is no longer an issues. Simply pack and go.



Issue date 2013-01-31

Version: 3.1.2

12 NC: 8670 000 37886
UPC: 6 09585 15109 3

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com