


Philips
DVD player

DivX

DVP3042

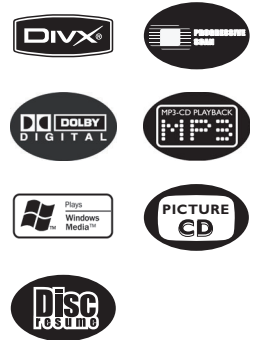

Turn up your experience

With DivX playback

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Great audio and video performance

- Progressive Scan component video for optimized image quality
- RGB on Scart single connection for high-quality video
- 192kHz/24 bit audio DAC enhances analogue sound input

Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD, DivX
- Music: CD, MP3-CD, CD-R/RW & Windows Media™ Audio
- Photos: Picture CD (JPEG)

Fits everywhere, goes anywhere

- Compact design
- Ultra slim design

PHILIPS

Technical specifications

Picture / Display

- **D/A converter:** 12 bit, 108 MHz
- **Picture enhancement:** Progressive scan, Video Upsampling

Sound

- **D/A converter:** 24 bit, 192 kHz
- **Frequency response:** 30-20000 Hz
- **Signal to noise ratio:** 100
- **Distortion and noise (1kHz):** 85 dB
- **Crosstalk (1kHz):** 100 dB
- **Dynamic range (1kHz):** 90 dB
- **Sound system:** Dolby Digital

Video playback

- **Playback Media:** CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW
- **Compression formats:** MPEG I, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- **Video disc playback system:** PAL, NTSC

Audio Playback

- **Playback Media:** CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW
- **Compression format:** MP3, Dolby Digital, PCM, WMA
- **MP3 bit rates:** 32 - 256 kbps

Still picture playback

- **Playback Media:** DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- **Picture compression format:** JPEG
- **Picture enhancement:** Flip photos, Rotate, Zoom, Slideshow

Connectivity

- **Rear Connections:** Analogue audio left / right out, Component video out progressive, Composite video (CVBS) output, Digital coaxial out, Scart

Convenience

- **Child Protection:** Child lock, Parental control
- **On-screen display languages:** English, German, Dutch, Danish, Finnish, French, Italian, Norwegian, Portuguese, Spanish, Turkish, Swedish, Polish

Power

- **Power supply:** 50Hz, 230V
- **Power consumption:** < 10 W
- **Standby power consumption:** < 0.8 W

Accessories

- **Included accessories:** 2 x AAA Batteries, Quick start guide, Remote control, World-Wide Warranty leaflet, User manual

Dimensions

- **Set dimensions (W x H x D):** 360 x 37 x 235 mm
- **Packaging dimensions (W x H x D):** 415 x 82 x 320 mm

Product highlights

Progressive scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending with the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, the human eye perceives a sharper picture with no line structure.

RGB on Scart connectivity

RGB on Scart is a cable connection that provides easy connectivity for high quality video output

192kHz/24 bit audio DAC

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Multi-format Movies with DivX

Multi format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

Music: Windows Media™ Audio

Multi format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Picture CD (JPEG)

Multi format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.

Ultra slim design

The attractive enclosure has a very low profile.



Date of issue 2006-08-24

Version: 3.0

12 NC: 8622 810 13526
EAN: 87 10895 96550 7

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.
© 2006 Koninklijke Philips Electronics N.V.
All Rights reserved.
www.philips.com