



Philips  
HD Media player

Netflix  
YouTube  
Built-in Wi-Fi



HMP2000

## Enjoy Netflix and YouTube on your TV

with this home media player

Sit back and enjoy film on the TV. The HMP2000 media player comes integrated with Netflix and YouTube, offering a virtually endless list of videos and films. Blockbusters and hot TV series are available instantly in your living room now.

### See more

- Netflix-Streaming TV Episodes and Movies over the Internet
- Watch YouTube videos directly on your big screen TV\*
- HDMI digital output for easy connection with only one cable
- View photos in various formats
- Play video in multiple formats

### Engage more

- Built-in Wi-Fi to enjoy your connected media wirelessly
- Integrated Internet services
- Hi-Speed USB 2.0 Link plays video/music from USB flash drives

# PHILIPS

# Highlights

## Netflix video streaming

# NETFLIX

Instantly watch TV episodes and movies as often as you want on your TV. All you need is an Internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming\*, and you are ready to go.

## Photo in various formats



View and enjoy your photos in a wide range of formats, including JPEG, JPG, M-JPEG, PNG, TIF, TIFF, GIF, BMP and HD JPEG — directly on your wide-screen TV! Turn your living room into a photo gallery and share wonderful memories with your friends and family.

## HDMI for simple AV connection




# HDMI™

HDMI stands for High Definition Multimedia Interface. It is a direct digital connection that can

carry digital HD video as well as digital multi-channel audio. By eliminating the conversion to analogue signals it delivers perfect picture and sound quality, completely free from noise. HDMI is fully backwards-compatible with DVI (Digital Video Interface).

## Hi-Speed USB 2.0 Link

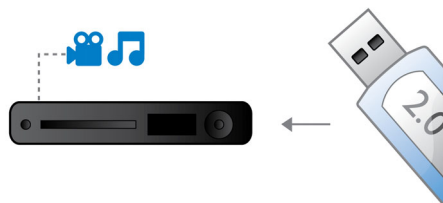

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## YouTube videos



Get YouTube videos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn on your computer. Simply ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly\* or by cables—then sit back and enjoy the best of YouTube.

# Specifications

## Video Playback

- Compression formats: MPEG1, MPEG2, H.264, MKV, VC-1, WMV (V9)

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Video upsampling, Smart Picture, High Def (720p, 1080i, 1080p), Video upscaling

## Digital Photo Playback

- Picture Compression Format: BMP, GIF, JPEG, PNG, TIFF
- Picture Enhancement: Zoom
- Playback Media: USB flash drive

## Audio Playback

- Compression format: PCM, MP3, Dolby Digital, WMA
- MP3 bit rates: 32 - 320 kbps
- Playback Media: USB flash drive

## Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1 kHz): 65 dB
- Crosstalk (1 kHz): 70 dB
- Dynamic Range (1 kHz): 80 dB
- Sound System: Dolby Digital

## Convenience

- On-Screen Display languages: English, Polish, Russian, Czech, Danish, Finnish, French, German, Greek, Hungarian, Italian, Portuguese, Romanian, Slovak, Spanish, Swedish, Turkish, Ukraine
- EasyLink (HDMI-CEC): One touch play, One touch standby
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- Subtitle support: .psb, .smi, .srt, .ssa, .sub

## Connectivity

- Front/Side connections: USB
- Rear Connections: HDMI output

## Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: < 1 W

## Accessories

- Included accessories: World Wide Warranty leaflet, Remote Control, User Manual, AC-DC Adapter

## Dimensions

- Set dimensions (W x H x D): 90 x 50 x 100 mm

NETFLIX

YouTube

HDMI™

Full HD  
1080p

USB  
HI-SPEED



Issue date 2017-04-04

Version: 7.3.4

12 NC: 8670 000 88922  
EAN: 87 12581 64064 4

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Netflix unlimited streaming membership required.