



Philips  
CD Soundmachine

Compact design  
MP3-CD  
Black

AZ302

## Enjoy music wherever you go

You take pleasure in the simple things in life and delight in convenience. The compact and portable Philips CD soundmachine lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

### Enjoy your music from different sources

- MP3-CD playback means MP3 plays like a normal audio CD.
- Compatible with CD-Recordable and CD-ReWritable
- FM/MW tuner for radio enjoyment

### Easy to use

- CD Shuffle/Repeat for personalized music enjoyment
- 20-track CD programmable
- Line-in connection for your portable music playback

### Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS

# Specifications

## Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: fast forward/backward, next/previous album search, next/previous track search, repeat/shuffle/program

## Tuner/Reception/Transmission

- Tuner bands: FM, MW (AM)
- Antenna: FM antenna

## Sound

- Sound enhancement: Dynamic Bass Boost
- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

## Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

## Connectivity

- MP3 Link: 3.5mm stereo line in

## Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Power supply: 110 - 127V and 220 - 240V AC voltage selectable
- Number of batteries: 6

## Accessories

- Cables/Connection: \*Flat pin adaptor, power cord
- User Manual: Portuguese, Spanish
- Warranty: Warranty Certificate

## Convenience

- Loader type: top

## Dimensions

- Gross weight: 1.95 kg
- Packaging width: 284 mm
- Packaging height: 264 mm
- Packaging depth: 155 mm
- Weight: 1.6 kg
- Main unit depth: 245 mm
- Main unit height: 123 mm
- Main unit width: 262 mm



# Highlights

## MP3-CD playback

MP3 stands for "MPEG 1 Audio layer-3". MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.

## Line-in connection


MP3 line-in connectivity allows direct playback of MP3 content via your audio system. By simply connecting your portable MP3 player to the audio system via its built-in line-in jack, you can enjoy superb sound quality while playing your favorite music from your portable MP3 player.

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## CD Shuffle/Repeat

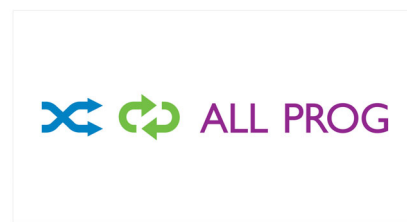

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.



Issue date 2016-10-05

Version: 1.0.9

12 NC: 8670 000 38241  
EAN: 87 12581 40512 0

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Avoid extensive use of the set in a volume higher than 85 decibel because this may damage your hearing.