




Philips  
Blu-ray Soundbar Home  
theater

**3D Blu-ray**  
Wall mountable

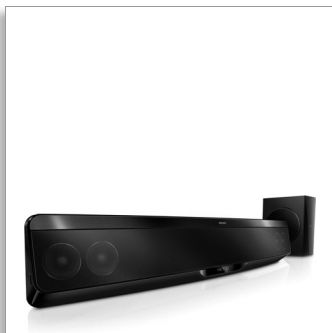

**HTB7150**

## Great surround sound without the clutter

### Obsessed with sound

This Philips Home Theatre soundbar with patented Ambisound technology delivers rich, cinema-like multi-channel 5.1 surround sound in any room. What's more, it has 4 dedicated amplifiers and 4 loudspeakers that sounds great anywhere.

#### Designed to enhance your living space

- Super slim design of 87mm depth ideal for wall mounting

#### Connect and enjoy all your entertainment

- Built-in Wi-Fi to enjoy your connected media wirelessly
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- CinemaPerfect HD for clearer and sharper video playback
- Internet radio to enjoy the world of online radio channels
- Instant 2D to 3D conversion for a lifelike movie experience


#### Ultimate listening experience

- Ambisound technology for surround sound from fewer speakers
- 480W RMS power delivers great sound for movies and music

# PHILIPS

# Highlights

## Ambisound technology

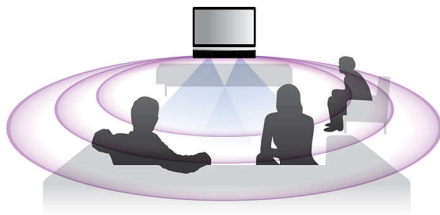

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.


## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-

ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Internet radio

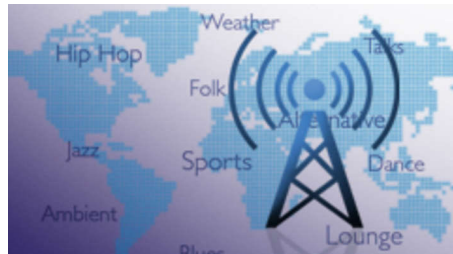

Internet radio is an audio broadcasting service that is transmitted via the Internet. Some internet stations are affiliated with a traditional (terrestrial) radio station or network while others are internet-only radio stations, which are independent and devote their broadcasts only to the World Wide Web. With Internet Radio, you can enjoy access to online radio stations from anywhere in the world and listen to a wide variety of genres, news, sports and entertainment updates, or connect to favourite or niche stations.

## Instant 2D to 3D conversion



Enjoy 3D movie excitement in your home using your existing 2D movie collection. Instant 3D conversion uses the latest digital technology to analyze 2D video content to

distinguish between foreground and background objects. This detail generates a depth map that converts normal 2D video formats, into exciting 3D. Along with your compatible 3D TV, you are now ready to experience full HD 3D.

## CinemaPerfect HD



Philips' CinemaPerfect HD engine offers a new standard in clear and sharp video playback. This intelligent engine reduces noise and sharpens images to bring you higher quality video images than previously seen. Video noise reduction and super scaling work to reduce the noise that is produced when video is compressed into MPEG format. With improved color processing, the engine produces sharp, deep images on screen.

## Built-in Wi-Fi

With built-in Wi-Fi, you can access your media content wireless. Say goodbye to squinting at the computer screen, and lean back and enjoy your media files on your TV - in the comfort of your living room.

## Super slim design

Super slim design of 87mm depth ideal for wall mounting

## 480W RMS power

480W RMS power delivers great sound for movies and music

# Specifications

## Sound

- Philips Branded feature: Ambisound
- Sound Enhancement: Dolby Digital Prologic II, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Subwoofer output power: 120 W
- Equalizer settings: MySound, Gaming, Movie, Music, News, Original
- Surround speaker output power: 4 x 90 W
- Total Power RMS @ 30% THD: 480 W

## Loudspeakers

- Loudspeaker types: 4 Integrated surround speakers, Integrated with main unit
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Drivers per Surround speaker: 2 x 2.5" Full range woofers
- Subwoofer impedance: 4 ohm
- Surround speaker freq range: 150 - 20k Hz
- Surround speaker impedance: 6 ohm

## Connectivity

- Integrated Connections: Wi-Fi
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, SD/SDHC Card slot
- iPod/iPhone: Ready (Dock sold separately), via 3.5mm Music iLink
- MyRemote App: MySound, SimplyShare, Virtual Remote
- Side Connections: Music iLink, USB

## Tuner/Reception/Transmission

- Internet Radio
- Tuner Bands: FM
- Number of Preset Channels: 40

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC),

Content Type, Deep color

## Power

- Power consumption: 80 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.25 W

## Accessories

- Compatible accessories: DCK3061 Dock for iPod/iPhone, STS1100 Table top stand, STS1300 Floor stand
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

## Design

- Wall mountable

## Dimensions

- Main Unit (W x H x D): 927 x 150 x 87 mm
- Weight incl. Packaging: 14.9 kg
- Main Unit Weight: 4.57 kg
- Packaging (W x H x D): tbc mm
- Subwoofer (W x H x D): 196 x 393.5 x 300 mm
- Subwoofer Weight: 4.51 kg
- Subwoofer cable length: 4 m

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA, FLAC, Ogg Vorbis
- MP3 bit rates: 32 - 320kbps

## File Format


- Audio: aac, mka, mp3, ra, wma
- Video: asf, avi, divx, flv, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

## Picture/Display

- Philips Branded feature: CinemaPerfect HD
- Picture enhancement: Instant 2D to 3D, HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Optical Playback Media

- Playable Discs: 3D Blu-ray, AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

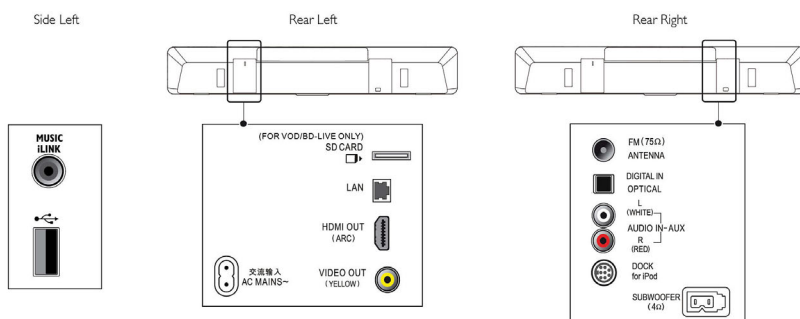

Issue date 2024-04-13

Version: 6.3.4

EAN: 87 12581 64495 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)