

# PHILIPS



## Mira design cordless phone

30 min answering machine

1.8" display/white backlight

Handset speakerphone



M5651WG

## Unique and desirable

With its sleek silhouette and high-quality finishing, Philips Mira challenges conventional perceptions about telephone design. Timeless, unique and stylish, it's an elegant piece of art for your home.

### Ultimate calling experience

- Handset speakerphone allows you to talk hands-free
- Easy to read 4.6 cm (1.8") display with white backlight
- Privacy settings: call block and call barring
- Save up to 100 of your favourite contacts in your phonebook
- Advanced sound testing and tuning for superb voice quality
- Talk for up to 16 hours on a single charge

### Eco-designed

- Zero power emission when ECO+ mode is activated

### Outstanding design in high-quality execution

- Durable, glossy and fingerprint-resistant outer shell
- Elegant and stylish appearance from every angle
- Smart cable management
- Calibrated keypad for smooth precision clicks
- Charge handset either way around

# Highlights

## Durable and glossy outer shell



Durable, glossy and fingerprint-resistant outer shell

## Beautiful from every angle



Elegant and stylish appearance from every angle

## Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

## ECO+



Zero power emission when ECO+ mode is activated


## 4.6 cm (1.8") display

Easy to read 4.6 cm (1.8") display with white backlight

## Multiple privacy settings

Value your privacy and quiet time at home? Black List restricts specific numbers or those starting with certain digits, protecting you from receiving unwanted calls. You can choose to block up to 4 sets of numbers. Each set can consist of 1 to 24 digits. If the number of an incoming call starts with any of these number sets or are the exact numbers that you choose to block, your phone will not ring. With Call Barring, you can avoid the surprise of expensive phone bills by blocking calls from specific numbers starting with certain digits (for example, pay per call numbers).

## 100-name phone book

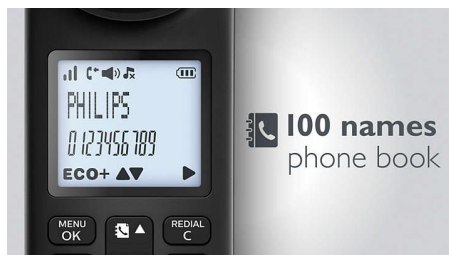

Always have the phone numbers of your loved ones available: Save up to 100 favourite contacts in your phonebook.

## Hassle-free charging

Charge handset either way around

## Smart cable management



The smart cable management system cleverly hides the wires from sight. Intelligently designed concealed sockets and an internal cable guide ensure everything is clutter-free and neatly tucked away.

## Smooth and calibrated keypad




Calibrated keypad for smooth precision clicks

## Superb sound quality

Advanced sound testing and tuning for superb voice quality

## Up to 16 hours talk time

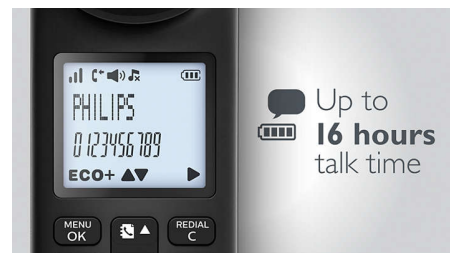

The phone can support up to 16 hours of conversation on a single charge.

# Specifications

## Sound

Volume control on handset  
Ringtones on handset: 10 polyphonic  
HQ-Sound

## Convenience

Menu structure in the handset: List Menu  
Base Station keys: Paging key  
Number of keys: 20  
Speakerphone — talk hands-free  
Call Management: Caller ID\*, Call Waiting\*,  
Dialled calls, Microphone mute, Missed Calls,  
Received Calls  
Call barring: Restrict the phone from making  
specific outgoing calls  
Signal strength indicator: 3 bar indicator  
Battery level indicator: 3 bar battery icon  
Intercom — multiple handsets  
Date/Time display  
Multi-handset capability: Up to 4  
Programmable hot keys: Key 1 and 2  
Keypad lock  
Key tone on/off  
Auto hang up  
Up to 16 hrs talk time  
Up to 250 hrs standby time  
Charge time: 8 hours  
Line cord length: 1.8 m  
Power cord length: 1.8 m  
Range: Open field < 300 m (984 ft); indoor <  
50 m (164 ft)

Block callers/Blacklist\*: Restrict the phone from  
ringing on specific incoming numbers  
Premium MMI: Standard  
Event notifications: For events status

## Power

Battery Capacity: 500 mAh  
Mains power: AC 100-240 V ~ 50/60 Hz  
Battery type: 2 x AAA, NiMH rechargeable  
Power Consumption: < 0.75 W

## Packaging dimensions

Height: 9.5 cm  
Packaging type: Carton  
Type of shelf placement: Laying  
Width: 31.8 cm  
Depth: 8.1 cm  
Number of products included: 1  
EAN: 48 95229 10703 8  
Gross weight: 0.5 kg  
Nett weight: 0.358 kg  
Tare weight: 0.142 kg

## Picture/Display

Display size: 4.6 cm / 1.8"  
Backlight colour: White  
Display type: 1 line Dot Matrix + 1-line Numeric +  
Hard ICON  
Backlight: Yes

## Answering Machine

Recording time capacity: Up to 30 minutes  
Pre-recorded OGM  
Answering machine control: From handset

## Memory Capacity

Call log entries: 50 entries  
Phonebook: 100 names and numbers  
Redial List Capacity: 20 entries  
Phonebook store in the base

## Security

Transmission encryption

## SAR Value

Philips handsets: < 0.1 W/kg

## Eco Design

Eco Mode: Automatic  
Eco+

## Network Features

Compatible: GAP

