

Philips  
2.1 3D Blu-ray Home  
theater

### Crystal Clear Sound

Built-in Wi-Fi & Bluetooth®  
2 HDMI In & HDMI out ARC  
500W

**HTB5255D**



## Powerful cinematic surround sound with deep bass

### Obsessed with Sound

Enrich music and movies, with this Philips home theater. With a 15mm soft-dome, horn-loaded tweeter, audio has never sounded more distortion-free. With a powerful 3 x stronger "Ribbed" Bass Reflex system for ultra-lifelike low notes.

#### Great listening experience

- 500W RMS power delivers great sound for movies and music
- Crystal Clear Sound for super clarity and realism
- Dolby TrueHD digital plus for high fidelity surround sound

#### Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Bluetooth wireless music streaming from your music devices
- Built-in WiFi to enjoy your connected media wirelessly
- Connect to HDMI x 2 for great picture and sound quality
- Internet radio to enjoy the world of online radio channels
- Play and charge your iPod/iPhone via USB port

#### Designed to enhance your cinema at home

- Touch panel for intuitive playback and volume control

# PHILIPS

# Highlights

## Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## 500W RMS power




500W RMS power delivers great sound for movies and music

## Built-in WiFi

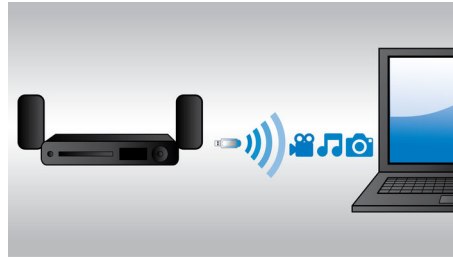

Thanks to built-in WiFi, by simply connecting your home theater directly to your home network, you can experience a rich selection of popular online services. You can enjoy some of the best websites offering movies, pictures, infotainment and other online contents tailored to fit your TV screen.

## Crystal Clear Sound

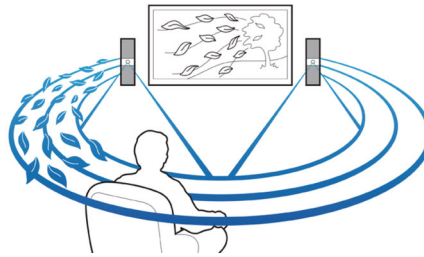


Crystal Clear Sound for super clarity and realism

## Play & charge your iPod/iPhone

Enjoy your favorite music while charging your iPod/iPhone! Simply connect your iPod/iPhone with its USB cable to the USB port of the Home Theater System. It charges your iPod/iPhone while it plays so you can enjoy your

music and not have to worry about your Apple device battery running out.

## HDMI x 2

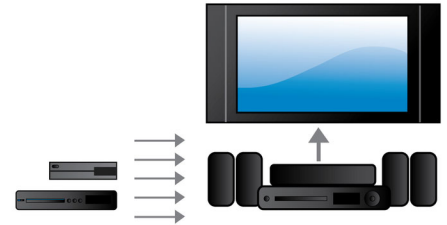

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio HDMI x 2 output to the connection in your non-3D AV receiver.

## Dolby TrueHD digital plus

Dolby TrueHD Digital Plus delivers the finest sound from your home theater. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.



## 2.1 3D Blu-ray Home theater

Crystal Clear Sound Built-in Wi-Fi & Bluetooth®, 2 HDMI In & HDMI out ARC, 500W

# Specifications

### Sound

- Center speaker output power: 166 W
- Equalizer settings: Movie, Music, Original, News, Gaming
- Satellite speaker output power: 2 x 166 W
- Sound Enhancement: Auto Volume Leveler, Night Mode, Surround Plus, Treble and Bass Control
- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out
- Subwoofer output power: 166 W
- Total Power RMS @ 30% THD: 500 W

### Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 Tweeter, 2 x 3" Woofers
- Satellite speaker freq range: 150-20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20-150 Hz
- Subwoofer impedance: 4 ohm

### Connectivity

- Rear Connections: Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2, Component Video output, Easy-Fit Speaker Jacks
- Front Connections: Audio in, USB
- Integrated Connections: Bluetooth, Wi-Fi
- iPod/iPhone: via USB

### Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color
- Ease of Use: DLNA

### Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

### Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

### File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg

### Audio Playback

- Compression format: AAC, MP3, WAV, WMA, Dolby Digital, DTS
- MP3 bit rates: 32 - 320kbps

### Video Playback

- Compression formats: AVCHD, MPEG1, MPEG2, MPEG4, H.264, DivX Plus HD, WMV 9

### Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom

### Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

### Power

- Power consumption: 80 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

### Sustainability

- Packaging: Electronic User Manual

### Dimensions

- Main Unit (W x H x D): 435 x 58 x 280 mm
- Front Speaker (W x H x D): 100.17 x 227.7 x 130.33 mm
- Front Speaker cable length: 3 m
- Subwoofer (W x H x D): 228.8 x 293 x 310 mm
- Subwoofer cable length: 3 m
- Front Speaker Weight: 0.63 kg
- Subwoofer Weight: 4 kg

### Accessories

- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, VDE to 2-pin Flat Adaptor, World Wide Warranty leaflet

### Outer Carton

- EAN: 87 12581 68353 5
- Gross weight: 9.14 kg
- Outer carton (L x W x H): 50.1 x 37.9 x 38.6 cm
- Nett weight: 7.97 kg
- Number of consumer packagings: 1
- Tare weight: 1.17 kg

### Packaging dimensions

- Packaging dimensions (W x H x D): 50.1 x 38.6 x 37.9 cm
- EAN: 87 12581 68353 5
- Gross weight: 9.14 kg
- Nett weight: 7.97 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.17 kg
- Type of shelf placement: Laying

### Product dimensions

- Product dimensions (W x H x D): 43.5 x 5.8 x 28 cm
- Weight: 2.66 kg



Issue date 2020-05-12

Version: 5.0.11

12 NC: 8670 001 01875  
EAN: 87 12581 68353 5

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

\* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.