



Philips
Soundbar speaker

2.1 CH wireless subwoofer

Bluetooth® and NFC
HDMI ARC
200 W

HTL3140B



Powerful sound for any TV

with wireless subwoofer

Get amazing virtual surround sound from your TV via just one cable! In addition to movies, you can also enjoy top quality Music iLink MP3 playback from your mobile devices.

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Flexible placement on the wall, tabletop or stand

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- External subwoofer adds thrill to the action
- Wireless subwoofer adds thrill to the action


Connect and enjoy all your entertainment

- Enjoy MP3/WMA music directly from your portable USB devices
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- One-touch with NFC-enabled smartphones for Bluetooth pairing
- Stream music wirelessly via Bluetooth™ from your smartphone
- Audio-in to enjoy music from iPod/iPhone/MP3 player

PHILIPS


Highlights

Virtual Surround Sound

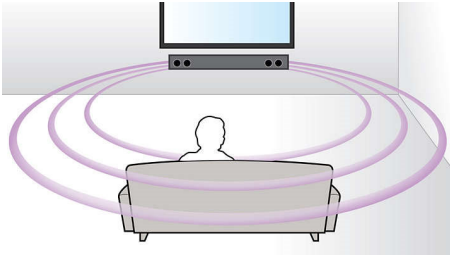

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby Digital

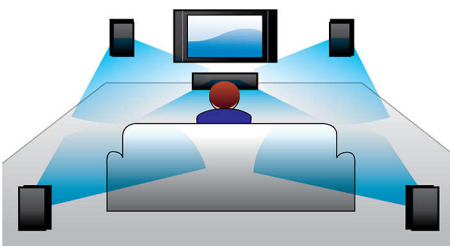

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Twin tweeters (HC 2012)

Twin tweeters for optimum clarity performance

USB



Enjoy MP3/WMA music directly from your portable USB devices

Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

Wireless subwoofer



Wireless subwoofer adds thrill to the action

Audio in




Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Flexible placement

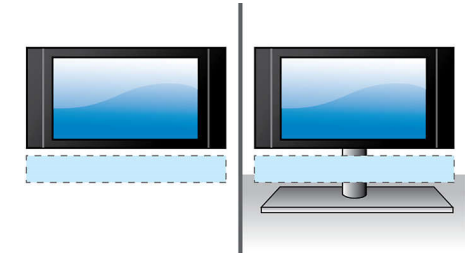

Enjoy the versatility of this home theatre system that allows you to place it where you want. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theatre experience.

Low-rise profile



Low-rise profile for the perfect fit in front of your TV

Specifications

Sound

- Sound Enhancement: Night Mode, Treble and Bass Control, Virtual Surround Sound
- Sound System: Dolby Digital
- Subwoofer output power: 140 W
- Speaker output power: 2 x 30 W
- Total Power RMS @ 10% THD: 200 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Wireless subwoofer
- Subwoofer impedance: 3 ohm
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Speaker Impedance: 8 ohm
- Tweeter Impedance: 16 ohm

Connectivity

- Integrated Connections: Bluetooth, NFC
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC)
- iPod/iPhone: via 3.5 mm Audio In, via Bluetooth
- Top connections: Audio In (3.5 mm), USB 2.0

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby,

Audio Return Channel

- HDMI Features: Audio Return Channel (ARC), Content Type

Power

- Power consumption: 35 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User Manual, AAA Battery (x1), AC Adapter, 2 x Power cords

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 843 x 52 x 60 mm
- Weight incl. Packaging: 8.2 kg
- Main Unit Weight: 1.4 kg
- Packaging (W x H x D): 400 x 292 x 349 mm
- Subwoofer (W x H x D): 226 x 251 x 306 mm
- Subwoofer Weight: 4.14 kg

Sustainability

- Packaging: Soya based ink, 80% recycled corrugated board



Issue date 2024-04-13

Version: 6.1.9

EAN: 87 12581 71504 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com