



Philips
Wireless multi-room
music system

CD, MP3-CD, USB, FM
Bluetooth®
with MULTIPAIR



BM60B

One tap to play music in every room

The Philips izzy music system plays music via Bluetooth, CD/USB and FM. With the tap of a button, music from smartphones, CD/USB and radio stations will play simultaneously to any izzy speaker in any room. Easy setup with no router, password or app.

Enjoy your music from multiple sources

- Digital tuning with preset stations for extra convenience
- Play MP3-CD, CD and CD-R/RW
- USB Direct for easy MP3 music playback
- Swap music instantly between 2 devices with MULTIPAIR

Philips izzylink™ for multiroom music

- Group up to 5 izzy with izzylink™ for multiroom enjoyment
- One tap to set up izzylink™, no router, no password, no apps
- Stream all your music via izzylink™
- Play music in one room wirelessly via Bluetooth
- Change the master speaker in the group with just one tap


Enrich your sound experience

- Digital Sound Control for optimised music style settings
- 130 W RMS Maximum output power

PHILIPS


Highlights

izzylink™

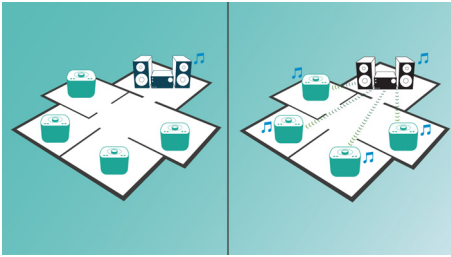

izzylink™ is a wireless technology that uses the IEEE 802.11n standard to enable the link-up of multiple speakers to form a wireless network. The network connects up to five speakers without the need of a router, Wi-Fi password, or any smart device mobile app to set it up. You can add izzy speakers to the network easily to enjoy music playing at the same time in different rooms. Each speaker can still be switched between single mode for individual use or group mode for multiroom music with one tap.


One tap to set up izzylink™

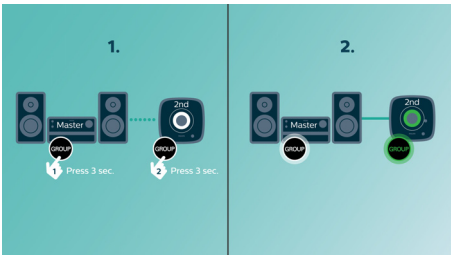

No router, no password, no apps needed for set up. Just long press the "GROUP" button on two speakers to set up for the first time. Repeat to add a 3rd, 4th, or 5th speaker. Each

long press of the "Group" button adds one new speaker at a time. Multiroom music has never been easier. Once complete, the izzylink™ network will be stored even when the speaker is unplugged.

Music from multiple sources

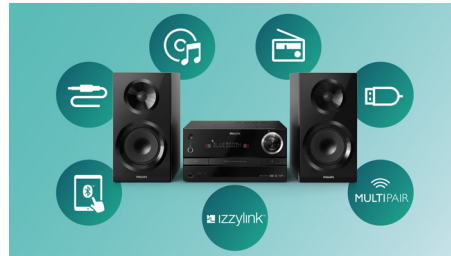


izzylink™ expands all your music sources, and music or radio apps on smartphones, tablets or computers wirelessly to every room.

Play music in one room



Philips izzy speaker lets you stream all your favourite music from your phone, tablet or computer, no matter which music or radio app you use.


Switch the lead speaker easily

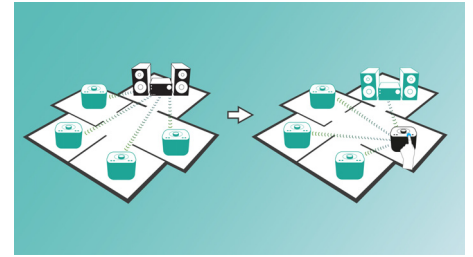

In each izzylink™ group, any individual speaker can be the master, streaming music to the others. When you want to take the lead to share your own music, press the Bluetooth button on the speaker in your room and share that music from your device instantly. Other speakers in the same izzylink™ group will play the same music at the same time, in sync. Sharing music with each other is that easy.

Swap music between 2 devices

Pair with 2 smart devices simultaneously so you can stream music from whichever device you want, without the hassle of un-pairing and re-pairing. To play a song on a different device, pause the song on the original device first and then play the new song on a different device to take over. It's perfect for sharing music with friends, at parties, or just playing different songs stored on different devices. Let friends and family pair at the same time, so you can swap between each other's music easily.



Specifications

Sound

- Sound Enhancement: Digital Sound Control
- Maximum output power (RMS): 130 W

Loudspeakers

- Loudspeaker types: Dome tweeter
- Main Speaker: 2-way, 4" woofer

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Station presets: 20
- RDS: Programme Type, Station Name
- Antenna: FM antenna (75 ohm)
- Tuner Enhancements: Auto Store
- Auto digital tuning

Connectivity

- Headphones: 3.5 mm
- USB: USB host
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)

Convenience

- Alarms: CD Alarm, USB alarm
- Clock: On main display, sleep timer
- Loader type: motorised, tray
- Display type: VFD display

Accessories

- Included accessories: FM antenna, World Wide Warranty leaflet, AC Power Cord, Quick Use Guide
- Remote control
- AC/DC Adapter: 100-240 V

Dimensions

- Packaging dimensions (WxDxH): 486 x 281 x 337 mm
- Main speaker dimensions (W x D): 140 x 215 mm
- Main speaker height: 305 mm
- Main unit depth: 249 mm
- Main unit height: 128 mm
- Main unit width: 254 mm
- Product weight: 7.45 kg
- Weight incl. Packaging: 7.88 kg

Power

- Power supply: 110-240V, 50/60 Hz

Audio playback

- Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme
- Playback media: CD, MP3-CD, USB flash drive, CD-R/RW
- USB Direct playback modes: fast reverse/fast forward, play/pause, previous/next, repeat, shuffle, stop

Compatibility

- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, iPad Air, iPad Air 2, iPad mini, iPad mini 2, iPad mini 3, iPad with Retina display, new iPad
- iPhone: iPhone 5C, iPhone 5S, iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 6, iPhone 6 Plus
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above



Issue date 2016-06-07

Version: 3.0.4

12 NC: 8670 001 31732
EAN: 48 95185 61812 8

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com