

Philips
2.1 Home theatre

DVD playback

HTS5200



Obsessed with sound

True-to-life sound in perfect style

Enjoy your movies, music and TV experience in great surround sound! With a built in DVD player, entertainment has never looked so elegant with this multi-entertainment home theatre.

Superior listening experience

- Crystal Clear Sound for superbly clear and detailed sound
- Soft dome tweeters for pure sound and voice clarity
- DTS, Dolby Digital and Pro Logic II surround sound
- 400 W RMS power delivers great sound for movies and music

Designed to enhance your living space

- Elegantly designed in fine materials to match your flat TV

Connect and enjoy all your entertainment

- DVD and CD playback to enjoy all your movies and music
- Sharper high definition pictures with HDMI 1080p
- Hi-Speed USB 2.0 Link plays video/music from USB flash drives
- EasyLink to control all HDMI CEC devices via a single remote
- Optional dock for convenient playback from your iPod/iPhone




asimpleswitch.com

PHILIPS

sense and simplicity

Highlights

Crystal Clear Sound

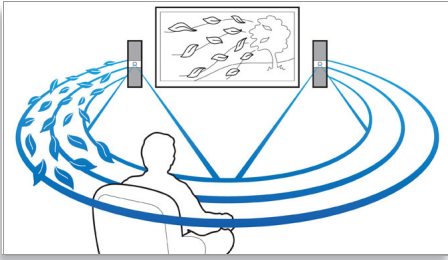


With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail the way it's meant to be heard and as the artist or director intended! Crystal Clear Sound reproduces the sound source—whether it's an action film, a musical or a live performance—faithfully, precisely and without any distortion. Philips home theatres with Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

Soft dome tweeters




Soft Dome Tweeters reproduce clear high and mid-range frequencies that enhance the overall clarity of sound from the speakers.

Elegantly designed

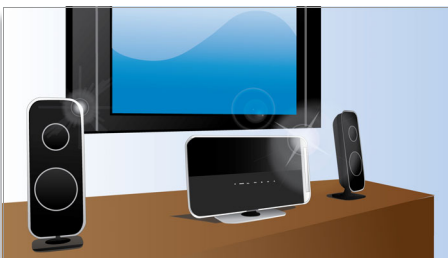


Elegantly designed in fine materials to match your flat TV

DVD and CD playback

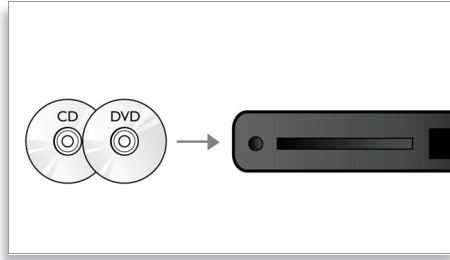


DVD and CD playback to enjoy all your movies and music

Hi-Speed USB 2.0 Link

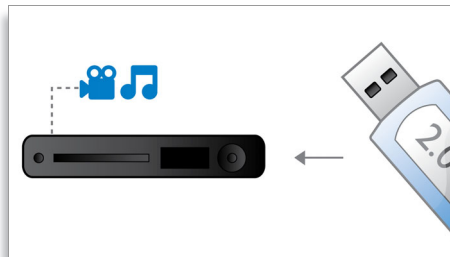

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

400 W RMS power

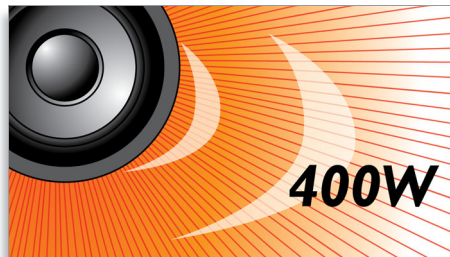

400 W RMS power delivers great sound for movies and music

DTS, DolbyDigital, ProLogic II

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information

to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Sharper HD pictures



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

Specifications

Accessories

- Compatible accessories: DCK3060 Dock for iPod/iPhone
- Included accessories: Batteries for remote control, Quick start guide, FM antenna, Remote Control, SCART Converter, Speaker Cables, User Manual, Video Cable, World Wide Warranty leaflet

Audio Playback

- Compression format: MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Compression format: JPEG, JPEG HD, JPEG Progressive
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4, WMV SD, XviD
- Video disc playback system: NTSC, PAL

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: mp3, wma
- Picture: JPEG, JPG
- Video: asf, avi, DivX, mpeg, mpg, wmv

Connectivity

- Front/Side connections: MP3 Link, USB
- Rear Connections: AUX IN 1, AUX IN 2, Component Video output, Composite video (CVBS) output, Digital coaxial in, Easy-Fit Speaker Connectors, FM Antenna Socket, HDMI output, iPod/iPhone Dock Jack

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough

Dimensions

- Main Unit (W x H x D): 434 x 253 x 129 mm

- Main Unit Weight: 3.6 kg
- Satellite Speaker (W x H x D): 114 x 316 x 114 mm
- Satellite Speaker Weight: 1.03 kg
- Satellite Speaker Cable length: 2 m
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 5.25 kg
- Subwoofer cable length: 4 m
- Packaging (W x H x D): 397 x 406 x 578 mm
- Weight incl. Packaging: 13.16 kg

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 x 3" Woofer, 1 Tweeter
- Satellite speaker freq range: 150–20k Hz
- Satellite speaker impedance: 6 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20–150 Hz
- Subwoofer impedance: 3 ohm

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Power

- Power consumption: 100 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.3 W

Sound

- Equalizer settings: Action, Classic, Concert, Drama, Jazz, Rock, Sports
- Frequency response: 20-20 k Hz
- Signal to noise ratio: > 65 dB
- Sound Enhancement: Dolby Digital Prologic II, Dolby Virtual Speaker, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, DTS 96/24, DTS Digital Surround, Stereo
- Total Power RMS @ 30% THD: 400 W

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Pre-set Channels: 40



Issue date 2012-07-17

Version: 11.4.8

12 NC: 8670 000 59829
EAN: 87 12581 52463 0

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com