



Philips Fidelio
SoundSphere docking
speakers

with AirPlay



DS9800W

Feel the emotions of a live performance

with this sound system

Bring life back into music with deep, natural audio delivered by acoustic SoundSphere technologies. Equipped with AirPlay, these elegant Philips DS9800W/10 docking speakers let you stream songs from iPod Touch, iPhone, iPad and iTunes.

Peerless sound quality

- SoundSphere for natural, deeper and wider sound impression
- FullSound enhances sound detail for rich and powerful sound
- SoundCurve for superb sound reproduction
- Bass-reflex design for deep, tight bass reproduction
- 2x50W RMS total output power

Exquisite design and finishing

- Real hand-crafted wood speaker enclosure for fidelity sound
- External finish polished with lacquer

Advanced versatility

- Stream music with AirPlay wireless technology
- Docking cradle for charging
- AUX-in for easy connection to almost any electronic device

Intuitive control

- SoundStudio app for complete control of audio settings

PHILIPS
Fidelio


Highlights

SoundSphere



Bask in the glory and energy of music as SoundSphere gives you each note as the artist intended. Delivering clear and natural audio, SoundSphere creates a sound impression that is deeper and wider. The result is life-like audio that will make you believe the artists are performing before you. Each SoundSphere speaker features a tweeter that hangs above the speaker box. The tweeter is able to emit sound more clearly and in all directions. Precise audio crossover engineering and careful positioning of the woofer to embrace the tweeter ensures minimized interference and even more natural sound.

FullSound™

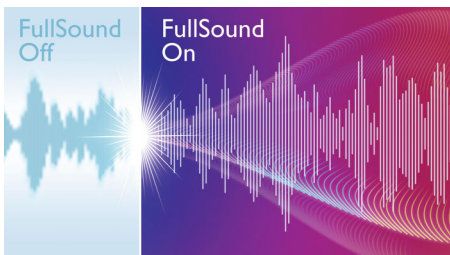


Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analyzed and optimized to let you experience music with great detail and warmth.

SoundCurve




The carefully designed curved back cover of this Philips docking speaker creates a highly effective acoustic structure for sound reproduction. Its clean curve enforces the rigidity of the speaker cabinet, dramatically reducing internal resonance and eliminating the vibration and distortion of sound. You get to enjoy superb crystal-clear sound in stunning looking speakers.

Bass-reflex design

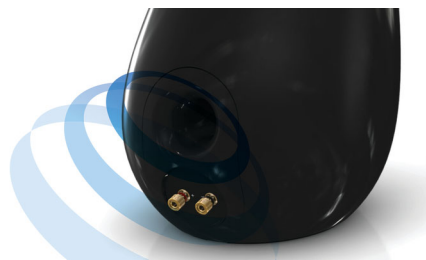

Bass-reflex acoustic load uses a bass pipe tuned to the acoustic volume of the speaker box, in order to reproduce deep bass from compact enclosures. The carefully designed profiled bass-pipe helps air flow and allows for deep and impactful bass, even at loud volumes while minimizing air turbulence that may cause distortion.

Real hand-crafted wood speaker

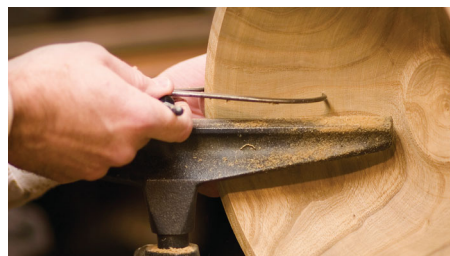

Wood has been used throughout history to craft the finest musical instruments. Its natural

acoustic properties continue to make it the material of choice for the best instruments and sound equipment today. Not only is this speaker handcrafted in wood, advanced wood bending techniques have been applied to create the right curvature for the enclosure. The calculated curve reduces vibration and eliminates the distortion of sound, resulting in the delivery of natural, life-like audio.

External finish with lacquer

These beautiful wood-crafted speakers have been coated with seven layers of lacquer, each applied with care, and polished to a perfect finish. The speaker shares this deeply gleaming look with grand pianos - a refined and elegant look that lends grace and charm to the home.

AirPlay wireless technology



AirPlay lets you stream your entire iTunes music collection to your Fidelio docking stations. It plays wirelessly from the iTunes program on your computer, iPhone, iPad or iPod Touch - to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every room. Get your favorite tunes to follow you whichever room you go.



Specifications

Compatibility

- Compatible with: all iPod, iPhone and iPad

iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iOS 4.3 to iOS 10.3
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

Loudspeakers

- Speaker drivers: 2 x 3/4" / 20mm tweeter, 2 x 5" / 12.5cm midwoofer
- Output power (RMS): 2 x 50W

Accessories

- Included accessories: Charging cradle, Remote Control, 3.5mm stereo line in cable, AC Power

Cord, Quick start guide, Warranty certificate, World Wide Warranty leaflet

Connectivity

- AirPlay
- Aux in

Dimensions

- Product dimensions: [speakers] 265 (diameter) x 410 mm
- Packaging dimensions (WxDxH): 760 x 338 x 485 mm
- Product weight: (main unit) 12 kg
- Weight incl. Packaging: 14.5 kg

Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2020-07-08

Version: 10.1.15

12 NC: 8670 000 66129
EAN: 87 12581 55629 7

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com