




Philips  
Bluetooth® sports  
headphones

Best for outdoor use

Bluetooth®  
Sweat/ water proof  
Earbud

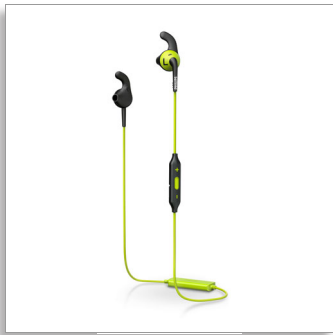

SHQ6500CL

## PUSH YOUR LIMITS, wirelessly

### Wireless sports earbud headsets

Philips Actionfit RunFree wireless sports headphones bring new levels of freedom and energy to your workouts. With a secure fit, tough waterproof design and powerful bass, they're built to keep your body moving.

#### protection

- Kevlar® reinforced cable for ultimate durability
- Ideal for any workout with IPX2 sweat resistance

#### Freedom

- Anti-slip rubber ear caps keep the headphone in - always.
- Bluetooth wireless connection for tangle-free workouts
- Control your music and pick up calls while training

#### Intensity

- Open acoustics let sound in for better awareness and safety
- High performance sound pushes you further

# PHILIPS

Bluetooth® sports headphones  
Best for outdoor use Bluetooth®, Sweat/ water proof, Earbud

SHQ6500CL/27

# Specifications

## Sound

- Acoustic system: Closed
- Sound Enhancement: Echo Control, Noise Reduction
- Speaker diameter: 13.6 mm
- Diaphragm: PET
- Impedance: 32 Ohm
- Magnet type: Neodymium
- Voice coil: Copper
- Frequency response: 15 - 22 000 Hz
- Maximum power input: 10 mW
- Sensitivity: 107 dB
- Type: dynamic

## Connectivity

- Bluetooth version: 4.1
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Maximum range: Up to 10 m

## Outer Carton

- Length: 19 cm
- Number of consumer packagings: 3
- Width: 11 cm
- Gross weight: 0.285 kg
- Height: 13.3 cm
- GTIN: 1 08 89446 00592 6
- Nett weight: 0.096 kg
- Tare weight: 0.189 kg

## Convenience

- Call Management: Answer/End Call, Switch between call and music, Call on Hold
- Volume control

## Power

- Rechargeable
- Battery Type: LI-Polymer
- Music play time: 4.5\* hour(s)
- Standby time: 55\* hr
- Talk time: 4.5\* hr
- Battery weight: 2.5g

## Packaging dimensions

- Height: 17.5 cm
- Packaging type: Carton
- Type of shelf placement: Both
- Width: 9.5 cm
- Depth: 3 cm
- Number of products included: 1
- Gross weight: 0.069 kg
- Nett weight: 0.032 kg
- Tare weight: 0.037 kg
- UPC: 8 89446 00592 9

## Product dimensions

- Height: 2 cm
- Width: 10 cm
- Depth: 4 cm
- Weight: 0.015 kg

## Accessories

- Quick start guide: Quick start guide
- USB cable: Included for charging
- Ear fit stabilizer: 2 pairs

## Design

- Color: Carbon lime & black

# Highlights

## Ambient sound awareness

Enjoy quality sound that doesn't block out the world around you. The open acoustic design lets ambient sound in, so you can stay aware of your surroundings and stay safer exercising in the outdoors.

## Anti-slip rubber ear caps

C-shaped rubberized ear tips keep the Actionfit earphones tightly in your ear so you can focus on your workout, not on keeping them in.

## Bluetooth 4.1

Bluetooth technology provides hassle-free wireless music.

## Extra durable Kevlar® cable

Your ActionFit headphones are designed for durability and strength. Its Kevlar-coated cable is well protected against tearing and breaking, and can withstand extreme environments - and workouts.

## High performance sound

13.6mm drivers pump out high performance sound, pushing you to perform at your best.

## Sweatproof

Don't be afraid to break a sweat. With an IPX2 rating, you can get sweaty and work out in the rain without any moisture entering the earpiece.

## Mic and control

Stay connected. The built-in microphone and track controls allow you to change music or pick up calls quickly and easily while you train.



Issue date 2024-03-08

Version: 7.0.5

UPC: 8 89446 00592 9

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Actual results may vary