

Philips 7000 series
Blu-ray Disc/ DVD player

CinemaPerfect HD

Smart TV 3D



BDP7700

Turn your home into cinema

Stay at home and let Philips bring the cinema to you. Together with CinemaPerfect and Quad Full HD, the BDP7700 brings you sensational video performance and images. What's more, 7.1 channel analog output delivers theater-like sound.

See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- CinemaPerfect HD for clearer and sharper video playback
- Smart TV Plus to enjoy online services & multimedia on TV
- Instant 2D to 3D conversion for a lifelike movie experience
- SimplyShare to connect & stream all entertainment wirelessly

Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound
- 7.1 channel surround sound for the best cinematic experience

Engage more

- Built-in WiFi-n for faster, wider wireless performance
- USB 2.0 plays video/music from USB flash/hard disk drive
- Turn your Smartphone into a remote for Philips AV products
- Skype™ ready to make high quality video call easily
- Touch sensitive keys for intuitive control



asimpleswitch.com



asimpleswitch.com

PHILIPS

sense and simplicity


Highlights

Blu-ray 3D Disc playback




Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

Dolby TrueHD and DTS-HD MA

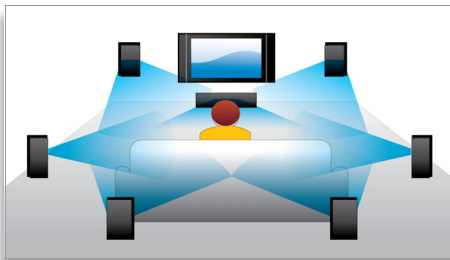

DTS-HD Master Audio and Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. DTS-HD Master Audio and Dolby TrueHD complete your high definition entertainment experience.

7.1 channel surround sound

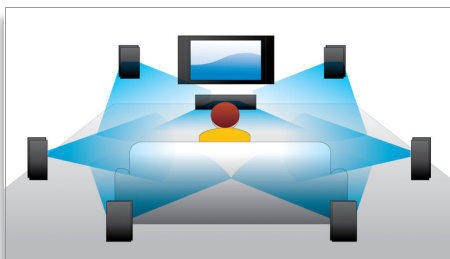

Enjoy the best sound experience with all your different types of contents. When you are

watching your movie, you can get a full 7.1 surround sound to immerse you in the action. When listening to music, where surround sound is not needed, the system will intuitively channel it to 2.1 stereo sound in which the music will be presented in the best form. Of course you can always choose from the various sound preset modes available on your Blu-ray and/or DVD player, ranging from pure stereo or 7-channel stereo to Dolby TrueHD and DTS Master Audio 7.1 surround sound for the best HD sound experience.

Smart TV Plus



Philips home theater & Blu-ray player with Smart TV Plus offer you an array of enhanced features, including Net TV, SimplyShare & MyRemote. Net TV brings a wide range of online information & entertainment to your TV for services like video-on-demand. With SimplyShare, you can access photos, music & movies stored on your PC from the comfort of your couch. You can also use your smartphone/tablet to control your home theater via Philips MyRemote app.

Instant 2D to 3D conversion



Enjoy 3D movie excitement in your home using your existing 2D movie collection. Instant 3D conversion uses the latest digital technology to analyze 2D video content to distinguish between foreground and background objects. This detail generates a depth map that converts normal 2D video

formats, into exciting 3D. Along with your compatible 3D TV, you are now ready to experience full HD 3D.

CinemaPerfect HD



Philips' CinemaPerfect HD engine offers a new standard in clear and sharp video playback. This intelligent engine reduces noise and sharpens images to bring you higher quality video images than previously seen. Video noise reduction and super scaling work to reduce the noise that is produced when video is compressed into MPEG format. With improved color processing, the engine produces sharp, deep images on screen.

Skype™ ready

Add a new dimension to your calls and contact your friends and relatives as if you are there. Simply plug in a selected* Skype™ camera to your home theater or Blu-ray player and enjoy HD video and excellent sound quality from the comfort of your couch. Use your familiar list of Skype™ contacts from your current Skype™ account and start calling! Skype™ camera is sold separately.



Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Product Registration Card, Quick start guide, Remote Control, User Manual
- Optional accessories: Selected Skype camera*

Audio Playback

- Compression format: AAC (multi-channels), DTS, FLAC, MP3, Ogg Vorbis, PCM, WAV, WMA, WMA9Pro

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- BD Region Code: A
- DVD Region Code: 3
- Compression formats: AVCHD, AVI, DivX Plus™ HD, H.264, MKV, MPEG1, MPEG2, MPEG4 (AVC), RMBV, VC-1, WMV, WMV 9, XviD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Progressive Scan, Video Upscaling, Deep Color, x.v. Color

File Format

- Audio: aac, mka, mp3, ra, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, flv, m2ts, mkv, mov, mp4, mpeg, mpg, wmv

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front Connections: USB 2.0
- Network connections: 802.11 b/g/n, Built-in WiFi
- PC network link: DLNA 1.5 certified
- Rear Connections: Analog audio 5.1 channel out, Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, Digital optical out, Ethernet, HDMI output, SD/SDHC Card slot,

USB 2.0

- Smart TV Plus: MyRemote App, Net TV, SimplyShare

Convenience

- BD-Live (Profile 2.0)
- Child Protection: Parental Control
- Ease of Use: Fast wake up, MyRemote app, Touch control buttons
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- On-Screen Display languages: English, Malay, Simplified Chinese, Thai, Traditional Chinese
- Skype ready

Dimensions

- Product (W x H x D): 435 x 40 x 230 mm
- Product weight: 1.58 kg
- Packaging (W x H x D): 490 x 87 x 310 mm
- Weight incl. Packaging: 2.3 kg

Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- D/A converter: 12 bit / 150MHz
- Picture enhancement: 3/2 - 2/2 motion pull down, Auto fit screen, Color Enhancement, Content adaptive enhancement, Dynamic contrast enhancement, High Def (720p, 1080i, 1080p), Noise Reduction, Progressive scan, Quad HD (3840 x 2160), Video upscaling
- Blu-ray 3D: 2D to 3D conversion, Full HD 1080p
- Advanced video processing: CinemaPerfect HD

Power

- Power consumption: 15 W
- Power supply: 110-240V
- Standby power consumption: < 0.15 W

Sound

- D/A converter: 24 bit, 192 KHz
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio



Issue date 2013-03-21

Version: 3.1.4

12 NC: 8670 000 82989
EAN: 87 12581 62363 0

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* Designated FreeTalk Skype camera <TALK-7191>, for details, please visit www.freetalk.me/philips