


Philips  
Multimedia Speakers 2.1

MMS430G

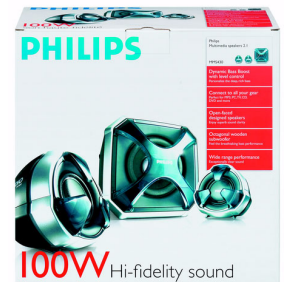

# Extreme gaming sound

100W (MPO)

Designed to enhance your game console experience, the MMS430G features a powerful wooden subwoofer and open-face, low distortion speakers for stunning audio quality throughout the full range of frequencies.

## Rich, complex sound

- Enjoy best-in-class performance and optimum sound quality
- Subwoofer for deep bass plus satellites for clear highs

## Looks as good as it sounds

- Colour scheme matches your game console
- Exchangable coloured covers
- The open-face disperses sound better for low distortion
- Over 75 years of audio experience

## Ultimate bass performance

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Digital Dynamic Bass Boost for optimized bass at any volume
- Wooden housing for quality bass reproduction

## The all-round sound system

- Connects to all common game consoles
- Connects to PC or MP3 player

# PHILIPS

# Highlights

## Excellent sound quality

Acoustically-tuned design and high-quality drivers ensure best-in-class audio performance.

## Subwoofer + satellite speakers

The audio system is separated into a subwoofer that is optimized to reproduce bass frequencies and satellite speakers that are optimised for mid- and high-range frequencies. The result is a system that powerfully reproduces the full range of audio frequencies from deep bass to crystal clear high notes with the minimum of distortion.

## Designed for your game console

2 different coloured exchangeable covers let you change the appearance of your speaker set to match your game console. X Box green or PS2 blue, the choice is yours.

## Exchangable coloured covers

Two sets of speaker covers mean you can change colours to match your game console. Green for Xbox® and Blue for PS2®. The covers are simple to remove and can be exchanged in seconds.

## Open-face speakers

To hear every detail in your audio, aerodynamic protectors are used instead of a cloth or metal cover. This not only prevents damage to the speaker, but also enables maximum sound to be produced with minimum distortion.

## 75 Years of audio experience

Philips invented the CD, led the team that wrote the USB audio specification and has produced millions of audio systems, home cinema sets and TV's over many decades. As a leader in audio innovation, you can trust Philips to make PC sound systems of the highest sound quality.



## Bass Reflex Speaker System

Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Digital Dynamic Bass Boost

Digital Dynamic Bass Boost is an intelligent bass booster that delivers maximum bass enhancement at high volumes without sound distortion and at low volumes without compromising on bottom-end bass frequencies. Technologically advanced electronics constantly monitor volume and bass levels, precisely calibrating both to prevent sound distortion, thus producing optimized bass. Digital Dynamic Bass Boost enables the enjoyment of superb bass performance - regardless of the chosen volume level.

## Wooden subwoofer

The housing of the subwoofer is made from wood, giving it superior stability and acoustical performance.

## Game console compatible

The speaker system is supplied with an adaptor cable to enable connection to game consoles with 2 x RCA connectors (e.g. PS2, Xbox, Game Cube etc)

## Works with PC or MP3 player

To make your speakers more versatile, standard 3.5mm connectors plus an adaptor for RCA connectors are used so that the speakers can be connected to most common audio devices such as a PC, laptop or MP3 player

# Specifications

## Sound

- Bass enhancement: Digital Bass Boost
- Output power (RMS): 2 x 10 + 30W
- Music Power: 100 W
- Volume Control: Analogue Volume Control
- Wires: Fixed Wires

## Loudspeakers

- Loudspeaker Enhancement: Magnetic Shielded LSB
- Satellite speaker freq range: 180-20000Hz Hz
- Subwoofer freq range: 20-180Hz Hz

## Connectivity

- Cable length: 2 m
- Connector: 3.5 mm stereo
- Power: AC Adaptor 18V

## Convenience

- Power on indication

## Accessories

- Adaptor plug: Y-Cable included (2 x RCA)
- Included accessories: 2 pairs of speaker grilles, Quick install guide

## Power

- Power LED indicator: Blue



Issue date 2014-02-06

Version: 1.0.2

12 NC: 9082 100 03701  
EAN: 87 10895 85869 4

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)