




Philips
Wireless HiFi Headphone

SBCHC8441

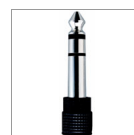

2 headphones included

Wireless

No hassles with cables, just the freedom to move around and enjoy music with your FM wireless stereo headphone - plus a second headphone for your friend.

You'll forget you're wearing them!

- 3-way adjustment for a better fit and bass performance
- Lightweight design improves comfort for prolonged use.

The perfect wireless listening experience

- ALC helps prevent audible distortion of input signals
- 32mm speaker driver delivers high performance sound

Always ready to go

- FM Wireless transmission for freedom of movement
- 2 headphones means you can share your music with a partner
- Reduces costs by using rechargeable batteries

PHILIPS
sense and simplicity

Specifications

Sound

- Acoustic system: Closed
- Frequency response: 10 - 20 000 Hz
- Magnet type: Ferrite
- Sensitivity: 100 dB
- Speaker diameter: 32

Tuner/Reception/Transmission

- Pilot tone frequency: 19 kHz
- Effective range: 100 m
- Carrier frequency range: 863.0 - 865.0 MHz
- Channel separation: > 30 dB
- Modulation: FM
- Number of channels: 2

Convenience

- Battery charging indication
- Automatic power off
- Operating time: +/- 15 hours
- Battery low indication
- Double PLL

Power

- Power supply headphone: 2 x 1.5 V NiMH R03/AAA
- Power supply transmitter: AC/DC adapter 12V/200mA

Outer Carton

- Gross weight: 8.86 kg
- Outer carton (L x W x H): 47.4 x 46.2 x 34.4 cm
- Nett weight: 5.166 kg
- Tare weight: 3.694 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 21.5 x 33.5 x 14.9 cm
- Gross weight: 1.283 kg
- Nett weight: .861 kg
- Tare weight: .422 kg

Highlights

3-way adjustable ear shells

Enjoy a comfortable fit and experience better bass performance thanks to the three-way adjustable ear shells that fit naturally around your ears.

Lightweight design

The durable, lightweight quality materials of these Philips headphones enhance comfort for extended wearing.

Automatic Level Control (ALC)

This smart electronic circuit ensures that the audio input level is automatically adjusted to the right level, preventing distortion and preserving your listening enjoyment.

32 mm speaker driver

The 32 mm speaker driver is a compact yet powerful element for delivering non-distorted sound with any given input power.

FM Wireless transmission

With high frequency FM wireless transmission, which can even pass through walls, you can even listen to your music when you're in another room.

2 headphones included

With two headphone sets, you can share the 'personal' listening experience with a friend.

Rechargeable system

The headphone set incorporates facilities for recharging the batteries.



Issue date 2012-07-31

Version: 5.0.7

12 NC: 9082 100 02653
EAN: 87 10895 80704 3

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com