



Philips  
Soundbar speaker

2.1 CH wireless slim subwoofer

Bluetooth® aptX, AAC and NFC  
1 HDMI in & HDMI out ARC  
Only 29.8mm slimness

HTL6145C



# Powerful sound for any TV

with slim wireless subwoofer

The Philips HTL6145C soundbar combines a wafer thin profile with quality sound and thundering bass. Its ultra slim subwoofer can be placed anywhere to maximize impact.

## Designed to enhance your living space

- Minimalistic chic design to suit a modern decor
- 2.98cm slimness
- Slim wireless subwoofer for vertical & horizontal placement

## Connect and enjoy all your entertainment

- Bluetooth® (aptX® and AAC) for wireless music streaming
- HDMI ARC to access all the sound from your TV
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Connect to one HDMI in for great picture and sound quality

## Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dual reflex system for impactful bass
- Dolby Digital and DTS for great surround sound
- Premium soft dome tweeters for Crystal Clear Sound
- Powerful 320W sound output

**PHILIPS**

## Soundbar speaker

2.1 CH wireless slim subwoofer Bluetooth® aptX, AAC and NFC, 1 HDMI in & HDMI out ARC, Only 29.8mm slimness


# Highlights

### Dual reflex system




Most subwoofers on the market use a single bass port and a single driver, but for bigger and clearer bass, two bass ports are needed. The larger volume of open space created by two bass ports increases airflow which reduces distortion while simultaneously allowing more bass to be created. With two 6.5" drivers and two bass ports, the dual bass reflex system far surpasses the bass created by a normal subwoofer.

### Premium soft dome tweeters

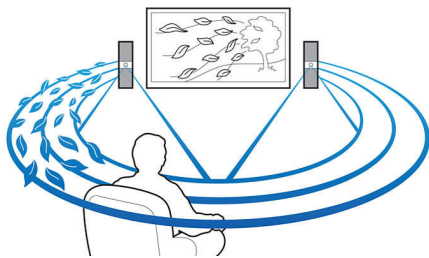

With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail, the way it's meant to be heard and as the artist or director intended! Crystal Clear Sound reproduces the sound source - whether it's an action movie, a musical or a live performance - faithfully, precisely and without any distortion. Philips home theaters with Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

### Bluetooth® (aptX® and AAC)

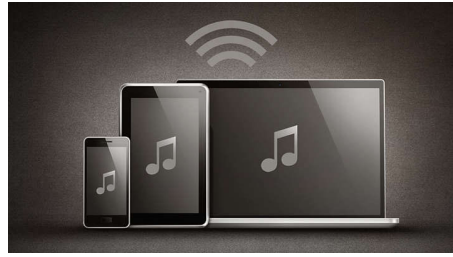

Bluetooth® (aptX® and AAC) for wireless music streaming

### NFC technology



Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

### HDMI ARC

HDMI ARC to access all the sound from your TV

### 2.98cm slimness


2.98cm slimness

### One HDMI in available

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our player's audio one HDMI in output to the connection in your non-3D AV receiver.


HTL6145C/12

### Virtual Surround Sound

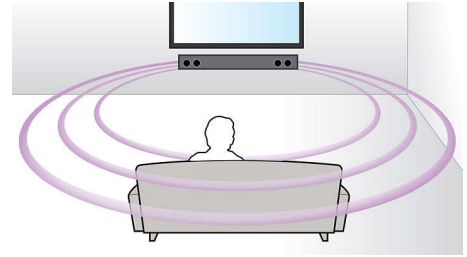

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

### Wireless subwoofer

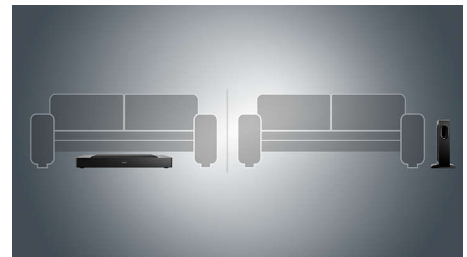

Slim wireless subwoofer for vertical & horizontal placement

### Powerful 320W sound output

6 neodymium woofers and 2 premium soft dome tweeters, which produce crystal clear high tones, ensure premium quality sound. Their total output is 320W, which is matched with a powerful 8" 220W subwoofer. The HTL6140 is not just extremely thin, it sounds extremely good.

## Soundbar speaker

2.1 CH wireless slim subwoofer Bluetooth® aptX ,AAC and NFC, 1 HDMI in & HDMI out ARC, Only 29.8mm slimness

HTL6145C/12

# Specifications

### Sound

- Sound Enhancement: Treble and Bass Control, Audio sync, Auto Volume Leveler, Virtual Surround Sound, Night Mode
- Sound System: DTS Digital Surround, Dolby Digital
- Subwoofer output power: 220W
- Speaker output power: 100W
- Total Power RMS @ 10% THD: 320 W

### Loudspeakers

- Subwoofer driver: 2 X 6.5" woofers
- Subwoofer type: Wireless subwoofer, Bass reflex system
- Drivers per Soundbar: 2X 1" soft dome tweeters, 6 X 2" neodymium woofers

### Connectivity

- Integrated Connections: Bluetooth APT-X, NFC
- Rear Connections: Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, Audio in 3.5 mm jack, USB
- Wireless connection: Bluetooth APT-X and AAC, Wireless subwoofer

### Outer Carton

- EAN: 87 12581 72090 2
- Length: 110 cm
- Number of consumer packagings: 1
- Width: 40 cm
- Gross weight: 13.6 kg
- Height: 23 cm
- Nett weight: 9.6 kg
- Tare weight: 4 kg

### Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, Remote Control-

### Passthrough

- HDMI Features: Audio Return Channel (ARC), Content Type

### Power

- Power supply: 110-240V, 50Hz
- Standby power consumption: <0.5 W

### Packaging dimensions

- Height: 23 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 110 cm
- Depth: 40 cm
- Number of products included: 1
- EAN: 87 12581 72090 2
- Gross weight: 13.6 kg
- Nett weight: 9.6 kg
- Tare weight: 4 kg

### Product dimensions

- Height: 7.2 cm
- Width: 104.6 cm
- Depth: 3 cm
- Weight: 1.47 kg

### Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet, Wall mount bracket

### Design

- Wall mountable

### Dimensions

- Main Unit (W x H x D): 1046X71.6X29.8mm mm
- Subwoofer (W x H x D): 730 X 83 X 330 mm



Issue date 2024-04-13

Version: 3.2.5

EAN: 87 12581 72090 2

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)