


Philips
DVD Player

Karaoke

DVP532K

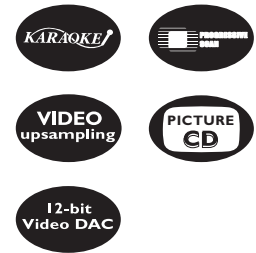

You have it, we play it!

Does size matter? Ever heard of less is more? Introducing the best value DVD-Player. No complications! Just a simple set that plays practically any disc format, including your digital photos, with absolutely no compromise to picture quality

Fits everywhere, goes anywhere

- Compact design
- Ultra-slim design

Superb video performance

- PAL & NTSC Progressive Scan gives razor-sharp images
- 4x video upsampling for improved image quality
- 12-bit/108MHz video processing for sharp, natural images

Plays practically any disc format

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD
- Music: CD, CD-R/RW and MP3-CD
- Photos: Picture CD (JPEG)

Your personal karaoke show

- Karaoke for endless karaoke entertainment at home

PHILIPS
sense and simplicity

Specifications

Picture/Display

- **Aspect ratio:** 4:3, 16:9
- **D/A converter:** 12 bit, 54MHz
- **Picture enhancement:** Smart Picture
- **Smart Picture:** 4 picture presets

Sound

- **Crosstalk (1kHz):** 90 dB
- **D/A converter:** 24 bit, 96 kHz
- **Distortion and Noise (1kHz):** 85 dB
- **Dynamic Range (1kHz):** 90 dB
- **Signal to noise ratio:** 95
- **Sound System:** Dolby Digital (AC-3), MPEG2, Stereo

Video Playback

- **Compression formats:** MPEG1, MPEG2
- **Playback Media:** 80mm + 120mm Audio Discs, CD, CD-R, CD-RW, DVD, DVD+RW, DVD+R, DVD-RW (Video mode), DVD-R, DVD-Video, MP3-CD, Picture CD, SVCD, Video CD, Video CD/SVCD
- **Disc Playback Modes:** A-B Repeat, Chapter repeat, Disc Menu, Fast Backward, Fast Forward, OSD, Pause, Screen Saver, Standard Play, Zoom
- **DVD Region:** 3
- **Loader Type:** Tray
- **Number of Discs:** 1
- **Picture Quality Enhancements:** Video upscaling
- **Video disc playback system:** NTSC, PAL
- **Video Enhancement:** Smart Picture

Audio Playback

- **CD Playback Enhancements:** Next/Previous Track, Repeat, Resume Play, Upgradable CODECs
- **Compression format:** Dolby Digital, MP3
- **Playback Media:** CD, CD-R, CD-RW, MP3-CD
- **Disc Playback Modes:** A-B Repeat, Next/Previous Track Search, Repeat one/album/all, Repeat Play
- **MP3 bit rates:** 32-256 kbps
- **MP3 sample rates:** 16, 22.050, 32, 44.1, 48 kHz

Still Picture Playback

- **Playback Media:** DVD+R/+RW, Picture CD
- **Picture compression format:** JPEG

- **Picture enhancement:** Flip photos, Rotate
- **Rotation:** 90 degree steps
- Slide show
- Zoom

Connectivity

- **Audio output:** Stereo Out (2 cinch)
- **Other connections:** Analog audio Left/Right out, Component Video out Progressive, Composite video (CVBS) out, Digital coaxial out, S-Video out
- **Output rear:** Audio L/R out, CVBS monitor out

Convenience

- **Child Protection:** Parental Control
- **Convenience Enhancements:** On-screen Display
- **Display Type:** FTD
- **Ease of Use:** On Screen Display
- **On-Screen Display languages:** English, Traditional Chinese
- **OSD Languages:** Thai
- **Remote control:** Zappa
- **Remote control type:** 3141 017 90220

Accessories

- **Batteries:** 2 x AA
- **Included Accessories:** Audio/Video cable, Batteries for remote control, Remote Control
- User Manual
- Warranty Card

Green Specifications

- **Packaging material:** Carton

Dimensions

- **Packaging dimensions (W x H x D):** 400 x 108 x 352 mm
- **Product dimensions (W x H x D):** 360 x 43 x 285 mm
- **Product weight:** 1.98 kg
- **Weight incl. Packaging:** 2.98 kg

Power

- **Power consumption:** 12 W
- **Power supply:** 200-240 V
- **Standby power consumption:** < 1 W

Product highlights

Compact design

Ultra-slim design

The attractive enclosure has a very low profile.

PAL & NTSC Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending fields with the odd lines to the screen first, followed by the fields with the even lines, both fields are written at one time. A flicker-free high resolution image is created giving you the best viewing experience.

Video Upsampling

Video Upsampling is a technology that decreases distortion to dramatically improve picture quality. Increasing the video processing to 54MHz or even 108MHz, is in effect converting the video to 8:8:8* (54MHz) or 16:16:16 (108MHz) format which has about 4 to 8 time more horizontal resolution bandwidth than in standard DVD format. This processing reduces the MPEG "mosquito net" distortion dramatically resulting in picture quality that is pure and distortion free.

12-bit/108MHz video DAC

12-bit Video DAC is a superior Digital-to-Analogue Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

Multi-format Movies

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

Multi-format Music

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Picture CD (JPEG)

Multi-format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.

Karaoke

The Karaoke feature on your DVD player provides endless entertainment and maximum audio and singing enjoyment. You can enhance your performance by adding an 'echo' effect to your voice. The key controls allows you to choose the optimal key for your personal vocal range.



Date of issue 2007-01-15

Version: 2.0

12 NC: 8622 810 11529
EAN: 87 10895 79384 1

© 2007 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com