



Philips  
wireless portable speaker

Bluetooth® and NFC

Splash-proof  
Rechargeable battery  
Camouflage



BT6000C

## Small is Great

Big sound 360° around

Chuck the speaker down any way you like, vertical or horizontal. 360° sound means you get big sound all around, every time. Splash-proof, rugged and equipped with wireless music streaming it brings warm, natural sound wherever you go.

### Sound that blows you away

- Two speaker drivers & passive radiators give immersive sound
- Digital Sound Processing for lifelike sound without distortion
- 14 W RMS total output power

### Advanced versatility

- Wireless music streaming via Bluetooth
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Built-in microphone for hands-free phone calls
- Audio-in for easy portable music playback

### Designed to go places


- Splash-proof design ideal for outdoor use (IPX4)
- Built-in rechargeable Li-ion battery for playback anywhere
- Carrying pouch included

# PHILIPS

wireless portable speaker  
Bluetooth® and NFC Splash-proof, Rechargeable battery, Camouflage

# Highlights

## Wireless music streaming

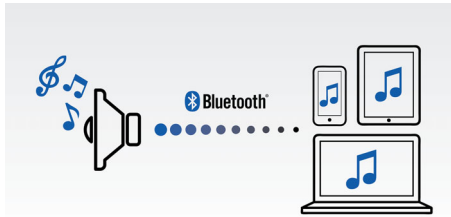


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

## Twin speaker drivers



Twin 1.5" Neodymium speaker drivers deliver natural, clear and balanced sound while dual opposing passive radiators extend and boost bass. Front and back full-range speaker drivers create even 360-degree sound, offering the freedom to enjoy the same quality sound wherever the speaker is facing.


## Digital Sound Processing

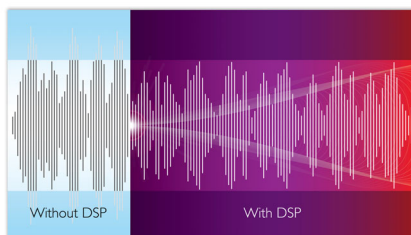

Advanced sound processing technology enhances the reproduction of your music so that each note

resonates with crystal-clear accuracy, and each pause is sealed with pristine silence. Philips' proprietary Digital Sound Processing technology optimises the performance of compact speaker boxes, delivering sound that is clear, detailed and powerful without any distortion.

## NFC technology

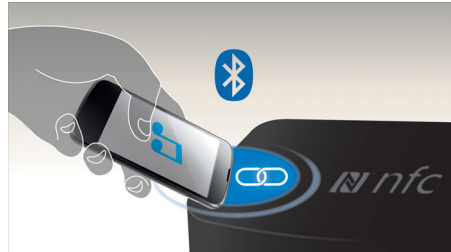

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

## Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

## AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

BT6000C/10

# Specifications

## Accessories

- Included: Carrying pouch, USB adapter, USB charging cable, Quick start guide, Warranty certificate, Worldwide warranty leaflet

## Design and finishing

- Colour: Green

## Compatibility

- works with: most Bluetooth smartphones, tablets, music devices
- iPad: iPad 1, iPad 2, new iPad, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus
- iPod touch: 3rd generation or later
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above

## Sound

- Output power (RMS): 2 x 7 W
- Sound System: Stereo
- Speakers: 2 x 1.5"
- Volume Control: rotary

## Loudspeakers

- Speaker drivers: Neodymium magnet system

## Connectivity

- NFC: Tap-to-pair Bluetooth; works with Android 4.0 or above, and Windows phone 8 or above
- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)

## Convenience

- Water resistance: IPX4
- Built-in microphone: for speaker conference

## Power

- Battery type: Lithium-ion (built-in)
- Operating time on battery: 8 hr
- Power supply: 5V, 2A (USB adapter)

## Dimensions

- Product dimensions (WxDxH): 188 x 71 x 70 mm
- Packaging dimensions (WxDxH): 282 x 105 x 108 mm
- Product weight: 0.49 kg
- Weight incl. Packaging: 0.79 kg



Issue date 2017-09-09

Version: 1.0.5

12 NC: 8670 001 28157  
EAN: 48 95185 61348 2

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)