

Philips  
docking station for iPod/  
iPhone

• Aluminium

DC290



## Rise and shine

to great music from your iPhone/iPod

Wake up gently to great music from your iPhone/iPod, or get updated with news from the radio with the Philips DC290. Make your mornings brighter with crystal clear sound and add a dash of style to your bedroom with the aluminium cabinet.

### Rich and clear sound

- Play and charge your iPod/iPhone simultaneously
- MP3 Link for portable music playback
- Digital Sound Control for optimised music style settings
- Dynamic Bass Boost for deep and dramatic sound
- 10 W RMS total output power

### Start the day your way

- Wake up to your iPod/ iPhone music or radio tunes
- Weekday/weekend alarm setting to complement your lifestyle
- Gentle wake up call with an increasing alarm volume
- FM digital tuning with presets

### Design that blends into your interior

- Aluminium cabinet

# PHILIPS


# Highlights

## Weekday/weekend alarm



Designed with modern day lifestyles in mind, this clock radio has a dual alarm feature, allowing you to set different alarm times for weekdays and weekends or even vary the alarm settings for couples. The alarm settings can be tailored for the same alarm times for the entire week from Monday to Sunday. Or you can set the alarm for an early start on weekdays from Monday to Friday, and lazy lie-ins for Saturday and Sundays. Whichever you choose, this convenient feature saves you from the hassle of fiddling with different alarm times every single night.

## Play and charge your iPod/iPhone

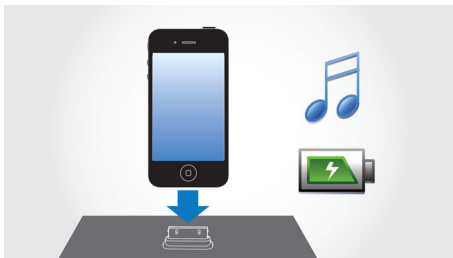

Enjoy your favourite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favourite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically

charges your portable device while it is docked.

## Gentle wake up call



Start your day the right way by waking up gently to a gradually increasing alarm volume. Normal alarm sounds with a pre-set volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favourite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

music by precisely adjusting the sound balance to match the type of music you are playing.

## Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classical controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your

## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.



# Specifications

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS

## iPod compatibility

- Compatible with: iPod touch, iPod touch 2nd Generation, iPod touch 2nd Gen 8/16/32 GB, iPod touch 4th generation, iPod classic, iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod nano 6th generation, iPod 5th Generation, iPod mini

## Audio Playback

- Cradle playback mode: Charging iPhone, Charging iPod, Fast forward and reverse, Next and Previous track, Play and Pause

## Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Station presets: 20
- Antenna: FM Antenna
- Tuner Enhancements: Auto Store

## Convenience

- Clock/Version: Digital
- Alarms: Dual alarm time, Buzzer Alarm, Radio Alarm, Repeat alarm (snooze)
- User convenience: Sleep Timer
- Backlight
- Backlight colour: White
- Display Type: LCD
- Remote Control: Multi-functional

## Sound

- Output power (RMS): 2 x 5 W
- Sound System: Stereo
- Volume Control: Volume Control up/down
- Sound Enhancement: Digital Sound Control, Dynamic Bass Boost

## Loudspeakers

- Built-in speakers: 2
- Main Speaker: Bass Reflex Speaker System

## Connectivity

- MP3-Link: Yes, 3.5 mm jack
- Other connections: FM fixed pigtail antenna

## Power

- Mains power
- Power supply: 220-240 V, 50 Hz

## Dimensions

- Master carton dimensions: 325 x 223 x 305 mm
- Master carton quantity: 2
- Master carton weight: 5 kg
- Packaging dimensions (W x H x D): 310 x 139 x 208 mm
- Weight incl. Packaging: 2.1 kg
- Product dimensions (W x H x D): 263 x 78 x 165 mm
- Weight: 1.6 kg

## Accessories

- Included accessories: User Manual, Warranty certificate, Quick Use Guide, Remote Control
- Cables: MP3 line-in cable



Issue date 2013-05-29

Version: 2.0.4

12 NC: 8670 000 65534  
EAN: 87 12581 55365 4

© 2013 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)