

Philips
DVD player



DVP1120



Simply plays it all

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos, with absolutely no compromise to picture quality.

Brings audio and video to life

- 12-bit/108 MHz video processing for sharp, natural images
- 192 kHz/24-bit audio DAC enhances analogue sound input
- High-quality outputs for analogue and digital audio
- Progressive Scan component video for optimised image quality

Plays all your movies and music

- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos

Fits any space, any lifestyle

- Ultra-slim design that fits anywhere

PHILIPS
sense and simplicity

Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling

Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1 kHz): 65 dB
- Crosstalk (1 kHz): 70 dB
- Dynamic Range (1 kHz): 80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, Dolby Digital, PCM, WMA

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow

Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3

Connectivity

- Rear Connections: ComponentVideo out
Progressive, Digital coaxial out, CVBS & analogue audio L/R output

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Hindi

Power

- Power consumption: < 10 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.8 W

Accessories

- Included Accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, World Wide Warranty leaflet, User Manual


Dimensions

- Packaging dimensions (W x H x D):
300 x 335 x 92 mm
- Set dimensions (W x H x D): 360 x 37 x 52 mm




Highlights

192 kHz/24-bit audio DAC

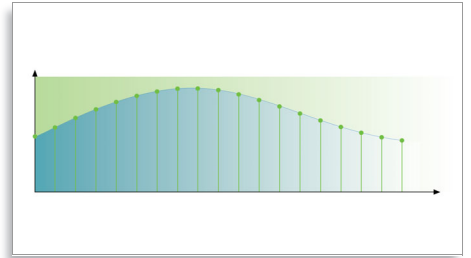

192 kHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Progressive Scan

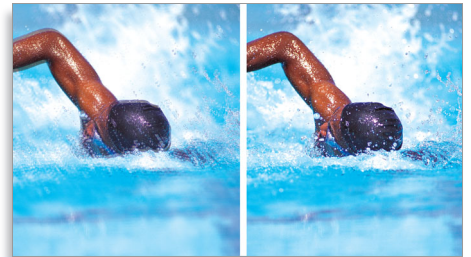

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Plays it all

Play MP3s, WMA and JPEGs, and experience the convenience of sharing media files on your TV or home theatre system - in the comfort of your living room.



Issue date 2009-08-27

Version: 1.0.1

12 NC: 8670 000 35084
EAN: 87 12581 37561 4

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com