



Philips  
Original radio mini

**Bluetooth®**

DAB+, FM  
Dual alarm, Kitchen timer  
4W

**ORT2300B**

## Control your Original radio mini wirelessly

with free DigitalRadio app

Get smooth grooves with this Original radio mini. A modern interpretation of the iconic Philetta delivering DAB+ and FM radio, also music wirelessly from smart devices via Bluetooth. A built-in kitchen timer adds a touch of convenience.

### High fidelity radio experience

- Bluetooth music streaming from your smartphones or tablet
- DAB+ and FM compatible for a complete radio experience
- More channels enjoyed with 20 DAB and 20 FM preset stations

### Easy to use

- Auto time synchronization ensures accurate time without fuss
- Large backlit LCD display for easy viewing in low light
- Built-in countdown timer for convenience in the kitchen
- Audio-in for easy portable music playback

### Start the day your way

- Weekday/ weekend alarm setting to complement your lifestyle
- Dual alarm to wake you and your partner at different times
- Sleep timer for easy falling asleep to your favorite music

### Contemporary retro design

- Contemporary reinterpretation of the iconic Philetta design

# PHILIPS

Original radio mini  
Bluetooth® DAB+, FM, Dual alarm, Kitchen timer, 4W

# Highlights

## Iconic Philetta design

Inspired by 1955 Original Radio - This original radio mini carries forward the iconic elements of the legendary 1955 Philips radio, also known as Philetta "BF 102 U". At the time this compact radio wowed its audiences with simplicity design, big sound and crystal clear reception. Philips radio heritage dates back to 1927. Over the decades many models have become renowned radio icons and collectors' items.

## DAB+ and FM compatible


DAB+ and FM compatible for a complete radio experience

## 20 DAB & 20 FM preset stations



With 20 DAB and 20 FM preset stations, your favorite channels are always only the push of a few buttons away. To program a preset, simply tune into the desired station, then press and hold the preset button. This quick procedure allows the radio frequency to be automatically stored – for easy access whenever you like.


## Auto time synnchronization

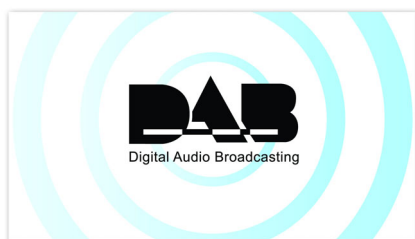

With the automatic time setting function in your clock radio, you do not ever have to set the time. The clock synchronizes with radio signals automatically, even when it is switched off. It updates itself within one minute when there is an immediate need for adjustment, and makes routine synchronizations with radio signals to ensure it keeps accurate time always.

From the first time you take the clock radio out of the box, to the time a power outage occurs, you can depend on your Philips product to give you the right time, fuss-free and reliably.

## Built-in countdown timer

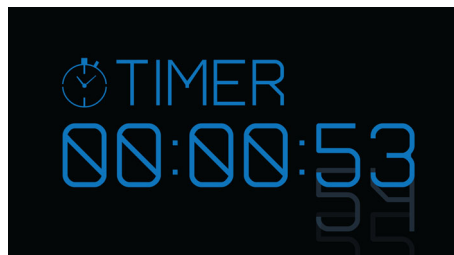

This clock radio provides the best in convenience for everyday life. A built-in countdown timer helps keep an eye on what is being cooked, ensuring safety and well-prepared dishes. Now you can walk away from the stove or oven, and relax with a bit of TV, or do other chores around the home. Once the time is up, a buzzer will sound, reminding you that your meal is ready to be served.

## Large backlit LCD display



Backlit LCD display ensures easy viewing and operation in low light conditions, and provides clear information at a glance.

## Weekday/ weekend alarm




Designed with modern day lifestyles in mind, this clock radio has a dual alarm feature,

ORT2300B/10

allowing you to set different alarm times for weekdays and weekends or even vary the alarm settings for couples. The alarm settings can be tailored for the same alarm times for the entire week from Monday to Sunday. Or you can set the alarm for an early start on weekdays from Monday to Friday, and lazy lie-ins for Saturday and Sundays. Whichever you choose, this convenient features saves you from the hassle of fiddling with different alarm times every single night.

## Dual alarm

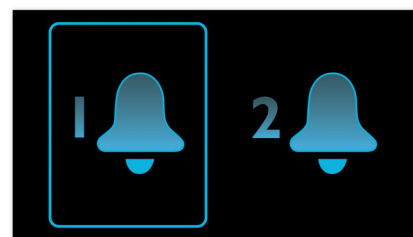

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

## Sleep Timer



Sleep timer lets you decide how long you want to listen to music or a radio station of your choice before falling asleep. Simply set a time limit (up to 2 hours) and choose a CD or radio station to listen to while you drift off to sleep. The set will continue to play for the selected duration and then automatically switch off to a power-efficient, silent stand-by mode. Sleep Timer lets you fall asleep to your favorite CD or radio DJ without counting sheep or worrying about wasting power.



# Specifications

## Bluetooth® wireless technology

- Profiles: A2DP, AVRCP

## Clock

- Type: Digital
- Time format: 12H, 24H

## Alarm

- No. of alarms: 2
- Alarm source: DAB radio, FM radio, Buzzer
- 24 hours alarm reset
- Snooze (repeat alarm): Yes, 9mins
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

## Tuner/Reception/Transmission

- Tuner bands: DAB (Band III), FM
- DAB: smart scan, menu, info display
- DAB frequency range: 174.9 - 239.2 MHz
- FM frequency range: 87.5 - 108 MHz
- No. of preset stations: 20 (DAB), 20 (FM)
- Auto digital tuning
- Antenna: FM antenna

## Convenience

- Display Type: LCD
- Display brightness: High/ Mid/ Low

## Sound

- Sound system: mono
- Volume control: rotary (digital)

## Loudspeakers

- Built-in speakers: 1

## Connectivity

- Bluetooth
- Audio in (3.5mm)

## USB Charging

- Yes
- 5V, 1A

## Power

- Power type: AC input
- AC power input: 100-240V, 50/60 Hz

## Dimensions

- Product dimensions (WxDxH): 245 x 133 x 122 mm
- Packaging dimensions (WxDxH): 336 x 158 x 183 mm
- Product weight: 1.1 kg

## Accessories

- AC/DC adaptor: with detachable plug (VDE & UK)
- Quick start guide
- Warranty: Warranty leaflet



Issue date 2014-10-10

Version: 1.0.5

12 NC: 8670 001 20766  
EAN: 48 95185 60450 3

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)