



Philips Streamium  
Wireless Music Station  
with My Room, My Music  
and Music Broadcast -  
Party mode!

**Streamium**

**WAS5**

## Access your music collection in every room

### Add to your sound system

Access your entire CD collection and listen in every room. Just connect to your current sound system and music can finally follow you wherever you are in the home. Easy navigation with the Remote Control with LCD display

#### **Unlimited listening pleasure - wirelessly**

- Wireless streaming between Music Center and Station(s)
- Multiple user access streams to up to 5 stations streaming
- Wireless streaming from PC via UPnP

#### **Easy navigation and control**

- Direct Content Access to artist, album or playlists
- Music Follows Me: take your music with you from room to room
- Music Broadcast for simultaneous playback to all Stations

#### **Expandable**

- Extend your system by adding up to 5 Wi-Fi Stations

**PHILIPS**  
sense and simplicity

# Highlights

## Wireless streaming



With wireless streaming, you don't need to download and store large music files on our audio device. Instead, you can listen to favorite songs as they are continuously streamed to all the Music Stations - at the same time. Have your music follow you from room to room with Music Follows Me - no need to restart navigation and playback. Music Broadcast simultaneously broadcasts your desired music from the Center to all Stations. And with My Room, My Music, any family member can enjoy selected music from the stored collection in any room that is equipped with a Wireless Music Center or Station.

## Multiple User Access

Different family members in five different rooms can access & listen to their own choice of music from the Wireless Audio Center at the same time.

## Universal Plug & Play


Universal Plug & Play is an industry standard technology that lets you connect to any Universal Plug & Play enabled device to receive or transmit music. Your Wireless Music Center utilizes Universal Plug & Play to ensure an easy and standard way to connect to other

Universal Plug & Play enabled devices. You can easily connect your Wireless Music Center to other media devices to receive or to transfer content.

## Direct Content Access


No more searching through hundreds of your CDs to find your favorite track by a particular artist. With the intuitive User Interface built-in the Philips Wireless Audio Center, you can now have almost instantaneous and direct access to your stored digital music collection on the hard disk (up to 750 CDs) and go straight to the music you want to listen to, listed by Artist, Album, Playlist, Genre or Tracks.

## Music Follows Me

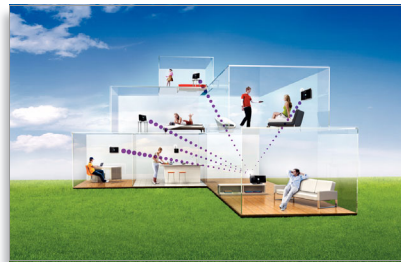


Music follows Me feature allows you to bring your favorite music from room to room in your house without having to restart navigation and playback of that particular track. By simply pressing a button, your favorite song will follow you anywhere you go in your house.

## Music Broadcast - Party mode!

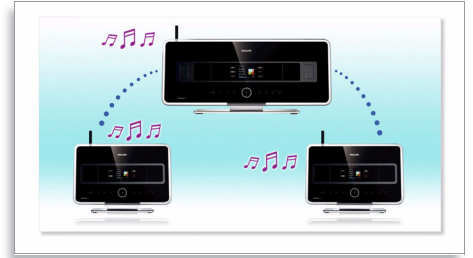

Be your own DJ at your home party and simultaneously broadcast your favorite dance music from the Wireless Music Center to all Wireless Music Stations installed in various parts of your home. Great for parties!

## Add up to 5 Wi-Fi Stations

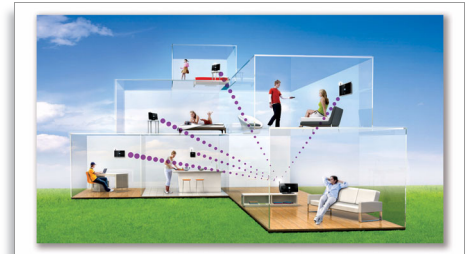

Fill any or every room in your home with all your music. No wires, cable or hassles and definitely no more tussles with family members over music choices. Not only can you store and play your music from the Streamium wireless music center, but you can also stream one track - or different tracks - to up to 5 Streamium stations around your home. It's easy with the built-in, innovative features such as My Room, My Music and Music Broadcast. Free your music and enjoy it anywhere in your home.




My room my music



Music broadcast



Music broadcast



Music follows me



My room my music



POWERED BY



gracenote.

# Specifications

## Audio Playback

- Compression format: PCM, MP3, WMA
- Hard Disk Playback Mode: Album, Genre, Playlist, All tracks, Same Artist, Same Genre
- Hard Disk Streaming Mode: Wi-Fi streaming to 5 stations, "My Room, My Music", "Music Follows Me", "Music Broadcast"
- ID3-tag support
- Backlight color: White
- Eco Power Standby: 1 watt
- On-Screen Display languages: Dutch, English, French, German, Italian, Spanish
- Signal strength indication

## Connectivity

- Rear Connections: Line out
- Wireless connections: Wireless LAN(802.11g)
- Wireless Universal Plug & Play: Enabled
- Power: 220 V 50 Hz

## Convenience

- Backlight

## Accessories

- Batteries: 1 x Lithium Coin Cell
- Remote control: card type

## Dimensions

- Carton dimensions (WxDxH): 285mm W x 110mm H x 280mm D
- Master carton weight: 0.9 kg
- Product dimensions (WxDxH): 45mm W x 145mm H x 172mm D
- Set weight: 0.8 kg



Issue date 2009-06-12

Version: 2.0.3

12 NC: 9073 100 13061  
EAN: 87 10895 93091 8

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* Windows logo are trademarks, or registered trademarks of  
Microsoft Corporation in the United States and/or other countries.