



Philips
5.1 DVD Home theater

Bluetooth
HDMI ARC & USB
Karaoke

HTD3520G

Powerful surround sound from compact speakers

Pump up your home entertainment experience with the Philips home cinema system. Exposed speakers drivers offering 300W powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

Great listening experience

- 300W RMS power delivers great sound for movies and music
- Dolby Digital for ultimate movie experience

Simply enjoy all your entertainment

- Bluetooth wireless music streaming from your music devices
- DivX Ultra Certified for enhanced DivX video playback
- HDMI for high definition movies and picture quality
- Karaoke for endless singing entertainment at home
- EasyLink to control all HDMI CEC devices via a single remote
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Plays DVD, VCD, CD and USB devices

PHILIPS


Highlights

300W RMS power



300W RMS power delivers great sound for movies and music

Dolby Digital

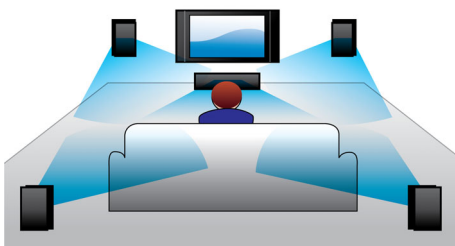

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to

save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Karaoke for endless singing




Karaoke for endless singing entertainment at home

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Bluetooth wireless streaming

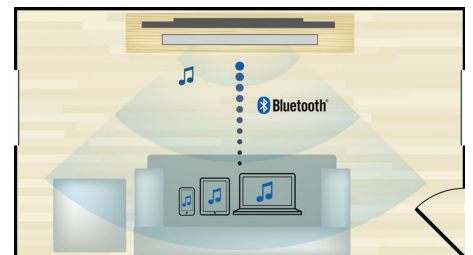

Bluetooth wireless music streaming from your music devices



Specifications

Sound

- Sound System: Dolby Digital 5.1
- Cube speaker output power: 5 x 50 W
- Subwoofer output power: 50 W
- Total Power RMS @ 30% THD: 300 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode

Loudspeakers

- Loudspeaker types: 5 x Cube speakers
- Drivers per Cube speaker: 1 x 2.5" woofer
- Cube speaker freq range: 150 - 20k Hz
- Cube speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2

Picture/Display

- Picture enhancement: Video upscaling

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

Still Picture Playback

- Picture Enhancement: Rotate, Zoom
- Picture Compression Format: BMP, GIF, JPEG, TIFF

File Format

- Audio: mp3, wma
- Picture: JPEG, BMP, GIF
- Video: avi, divx, mpeg, mpg

Connectivity

- Front Connections: Hi-Speed USB, Microphone In, Audio in
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, Fixed FM Antenna, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks
- Integrated Connections: Bluetooth

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC)

Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

Power

- Power consumption: 50 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: HDMI cable, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet, AAA Battery (x1)

Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Center Speaker (W x H x D): 85 x 88 x 83 mm
- Centre Speaker cable length: 1.2 m
- Front Speaker (W x H x D): 85 x 88 x 83 mm
- Front Speaker cable length: 2.2 m
- Rear Speaker (W x H x D): 85 x 88 x 83 mm
- Rear Speaker cable length: 7.2 m
- Subwoofer (W x H x D): 195 x 265 x 265 mm
- Subwoofer cable length: 2.2 m

Outer Carton

- EAN: 48 95185 60251 6
- Gross weight: 7.58 kg
- Outer carton (L x W x H): 46.7 x 37.6 x 34.1 cm
- Nett weight: 6.45 kg
- Number of consumer packagings: 1
- Tare weight: 1.13 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 46.7 x 34.1 x 37.6 cm
- EAN: 48 95185 60251 6
- Gross weight: 7.58 kg
- Nett weight: 6.45 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.13 kg
- Type of shelf placement: Laying

Product dimensions

- Product dimensions (W x H x D): 36 x 5.5 x 33.5 cm
- Weight: 2.21 kg



Issue date 2015-09-23

Version: 3.0.3

12 NC: 8670 001 18111
EAN: 04 89518 56025 16

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.