



Philips  
5.1 Home theatre

3D Blu-ray  
dock iPod/iPhone

HTS5562



## Enjoy powerful home cinema with 3D Angled Speakers

### Obsessed with sound

Maximise your home cinema sound experience with dynamic 3D Directional Angled Speakers! Play all your favourite entertainment content including 3D Blu-ray on this innovative Philips 5000 series home cinema system.

#### Great listening experience

- 1000 W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 3D Angled Speakers disperse sound evenly around the room
- DoubleBASS technology for fuller and deeper bass

#### Designed to enhance your cinema at home

- Unique touch controls for easy access to your content
- Wireless rear speakers option for clutter free placement

#### Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Smart TV to enjoy online services and access multimedia on your TV

**PHILIPS**


# Highlights

## 3D Angled speakers



3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

## Wireless rear speakers option

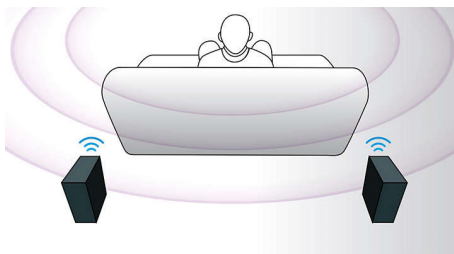

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. Watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images creates the


full HD 3D viewing experience in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high-quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Smart TV



Philips home theatre systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and start browsing for services like video-on-demand shops\* for the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and movies stored on your PC from the comfort of your sofa. Can't find the remote control? Simply use your smartphone or tablet PC to control your home theatre via the Philips MyRemote app.

## Dolby TrueHD and DTS-HD

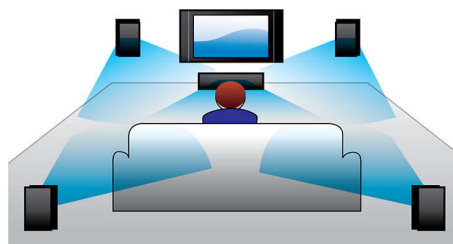

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master

Audio Essential complete your high definition entertainment experience.

## 1000 W RMS power




1000 W RMS power delivers great sound for movies and music

## DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you get a full, uncompromised listening experience.

## Unique touch controls

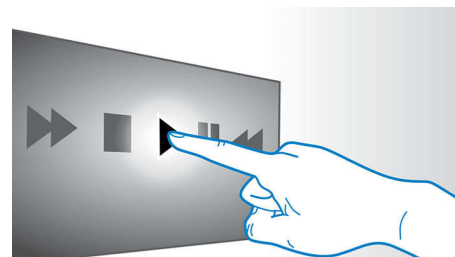

Touch controls allow you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the main unit.

# Specifications

## Sound

- Sound Enhancement: Dialogue Enhancer, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Subwoofer output power: 230 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Centre speaker output power: 230 W
- Satellite speaker output power: 135 W x 4
- Total Power RMS @ 30% THD: 1000 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Centre speaker drivers: 2 x 3" full range woofers
- Satellite speaker freq range: 150–20k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer freq range: 20–150 Hz
- Centre speaker impedance: 3 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Centre speaker freq. range: 150–20k Hz
- Drivers per Satellite speaker: 2 x 3" full range woofers
- Subwoofer impedance: 3 ohm

## Connectivity

- Front/Side connections: Music iLINK, USB/Wi-Fi slot
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Wireless Rear Audio
- Smart TV: DLNA, MyRemote, Net TV

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Pre-set Channels: 40
- RDS: Station Name

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep colour

## Power

- Power consumption: 105 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5 W

## Accessories

- Compatible accessories: RWSS5510 Wireless Rear

Audio, STS1300 Floor stand

- Included accessories: 2 x AAA Batteries, DCK3060 Dock for iPod/iPhone, FM antenna, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, WUB1110 Wi-Fi USB Adaptor

## Dimensions

- Main Unit (W x H x D): 435 x 57 x 357 mm
- Weight incl. Packaging: 18.8 kg
- Main Unit Weight: 3.7 kg
- Packaging (W x H x D): 400 x 494 x 600 mm
- Centre Speaker (W x H x D): 280 x 95 x 92 mm
- Centre Speaker Weight: 1.4 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 100 x 280 x 104 mm
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Front Speaker Weight: 1.03 kg
- Subwoofer Weight: 4.8 kg
- Front Speaker cable length: 4 m
- Rear Speaker (W x H x D): 100 x 280 x 104 mm
- Rear Speaker Weight: 1.03 kg
- Rear Speaker cable length: 10 m
- Subwoofer cable length: 3 m

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

## File Format

- Audio: aac, mka, mp3, wav, wma
- Video: asf, avi, DivX, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Matching Philips Televisions\*

- 5000 Series: 32PFL5406, 32PFL5606, 40PFL5606

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soy based ink

## Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD



Issue date 2024-05-07

Version: 6.3.6

EAN: 87 12581 59199 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* The home theatre can also be matched with all other Philips TVs.  
\* To check whether Video on Demand is available in your country,  
please visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray).