


Philips ActionFit
Sports headphones with
mic

Best for indoor use
Sweat/water proof
In Ear

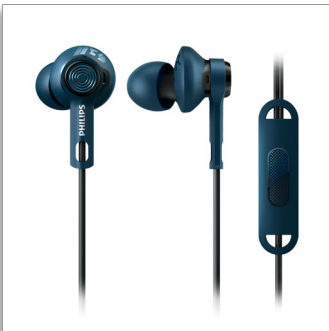

SHQ2405BL

PUSH YOUR LIMITS

Secure fit headphones with stability ring

Philips Actionfit DigDeep sports headphones stay firmly in your ears so you can stay focused on your workout. With a unique stability ring for a more secure fit, your music stays locked in, to keep you in the zone.

Intensity

- High performance sound pushes you further
- Get immersed in your workout with noise isolation

Freedom

- Extreme comfort for training: 4.3gm ultra-light headphones
- Stability ring creates a more secure fit in the ear
- Cable clip included for tangle-free workout
- 3 ear-tip sizes for the optimum fit
- Control your music and pick up calls while training

Protection

- Ideal for intense workouts with IPX4 water resistance
- Kevlar® reinforced cable for ultimate durability
- Washable after workouts

PHILIPS

Sports headphones with mic
Best for indoor use Sweat/water proof, In Ear

SHQ2405BL/00

Highlights

3 ear tip sizes



Your ActionFit headphones come with 3 pairs of ear tips of different sizes, so you get the best possible fit.

Extra durable Kevlar® cable



Your ActionFit headphones are designed for durability and strength. Its Kevlar-coated cable is well protected against tearing and breaking, and can withstand extreme environments — and workouts.

High-performance sound



8.6-mm (0.3") drivers pump out high performance sound, pushing you to perform at your best.

Mic and control




Stay connected. The built-in microphone and track controls allow you to change music or pick up calls quickly and easily while you train.

Noise isolation

In-ear headphones create a tight seal in the ear canal, resulting in a high-impact noise isolation effect. Meanwhile ergonomic acoustic tubes ensure an optimal fit.

Stability ring for secure fit

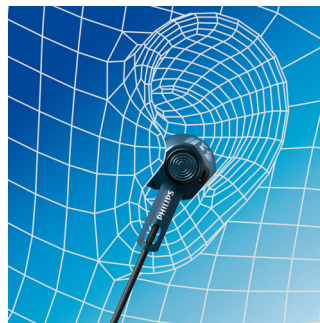

No dropouts. A rubberised stability ring on the headphones' housing locks them in place in your ears.

Sweat-proof and waterproof



Don't be afraid to break a sweat, or venture into the elements. With an IPX4 rating, you

can get sweaty and work out in the rain without any moisture entering the earpiece.

Tangle-free workout



A cable clip keeps the wires out of your way while you push yourself harder.

Ultralight design



Your ActionFit headphones weigh in at a mere 4.3gm, making them ultra lightweight and a pleasure to wear. In fact, you will hardly feel them when you're working out — just the superb, powerful sound that keeps you focused and motivated.

Washable

Constructed with waterproof materials, allowing you to wash your headphones under running tap water.

Specifications

Sound

- Diaphragm: PET
- Impedance: 16 ohm
- Sensitivity: 107 dB
- Maximum power input: 20 mW
- Speaker diameter: 8.6 mm
- Magnet type: Neodymium
- Acoustic system: Closed
- Frequency response: 7 - 24,000 Hz

Connectivity

- Cable Connection: two-parallel, symmetric
- Cable length: 1.2 m
- Connector: 3.5 mm
- Finishing of connector: Gold-plated

Accessories

- Cable management: Cable clip
- Eartips: 3 sizes S,M,L

Inner Carton

- Gross weight: 0.265 lb
- Gross weight: 0.12 kg
- GTIN: 2 69 25970 70969 3
- Inner carton (L x W x H): 18.1 x 8.2 x 6 cm
- Inner carton (L x W x H): 7.1 x 3.2 x 2.4 inch
- Net weight: 0.087 lb
- Net weight: 0.0393 kg
- Number of consumer packages: 3

- Tare weight: 0.0807 kg
- Tare weight: 0.178 lb

Outer Carton

- Gross weight: 2.626 lb
- Gross weight: 1.191 kg
- GTIN: 1 69 25970 70969 6
- Outer carton (L x W x H): 35.3 x 19.9 x 16 cm
- Outer carton (L x W x H): 13.9 x 7.8 x 6.3 inch
- Net weight: 0.693 lb
- Net weight: 0.3144 kg
- Number of consumer packages: 24
- Tare weight: 0.8766 kg
- Tare weight: 1.933 lb

Packaging dimensions

- Packaging dimensions (W x H x D):
5 x 17.3 x 2.5 cm
- Packaging dimensions (W x H x D):
2 x 6.8 x 1 inch
- EAN: 69 25970 70969 9
- Gross weight: 0.0322 kg
- Gross weight: 0.071 lb
- Net weight: 0.029 lb
- Net weight: 0.0131 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.042 lb
- Tare weight: 0.0191 kg
- Type of shelf placement: Both



Issue date 2017-02-24

Version: 4.0.4

12 NC: 8670 001 35091
EAN: 69 25970 70969 9

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

**ear caps are washable; the mic is non-washable