

Philips
DVD home theatre system

Karaoke Scoring

HTS3011



Simply sounds great

with compact speakers

Relax and immerse yourself in movies in your very own living room. Enjoy high quality multi-channel surround sound, along with Karaoke Scoring and playback from practically any type of disc.

Brings audio and video to life

- Dolby Digital and Pro Logic II surround sound
- 12-bit/108 MHz video processing for sharp, natural images
- Advanced Class D Amplifier for compact, powerful sound
- Karaoke scoring for fun and exciting song contests at home

Easy to set up

- Easy-fit™ connectors with colour-coding for a simple setup


Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays DivX, MP3, WMA and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL
- Built-in FM/AM tuner

PHILIPS
sense and simplicity

Highlights

Dolby Digital and Pro Logic II

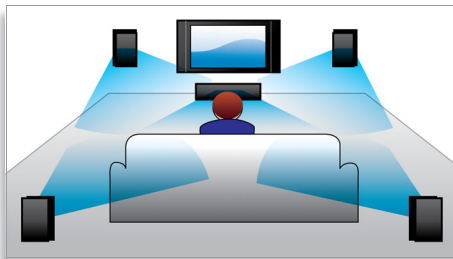

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

12-bit/108 MHz video DAC



12-bit Video DAC is a superior Digital-to-Analogue Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colours, resulting in a more vibrant and natural picture. The limitations of the standard 10-bit DAC become particularly apparent when it is used with large screens and projectors.

Advanced Class D Amplifier




Advanced Class D Amplifier for compact, powerful sound

DivX Ultra Certified




With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra combines DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Karaoke scoring

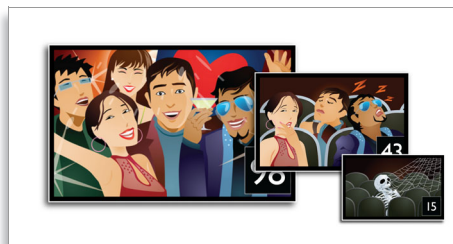


Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

Plays it all

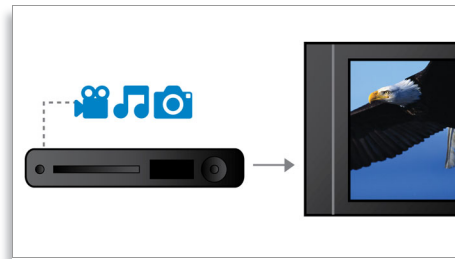


Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG. Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

Plays it all

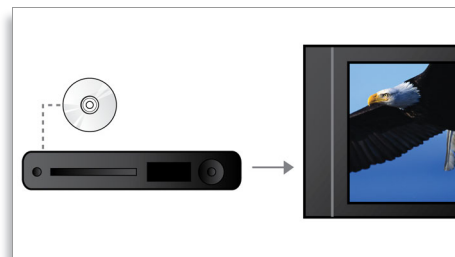

Play virtually any disc you want - whether they are CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW, DVD-RW or DVD+R DL. Experience unbeatable flexibility and the convenience of playing all your discs on the one device.

Easy-fit™ connectors

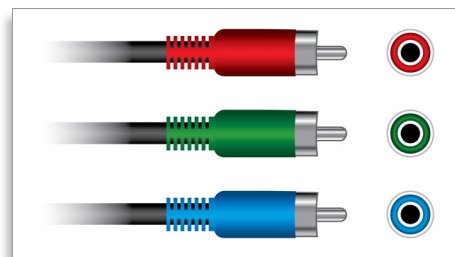

Colour-coded connectors provide a simple and user-friendly solution for connecting the speakers and subwoofer to the centre unit of the home entertainment system simply by plugging the connectors into the matching coloured interface at the rear of the centre unit.



Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive Scan

Sound

- Total Output Power: 200 W
- Output power (RMS): 4 x 25W + 2 x 50W
- D/A converter: 24-bit, 192 kHz
- Frequency response: 180 - 18000 Hz
- Signal to noise ratio: >60 dB
- Sound System: Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Lounge, Rock, Sports

Video Playback

- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG4
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: Audio CD, CD-R/RW, DVD+R/+RW, DVD-R/-RW
- Compression format: MP3, WMA
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW
- Picture compression format: JPEG
- Picture enhancement: Rotate, Zoom, Slideshow with music playback

Tuner/Reception/Transmission

- Tuner Bands: FM, AM
- No. of pre-set Audio Channels: 40

Connectivity

- Rear Connections: Composite video (CVBS) output, FM Antenna, AM/MW Antenna, AUX in, Easy-Fit speaker connectors, Component Video output
- Front/Side connections: Microphone input 3.5 mm jack

Power

- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 1 W
- Power consumption: 40 W

Loudspeakers

- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20,000 Hz
- Centre Speaker: Magnetically shielded
- Centre speaker drivers: 3" full-range woofer
- Centre freq range: 150-20,000 Hz
- Centre speaker impedance: 8 ohm
- Subwoofer driver: 6.5" high-efficiency woofer
- Subwoofer type: Passive
- Subwoofer impedance: 8 ohm
- Subwoofer freq range: 45-150 Hz

Accessories

- Included Accessories: Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, AM antenna, User Manual, Quick start guide, World Wide Warranty leaflet, Power cord, VDE to 2-pin Flat Adapter

Dimensions

- Set dimensions (W x H x D): 360 x 55 x 332 mm
- Set weight: 2.58 kg
- Surround Speaker dimensions (W x H x D): 100 x 95.5 x 83.5 mm
- Surround Speaker Weight: 0.47 kg
- Center speaker dimensions (W x H x D): 100 x 95.5 x 83.5 mm
- Centre Speaker Weight: 0.52 kg
- Subwoofer dimensions (W x H x D): 131 x 315.5 x 386 mm
- Subwoofer Weight: 3.6 kg
- Packaging dimensions (W x H x D): 570 x 310 x 392 mm
- Weight incl. Packaging: 10.4 kg

Outer Box

- Gross weight: 10.12 kg
- Outer carton (L x W x H): 56.2 x 39.4 x 30.7 cm
- Net weight: 8.62 kg
- Tare weight: 1.5 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 56.2 x 30.7 x 39.4 cm
- Gross weight: 10.12 kg
- Net weight: 8.62 kg
- Tare weight: 1.5 kg

Product dimensions

- Cable length: 0 cm
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 kg



Issue date 2009-04-28

Version: 3.0.7

12 NC: 8670 000 36275
EAN: 87 12581 38896 6

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* Avoid extensive use of the set at a volume higher than 85 decibels because this may damage your hearing.