



Philips
Cube DVD micro system

DVD
CD, MP3-CD, USB, FM
24W max

MCD1065



Movie cube

with USB direct playback

Enjoy both movies and music at home. The Philips cube DVD micro system MCD1065 plays DVDs, VCDs, CDs and more, and also features built-in USB Direct for photo and portable music playback. The compact design fits any space, any lifestyle.

Enrich your movie experience

- Play DVD, DivX® Ultra, MP3/WMA-CD, CD and CD-RW
- Dolby Digital for ultimate movie experience
- USB Direct for photos and MP3/WMA music playback

Enrich your sound experience

- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- 24W RMS maximum power

Design that blends into your interior

- Compact design fits any space, any lifestyle

PHILIPS

Specifications

Sound

- Sound Enhancement: Dynamic Bass Boost, Digital Sound Control
- Sound System: Dolby Digital
- Maximum output power (RMS): 24W

Loudspeakers

- Main Speaker: Bass Reflex Speaker System, 3" woofer

Video Playback

- Playback Media: DVD+RW, DVD-Video, Picture CD, Video CD/SVCD, DivX, DivX Ultra
- Disc Playback Modes: Angle, Slow Motion, Zoom, A-B Repeat, PBC, Parental control
- DVD Region.: 3

Audio Playback

- Playback Media: MP3-CD, CD-RW, CD-R, CD, WMA-CD
- Disc Playback Modes: 20-Track Programmable, Repeat/one/all/program, Shuffle Play
- Loader Type: Top
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Repeat, Shuffle

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Station presets: 20
- Tuner Enhancements: Auto Store

Connectivity

- Video Output - Analog: Composite CVBS (yellow cinch)
- Other connections: Line out, FM Antenna, Digital coaxial out
- Headphone: 3.5 mm
- Audio Connections: 3.5mm Line in

Convenience

- Alarms: Sleep timer, CD Alarm, Radio Alarm
- Clock: On main display
- Display Type: LCD
- Backlight color: White

Accessories

- Included accessories: Composite video cable (Y), Guarantee booklet, Quick Use Guide, 3.5mm stereo line in cable
- Remote control: with 2 x AAA batteries

Dimensions

- Main speaker dimensions (W x H x D): 140 x 143 x 198 mm
- Main unit depth: 210 mm
- Main unit height: 143 mm
- Main unit width: 140 mm
- Packaging dimensions (W x H x D): 550 x 200 x 248 mm
- Gross weight: 3.4 kg

Power

- Power supply: 100-240VAC, 50/60Hz




Highlights

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dolby Digital

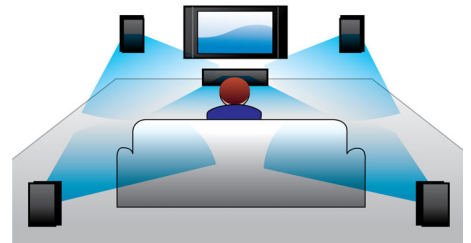

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.



Issue date 2014-06-12

Version: 1.0.4

12 NC: 8670 000 90527
EAN: 87 12581 64581 6

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com