

Philips 3000 series
Blu-ray Disc/ DVD player

3D playback
BD-Live



BDP3380

Explore 3D cinematic experience

With Blu-ray 3D

Bring the magic of movies home in full High Definition with Blu-ray 3D and DivX Plus HD on this sleek player. Conveniently enjoy your favorite video and music files directly from USB flash drives or portable hard disks with USB 2.0.

See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- Access your favorite YouTube videos & Picasa photos easily

Hear more

- Dolby Digital DTS2.0 for ultimate movie experience
- Dolby TrueHD for high fidelity sound

Engage more

- USB 2.0 plays video/music from USB flash/hard disk drive
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- EasyLink to control all HDMI CEC devices via a single remote

PHILIPS

Highlights

Blu-ray 3D Disc playback




Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD

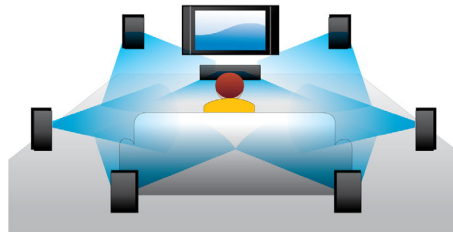

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

Dolby Digital DTS2.0

Dolby Digital DTS2.0 for ultimate movie experience

USB 2.0

The Universal Serial Bus or USB is an industry standard that allows high-speed, easy connection of peripherals to PCs, consumer electronics and mobile products. The USB 2.0 provides better and faster performance - up to 40 times quicker than the USB 1.0 and with a data transfer rate of up to 480 Mbps from the original 12 Mbps. When plugged in, everything configures automatically. With USB 2.0, simply plug in your USB portable devices or hard disk drives, select the movie, music or photo and play away.

BD-Live (Profile 2.0)



BD-Live opens up your world of high definition even further. Receive up-to-date content just

by connecting your Blu-ray Disc player to the internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Access YouTube and Picasa



Get YouTube videos and Picasa photos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn on your computer. Simply ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly over Wi-Fi or with a cable to the LAN connector - then sit back and enjoy the best of YouTube & Picasa.



Specifications

Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- BD Region Code: B
- DVD Region Code: 4
- Compression formats: H.264, MPEG2, XviD, DivX Plus™ HD, MPEG1, MPEG4
- Disc Playback Modes: Standard Play, Pause, Search forward/reverse, Resume Playback from Stop, Slow Forward, Skip, Disc Menu, Repeat, A-B Repeat, Zoom, Angle
- Video Enhancement: Deep Color, x.v. Color, Video Upscaling, Progressive Scan

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front Connections: USB 2.0
- MyRemote App: SimplyShare, Virtual Remote
- Rear Connections: Analog audio Left/Right out,

- Composite video (CVBS) output, Digital coaxial out, Ethernet, HDMI output
- PC network link: DLNA 1.5 certified

Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- On-Screen Display languages: English

Dimensions

- Product (W x H x D): 435 x 38 x 212 mm
- Product weight: 1.37 kg
- Packaging (W x H x D): 495 x 87 x 300 mm
- Weight incl. Packaging: 2.16 kg

Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- D/A converter: 12Bit/148MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling, Progressive scan

Power

- Power consumption: 12 W
- Power supply: 220-230V
- Standby power consumption: 0.25 W

Sound

- D/A converter: 24 bit, 192 kHz
- Dynamic Range (1kHz): ≈80 dB
- Frequency response: (20kHz) ±0.5dB (Max./Min. 2ch, DVD) Hz
- Signal to noise ratio: 80dB
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out



Issue date 2015-08-07

Version: 4.3.4

12 NC: 8670 000 85611
EAN: 87 12581 62859 8

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Philips Wi-Fi USB adaptor WUB1110 required (sold separately)
* To enjoy SimplyShare, please visit www.philips.com/Support