



Philips
docking speaker with
Bluetooth®

Bluetooth®
with Lightning connector
for iPod/iPhone/iPad
30W, rechargeable battery



DS8400

Fill your home with incredible sound, wirelessly

The DS8400 docking speaker gives great sound from iPod/iPhone/iPad via Lightning connector. Get more out of your music, gaming & video experience now. With Bluetooth streaming & rechargeable battery, you can enjoy music anywhere, wirelessly.

Exceptional sound performance

- SoundCurve for superb crystal-clear sound
- Pure digital processing technology for best sound clarity
- Optimal acoustic volume to match speakers' requirements
- Precisely tuned bass pipes for deep, tight bass reproduction

Enjoy your favorite music

- Fast charging and play music via Lightning connector
- Audio-in for portable music playback

Advanced flexibility and control

- Wireless music streaming via Bluetooth
- Built-in rechargeable battery for even better portability
- Remote control complements speaker design and finishing
- SoundStudio app for complete control of audio settings

PHILIPS

docking speaker with Bluetooth®
Bluetooth® with Lightning connector, for iPod/iPhone/iPad, 30W, rechargeable battery

DS8400/10


Highlights

Play and charge via Lightning




Enjoy your favorite music while charging your iPod/iPhone/iPad via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while playing, so you don't have to worry about the battery running out.

Wireless music streaming

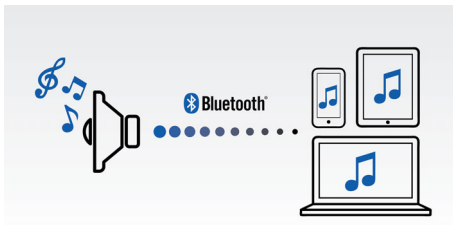

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

SoundCurve

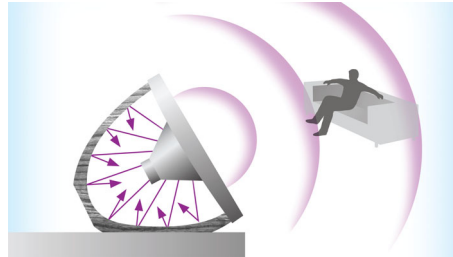

The carefully designed curved back cover of this Philips docking speaker creates a highly effective acoustic structure for sound reproduction. Its clean curve enforces the rigidity of the speaker cabinet, dramatically reducing internal resonance and eliminating the vibration and distortion of sound. You get to enjoy superb crystal-clear sound in stunning looking speakers.

Pure digital sound



Advanced pure digital sound processing technology offers vastly superior sound performance compared to the conventional analog audio processing technology that is found in docking players that use the analog audio output from an iPod/iPhone. By collecting the iPod's/iPhone's digital audio output and employing digital processing at each stage of the circuit, a much higher Signal-to-Noise ratio is produced. The result is unsurpassed sound clarity that is in perfect balance.

SoundStudio App



Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your favorite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.

Audio-in



The Audio in connectivity allows direct playback of Audio in content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.



docking speaker with Bluetooth®

Bluetooth® with Lightning connector, for iPod/iPhone/iPad, 30W, rechargeable battery

Specifications

iPad compatibility

- via Lightning connector: iPad mini, iPad with Retina display
- via Bluetooth: iPad, iPad 2, iPad mini, iPad 4

iPhone compatibility

- via Lightning connector: iPhone 5
- via Bluetooth: iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5

iPod compatibility

- via Lightning connector: iPod nano 7th generation, iPod touch 5th generation
- via Bluetooth: iPod nano 7th generation, iPod touch 5th generation, iPod touch 3rd generation, iPod touch 4th generation

iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iOS 4.3 to iOS 10.3
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

Sound

- Output power: 30 W RMS
- Sound system: stereo
- Volume control: up/down

Loudspeakers

- Speaker drivers: 2 x 3" full range woofers
- Loudspeaker enhancement: bass reflex speaker system

Connectivity

- Bluetooth profiles: A2DP
- Bluetooth range: line of sight, 10M or 30FT
- Bluetooth version: 2.1
- Audio in (3.5mm)

Accessories

- Included accessories: AC Power Cord, Remote Control, Charging base

Dimensions

- Product dimensions (WxDxH): 444 x 180 x 167 mm
- Packaging dimensions (WxDxH): 513 x 225 x 233 mm
- Product weight: 2.805 kg
- Weight incl. Packaging: 3.75 kg

Power

- Power supply: 100 - 240V AC, 50/60Hz
- Battery type: Li-ion (built-in)
- Battery life time: 5 hr



Issue date 2017-12-22

Version: 3.0.5

12 NC: 8670 001 02932
EAN: 87 12581 68759 5

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com