

Philips  
DVD player

HDMI 1080p

DivX Ultra

DVP3360K



## Get sharper, clearer pictures

with HDMI 1080p upscaling

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

### Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW

### Easy to set up and use

- One-touch MP3 creation directly from CDs onto USB sticks
- EasyLink controls all EasyLink products with a single remote

### Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives

### Enjoy enhanced karaoke

- Karaoke scoring for fun and exciting song contests at home

### Brings audio and video to life

- HDMI digital output for easy connection with only one cable
- Progressive Scan component video for optimised image quality
- Screen Fit for optimal viewing every time

**PHILIPS**

sense and simplicity

DVD player  
HDMI 1080p DivX Ultra

# Highlights

## DivX Ultra Certified




With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/W and DVD recordable discs. DivX Ultra merges DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Hi-Speed USB 2.0 Link

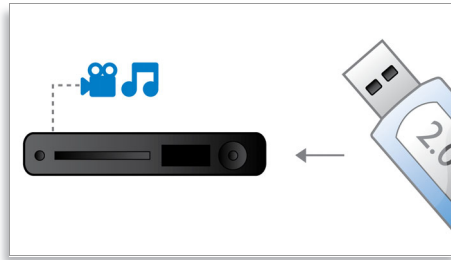

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## Karaoke scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

## One-touch MP3 creation



Convert the contents of your favourite CDs to MP3 files on your Philips product and store

DVP3360K/51


them directly on a thumb drive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC and even while the CD is playing.

## HDMI for simple AV connection



HDMI stands for High Definition Multimedia Interface. It is a direct digital connection that can carry digital HD video as well as digital multi-channel audio. By eliminating the conversion to analogue signals it delivers perfect picture and sound quality, completely free from noise. HDMI is fully backwards-compatible with DVI (Digital Video Interface).

## Screen Fit

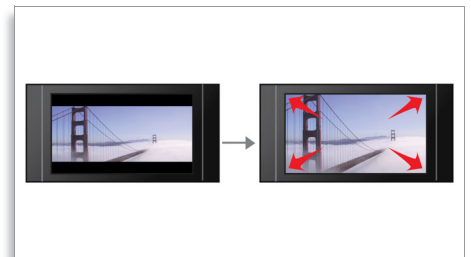

Whatever you're watching, on whatever TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full screen

HDMI™

DIVX®  
ULTRA

DOLBY  
DIGITAL I

PROGRESSIVE  
SCAN

MP3-CD PLAYBACK

energy  
ENERGY STAR

HD JPEG

DVD  
VIDEO

# Specifications

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive scan, Video upscaling, Video Upscaling (720p, 1080i/p), High Def (720p, 1080i, 1080p)

## Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1 kHz): 80 dB
- Crosstalk (1 kHz): 90 dB
- Dynamic Range (1 kHz): 80 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DVD-Video, DivX
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra
- Video disc playback system: PAL

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, Dolby Digital, PCM, WMA

## Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Zoom, Slideshow, Flip photos, High Definition Resolution, Slideshow with MP3 playback

## Connectivity

- Rear Connections: Analogue audio Left/Right out, Component Video out Progressive, Digital coaxial out, HDMI output
- Front/Side connections: USB, Microphone

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: Brazilian Portuguese, English, Mexican Spanish

## Power

- Power consumption: < 10 W
- Power supply: 230 V, 50 Hz
- Standby power consumption: < 1.0 W

## Accessories

- Included accessories: 2 x AAA Batteries, Remote Control, User Manual, Warranty Leaflet, Audio/Video cable, Power cord, Quick start guide

## Dimensions

- Packaging dimensions (W x H x D): 415 x 82 x 282 mm
- Set dimensions (W x H x D): 360 x 37 x 210 mm

## Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3, DivX
- Multimedia connections: USB memory class device



Issue date 2009-12-21

Version: 1.0.8

12 NC: 8670 000 50844  
EAN: 87 12581 47282 5

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)