

Philips
Micro Hi-Fi System

MP3/WMA-CD playback

USB Direct

MCM177



Great sound in a stylish design

with USB Direct playback

Specifically designed for one who appreciates the ultimate in technology and style, the system exudes finesse and quality. With USB Direct, you can play and remote control your MP3/WMA files from your portable player and USB storage devices.

Enrich your sound experience

- Enjoy MP3/WMA music directly from your portable USB devices
- Play MP3/WMA-CD, CD and CD-RW
- Digital Sound Control for optimised music style settings
- Dynamic Bass Boost for deep and dramatic sound
- Loudness for bass and treble enhancement
- 2 x 10 W RMS total output power

Easy to use

- FM digital tuning with presets
- Wake-Up and Sleep Timer

Refined in sound and look

- Elegant wood-finished speakers

PHILIPS
sense and simplicity


Highlights

USB Direct for MP3/WMA music



Simply plug in your device to the USB port on your Philips Hi-Fi system. Your digital music will be played directly from the device. Now you can share your favourite moments with family and friends.

Digital Sound Control

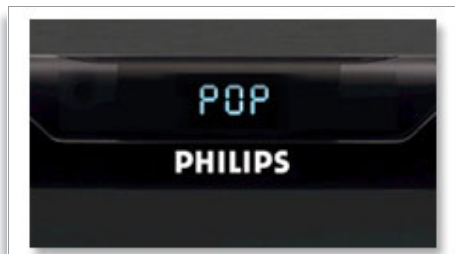

Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classical controls

you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be

switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Loudness for bass and treble

In the sound spectrum, high and low frequencies are relatively less audible to human ears - especially at low volumes. With the Loudness feature activated, the bass and treble will be amplified so you can savour a more balanced sound perception overall.



Specifications

Sound

- Output Power: 2 x 10 W RMS/2 x 20 W music power
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost, Loudness

Loudspeakers

- Main Speaker: 4" woofer, Bass Reflex Speaker System

Audio Playback

- Playback Media: WMA-CD, MP3-CD, CD, CD-R, CD-RW
- Disc Playback Modes: 20-Track Programmable, Repeat/one/all/programme, Shuffle Play, Fast Forward/Reverse, Next/Previous Track Search
- Loader Type: Top
- USB Direct Modes: Fast Reverse/Fast Forward, Play/Pause, Previous/Next, Programme Play, Repeat, Shuffle, Stop

Tuner/Reception/Transmission

- Auto digital tuning
- Station presets: 20
- Tuner Bands: FM Stereo
- Tuner Enhancements: Auto Store

Connectivity

- Other connections: FM Antenna
- Headphones: 3.5 mm

- Audio Connections: 3.5 mm Line in, Analogue Audio In (L/R)
- USB: USB host

Convenience

- Display Type: LCD
- Alarms: CD Alarm, Radio Alarm, Sleep timer, USB alarm
- Clock: On main display
- Backlight colour: Blue
- Eco Power Standby: 1 watt

Accessories

- Included accessories: FM antenna, World Wide Warranty leaflet
- Remote control: 40-key with Lithium batteries
- AC/DC Adapter: Switching power supply
- User Manual: English
- Quick start guide: English

Dimensions

- Set dimensions (W x H x D): 232 x 85 x 275 mm
- Main speaker dimensions (W x H x D): 160 x 250 x 180 mm
- Packaging dimensions (W x H x D): 554 x 405 x 275 mm
- Weight incl. Packaging: 6.9 kg

Power

- Power supply: 100-240 VAC, 50/60 Hz



Issue date 2010-08-19

Version: 1.0.5

12 NC: 8670 000 39592
EAN: 87 12581 42144 1

© 2010 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com