




Philips
MP3 portable speaker

Universal 3.5mm
Black

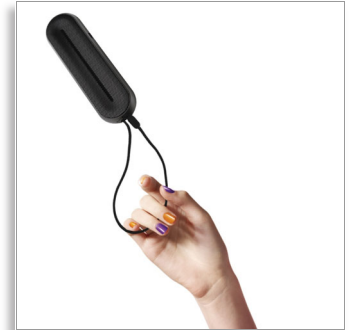

SBA1600BLK

Stereo sound on the go

from a fun, pocket-sized speaker

Move with your music! Enjoy stereo sound wherever you go on a travel speaker with exceptional battery life. Secure the line-in cable to use as a lanyard for easy portability. Inside, a digital amplifier eliminates mobile-phone interference.

Enjoy your music in stereo

- Class 'D' digital amplifier for quality sound performance
- Lightweight, portable design for music enjoyment anytime
- Mobile phone shielding technology for static-free sound
- Universal: works via your device's 3.5mm headphone jack

Take your music with you

- 40 hours of continuous play for worry-free enjoyment
- Battery powered for portability
- Line-in cable becomes a lanyard for easy portability



PHILIPS

MP3 portable speaker
Universal 3.5mm Black

Specifications

Design and finishing

- Color(s): Black

Sound

- Frequency response: 350 - 16,000 Hz
- Impedance: 4
- RMS Power rating: 2 W

Accessories

- Batteries: not included

Power

- Battery type: AAA
- Operating time on battery: 40 hr
- Number of batteries: 3

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Packaging dimensions (W x H x D):
9.6 x 17.4 x 3.1 cm
- Packaging dimensions (W x H x D):
3.8 x 6.9 x 1.2 inch
- Gross weight: 0.11 kg
- Nett weight: 0.019 kg
- Tare weight: 0.091 kg
- Gross weight: 0.243 lb

- Nett weight: 0.042 lb
- Tare weight: 0.201 lb
- UPC: 6 09585 19027 6

Outer Carton

- Number of consumer packagings: 18
- Outer carton (L x W x H): 33 x 22.2 x 22.5 cm
- Outer carton (L x W x H): 13 x 8.7 x 8.9 inch
- Gross weight: 2.75 kg
- Nett weight: 0.342 kg
- Tare weight: 2.408 kg
- Gross weight: 6.063 lb
- Nett weight: 0.754 lb
- Tare weight: 5.309 lb
- GTIN: 2 06 09585 19027 0

Inner Carton

- Number of consumer packagings: 3
- Inner carton (L x W x H): 20.2 x 10.4 x 10.2 cm
- Inner carton (L x W x H): 8 x 4.1 x 4 inch
- Gross weight: 0.395 kg
- Nett weight: 0.057 kg
- Tare weight: 0.338 kg
- Gross weight: 0.871 lb
- Nett weight: 0.126 lb
- Tare weight: 0.745 lb
- GTIN: 1 06 09585 19027 3

SBA1600BLK/27

Highlights

40 hours of continuous play

Powered by batteries, this speaker offers up to 40 hours of continuous play for worry-free enjoyment when you're listening to your music on the go.

Battery powered

Powered by batteries, it's easy to take with you for enjoyment on the go - anywhere and everywhere.

Class 'D' Amplifier

Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.

Lightweight, portable design



The durable, lightweight material and design mean you can carry the speakers with you wherever you go.

Line-in doubles as lanyard

These speakers are ready to go! When it's time to take your music on the go, reconnect the line-in cable and secure it in place to use as a convenient lanyard.

Mobile phone shielding

Mobile phone shielding technology is an advanced circuitry design that cuts out mobile phone interference to ensure static free sound

Universal 3.5mm headphone jack

Plug and play with any of your mobile devices that have a 3.5mm headphone jack – iPod, iPhone, GoGear, MP3 players, laptops, netbooks, music phones and more.



Issue date 2020-07-09

Version: 2.3.6

12 NC: 8670 000 65425
UPC: 6 09585 19027 6

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com