




Philips  
True Wireless  
Headphones

### Natural sound

Noise Canceling  
Clearer calls on the go  
Bluetooth LE Audio

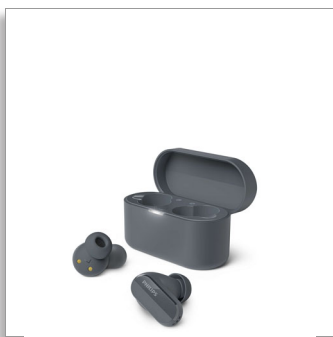

TAT3508BK

## Music to calls, flow through your day

Always be working it! These true wireless noise-canceling earbuds sound great, and they reduce wind noise. You can immerse in your tunes and enjoy clear calls on the go. Slip the charging case into your pocket and you're set for the day.

### Great sound

- Warm, natural sound. Philips sound signature
- Always hear your music. Noise Canceling
- Clearer calls on the go. They'll hear you, not the noise
- Better connectivity and sound. Next-generation Bluetooth\*

### Comfortable and convenient

- Secure, comfortable in-ear fit
- IPX4 splash and sweat resistant
- Multipoint connection and touch controls
- Philips Headphones app. Control noise canceling and more

### Ready for you

- Always ready. Pocket-sized charging case and mono mode
- No worries. Up to 21 hours play time with the case
- Quick charge for 15 minutes and get an extra hour
- Charging case dimensions: 35x62x28 mm

# PHILIPS

## True Wireless Headphones

Natural sound Noise Canceling, Clearer calls on the go, Bluetooth LE Audio

TAT3508BK/00

# Highlights

### Noise Canceling



Noise canceling quiets external noise, including wind, so you can focus on your tunes or calls. Leave it on auto or use the Philips Headphones app to adjust. Want to hear more of what's going on around you? Tap an earbud to activate Awareness Mode.

### Clearer calls on the go



When you're on a call, a dedicated mic picks up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, not the traffic or the chatter of people standing next to you!

### Next-generation Bluetooth



These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec to give you a steadier connection and noticeably better sound. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag if watching movies or gaming.\*

### Philips sound signature

Music to podcasts, love what you hear! These true wireless earbuds feature large 10 mm drivers, tuned to the Philips sound signature. Whatever you're into, you'll enjoy a warm, natural sound with deep bass.

### Pocket-sized charging case

Head out with the small charging case in your pocket and your earbuds will always be ready for you. They'll stay protected and charging when you're not using them, and mono mode means you can use either earbud while the other one charges.

### Multipoint and touch controls

Touch controls on the earbud stalks keep things simple and multipoint lets you connect to two Bluetooth devices (iOS or Android) at the same time. Google Fast Pair lets you pair to a compatible Android device with a single tap.

### IPX4 splash/sweat resistant

Never mind the weather, an IPX4 rating means these earbuds are splash resistant so they don't mind a little rain! Wearing them during a quick workout or on a particularly hot day? They won't mind a little sweat either.

### 21 hours play time with case

You get 7 hours play time from a full charge, and an extra 14 hours from the case. Pop the earbuds back in the case and they'll recharge fully in 2 hours. If you need a quick boost, just 15 minutes gives you an extra hour. The case can be charged via USB-C.

### Philips Headphones app

You can use the Philips Headphones app to customize noise canceling, turn auto wind noise reduction off, and adjust the level of transparency when using Awareness Mode. An equalizer lets you fine-tune your sounds, and you can keep your headphone's software up to date via the app too.

### Secure, comfortable in-ear fit

You get real comfort thanks to soft, interchangeable silicone ear-tip covers. The ear tips insert securely into your ear canal, creating a perfect seal that helps diminish external noise. Plus, the stalks make these earbuds easy to insert and remove.

### Charging case dimensions

Charging case dimensions: 35x62x28 mm

### Quick charge for 15 minutes

Quick charge for 15 minutes and get an extra hour

# Specifications

## Sound

- Frequency range: 20 - 20,000 Hz
- Speaker diameter: 10 mm
- Impedance: 32 Ohm
- Maximum power input: 5 mW
- Sensitivity: 95 dB (1k Hz)
- Driver type: Dynamic

## Connectivity

- Bluetooth version: 5.3
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP, TMAP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: SBC, LC3
- Type of wireless transmission: Bluetooth

## Outer Carton

- Length: 29.5 cm
- Number of consumer packagings: 24
- Width: 25.5 cm
- Gross weight: 3.83 kg
- Height: 27.7 cm
- GTIN: 1 48 95229 13160 3
- Nett weight: 1.584 kg
- Tare weight: 2.246 kg

## Convenience

- Water resistance: IPX4
- Philips Headphones app support
- Google fast pair
- Mono mode for TWS
- Firmware updates possible
- Type of controls: Touch

## Inner Carton

- Length: 13.7 cm
- Number of consumer packagings: 3
- Width: 11.7 cm
- Height: 11.9 cm
- Nett weight: 0.198 kg
- Gross weight: 0.41 kg
- Tare weight: 0.212 kg
- GTIN: 2 48 95229 13160 0

## Power

- Number of batteries: 3 pcs
- Music play time: 7 + 14 hour(s)
- Charging time: 2 hour(s)
- Fast charging time: 15 mins for 1 hr
- Battery type(Charging case): Lithium Polymer (built-in)
- Battery type(Earbud): Lithium Polymer (built-in)

- Battery weight (Total): 11.5 g
- Battery capacity(Case): 400 mAh
- Battery capacity(Earbud): 55 mAh

## Packaging dimensions

- Height: 13 cm
- Packaging type: Box
- Type of shelf placement: Hanging
- Width: 11 cm
- Depth: 4.2 cm
- Number of products included: 1
- EAN: 48 95229 13160 6
- Gross weight: 0.113 kg
- Nett weight: 0.066 kg
- Tare weight: 0.047 kg

## Accessories

- Quick Start Guide
- Eartips: 3 pairs (S/M/L)
- Charging case
- Charging cable: USB-C cable, 200 mm

## Design

- Color: Black
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear tip

## Telecommunication

- Microphone for call: an AI mic
- Wind noise reduction

## Dimensions

- Charging case dimension(WxDxH): 6.28 x 2.81 x 3.54 cm
- Earbud dimension(WxDxH): 2.52 x 2.14 x 2.55 cm
- Total weight: 0.045 kg

## UPC

- UPC: 8 40063 20310 5

## ANC features

- ANC technology: Hybrid
- Awareness mode
- ANC (Active Noise Canceling)
- Auto wind noise cancelation

## Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Manual
- Voice assistant support



Issue date 2024-03-08

Version: 4.0.1

EAN: 48 95229 13160 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Requires a software update. The Philips Headphones app will notify you when the latest software version is available.