

Philips  
5.1 Home theater

3D Angled Speakers  
Blu-ray 3D playback

HTS5560



## Obsessed with sound

True home theater surround sound experience

Maximize your home cinema sound experience with dynamic 3D Directional Angled Speakers! Play all your favorite entertainment content including Blu-ray on the innovative Philips 5000 series home theater system

### Great listening experience

- 3D Angled Speakers disperse sound evenly around the room
- 1000W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- DoubleBASS technology for fuller and deeper bass

### Designed to enhance your living space

- Sleek high gloss finishing with unique touch controls

### Connect and enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Plays 3D Blu-ray Discs, DVDs, VCDs, CDs and USB devices
- Wireless rear audio ready for fewer wires across your room

# PHILIPS


# Highlights

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## 3D Angled speakers

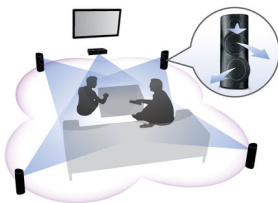

3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

## 1000W RMS power




1000W RMS power delivers great sound for movies and music

## DoubleBASS technology




DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

## Sleek high gloss finishing

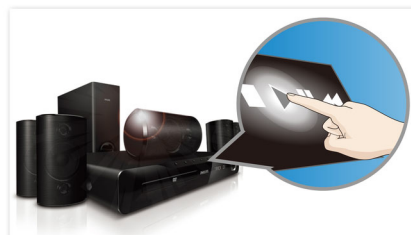


Sleek high gloss finishing with unique touch controls

## Dolby TrueHD and DTS-HD

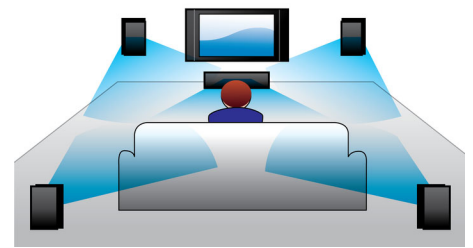

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## Plays it all

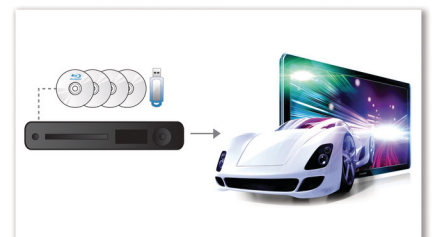

Play virtually any disc and any media format you want - whether they be 3D Blu-ray Discs, DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.



# Specifications

## Accessories

- Included accessories: Remote Control, FM antenna, Power cord, Quick start guide, User Manual, World Wide Warranty leaflet, Batteries for remote control, HDMI cable
- Compatible accessories: DCK3060 Dock for iPod, RWSS5510 Wireless Rear Audio, STS1300 Floor stand

## Audio Playback

- Compression format: MP3, PCM, WMA
- MP3 bit rates: 112 kbps - 320 kbps
- Playback Media: Audio CD, CD-R/RW, DVD+R/+RW, DVD-R/-RW

## Connectivity

- Front / Side connections: Hi-Speed USB, MP3 Line-in
- Rear Connections: AUX in, Component Video output, Composite video (CVBS) output, Digital coaxial in, Dock connector, Easy-Fit Speaker Connectors, FM Antenna, HDMI 1.4 output (ARC), LAN, Wireless Rear Audio

## Dimensions

- Center speaker dimensions (W x H x D): 280 x 95 x 92 mm
- Center Speaker Weight: 0.68 kg
- Front Speaker Depth: 115 mm
- Front Speaker Height: 280 mm
- Front Speaker Width: 100 mm
- Packaging dimensions (W x H x D): 600 x 494 x 400 mm
- Rear Speaker Depth: 115 mm
- Rear Speaker Height: 280 mm
- Rear Speaker Width: 100 mm
- Set dimensions (W x H x D): 435 x 58 x 358 mm
- Set weight: 3.7 kg
- Subwoofer dimensions (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 6.3 kg

## Loudspeakers

- Center freq range: 150-20000 Hz
- Center speaker impedance: 3 ohm

- Satellite speaker freq range: 150-20000 Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 40-150 Hz
- Subwoofer impedance: 3 ohm
- Subwoofer type: Passive

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan

## Power

- Power consumption: 200 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.9 W

## Sound

- Frequency response: 20 - 20000 Hz
- Output power (RMS): 1000 W
- Signal to noise ratio: > 65 dB
- Sound Enhancement: DoubleBass, FullSound, Treble and Bass Control, Dialog Enhancement, Night Mode
- Sound System: Dolby Prologic II, Dolby True HD, DTS 96/24, Stereo, Dolby Digital 5.1, DTS
- Total Power (RMS): 1000 W
- Equalizer settings: Action, Classic, Concert, Drama, Jazz, Rock, Sports

## Still Picture Playback

- Picture Compression Format: GIF, HD JPEG, JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive

## Tuner/Reception/Transmission

- Tuner Bands: FM

## Video Playback

- Compression formats: AVCHD, DivX Ultra, MPEG1, MPEG2, MPEG4, WMV, XviD, MKV
- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, BD Video, BD-R/RE 2.0, Video CD/SVCD
- Video disc playback system: NTSC, PAL



Issue date 2019-02-12

Version: 23.2.7

12 NC: 8670 000 59973  
EAN: 87 12581 52558 3

© 2019 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)