



Philips
5.1 Home theatre

3D Angled Speakers

Blu-ray 3D playback

HTS5560



Obsessed with sound

True cinematic experience with sound evenly spread

Maximise your home cinema sound experience with dynamic 3 Directional Angled Speakers! Play all your favourite entertainment content including Blu-ray on the innovative Philips 5000 series home theatre system

Great listening experience

- 3D Angled Speakers disperse sound evenly around the room
- 1000 W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- DoubleBASS technology for fuller and deeper bass

Designed to enhance your living space

- Sleek high gloss finishing with unique touch controls

Connect and enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Plays 3D Blu-ray Discs, DVDs, VCDs, CDs and USB devices
- Wireless rear audio ready for fewer wires across your room

PHILIPS
sense and simplicity


Highlights

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

3D Angled speakers

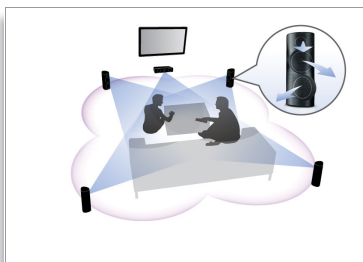

3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

1000 W RMS power



1000 W RMS power delivers great sound for movies and music

DoubleBASS technology




DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you get a full, uncompromised listening experience.

Sleek high gloss finishing




Sleek high gloss finishing with unique touch controls

Dolby TrueHD and DTS-HD

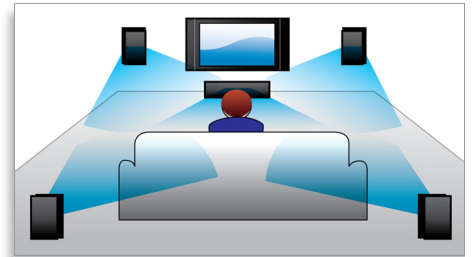

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

Plays it all

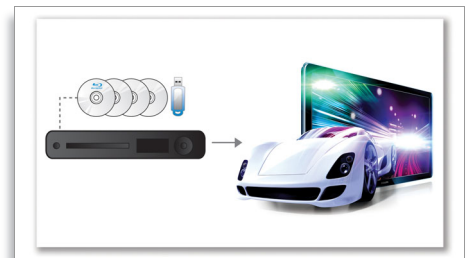

Play virtually any disc and any media format you want - whether they are 3D Blu-ray Discs, DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theatre system.

Specifications

Accessories

- Included accessories: Remote Control, FM antenna, Power cord, Quick start guide, User Manual, World Wide Warranty leaflet, Batteries for remote control, HDMI cable
- Compatible accessories: DCK3060 Dock for iPod, RWSS5510 Wireless Rear Audio, STS1300 Floor stand

Audio Playback

- Compression format: MP3, PCM, WMA
- MP3 bit rates: 112 kbps - 320 kbps
- Playback Media: Audio CD, CD-R/RW, DVD+R/+RW, DVD-R/-RW

Connectivity

- Front/Side connections: Hi-Speed USB, MP3 Line-in
- Rear Connections: AUX in, Component Video output, Composite video (CVBS) output, Digital coaxial in, Dock connector, Easy-Fit Speaker Connectors, FM Antenna, HDMI 1.4 output (ARC), LAN, Wireless Rear Audio

Dimensions

- Center speaker dimensions (W x H x D): 280 x 95 x 92 mm
- Centre Speaker Weight: 0.68 kg
- Front Speaker Depth: 115 mm
- Front Speaker Height: 280 mm
- Front Speaker Width: 100 mm
- Packaging dimensions (W x H x D): 600 x 494 x 400 mm
- Rear Speaker Depth: 115 mm
- Rear Speaker Height: 280 mm
- Rear Speaker Width: 100 mm
- Set dimensions (W x H x D): 435 x 58 x 358 mm
- Set weight: 3.7 kg
- Subwoofer dimensions (W x H x D): 196 x 395 x 342 mm
- Subwoofer Weight: 6.3 kg

Loudspeakers

- Centre freq range: 150-20,000 Hz
- Centre speaker impedance: 3 ohm

- Satellite speaker freq range: 150-20,000 Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 40-150 Hz
- Subwoofer impedance: 3 ohm
- Subwoofer type: Passive

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan

Power

- Power consumption: 200 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.9 W

Sound

- Frequency response: 20–20,000 Hz
- Output power (RMS): 1000 W
- Signal to noise ratio: > 65 dB
- Sound Enhancement: DoubleBass, FullSound, Treble and Bass Control, Dialogue Enhancer, Night Mode
- Sound System: Dolby Prologic II, Dolby True HD, DTS 96/24, Stereo, Dolby Digital 5.1, DTS
- Total Power (RMS): 1000 W
- Equalizer settings: Action, Classic, Concert, Drama, Jazz, Rock, Sports

Still Picture Playback

- Picture Compression Format: GIF, HD JPEG, JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive

Tuner/Reception/Transmission

- Tuner Bands: FM

Video Playback

- Compression formats: AVCHD, DivX Ultra, MPEG1, MPEG2, MPEG4, WMV, XviD, MKV
- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, BD Video, BD-R/RE 2.0, Video CD/SVCD
- Video disc playback system: NTSC, PAL



Issue date 2012-07-17

Version: 23.2.7

12 NC: 8670 000 59973
EAN: 87 12581 52558 3

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com