




Philips
docking speaker with
Bluetooth®

for iPod/iPhone/iPad

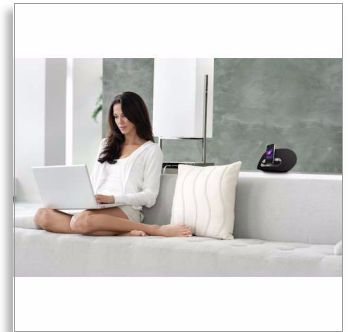

DS3600

Sound that fits your home

Obsessed with sound

On your desk or anywhere else, this dashing docking speaker delivers crystal-clear sound that fills your personal space, and ensures wireless Bluetooth streaming and also synchronize your iPod/iPhone/iPad with your PC.

Crystal clear sound

- DBB to preserve low tones for deep bass at any volume level
- Precisely tuned bass pipes for deep, tight bass reproduction
- Shielding technology to block mobile phone interference
- 20W RMS total output power

Simplicity

- Bluetooth wireless music streaming from iPod/iPhone/iPad
- PC synchronization with your iPod/iPhone/iPad
- AUX-in for easy connection to almost any electronic device
- Remote control complements speaker design and finishing
- Free DockStudio app for internet radio & other cool feature

PHILIPS

docking speaker with Bluetooth®
for iPod/iPhone/iPad

Specifications

iPod compatibility

- Compatible with: iPod, iPod classic, iPod mini, iPod nano, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod touch, iPod touch 2nd generation, iPod touch 2nd gen 8/16/32GB, iPod with color display, iPod 5th generation

iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S

iPad compatibility

- Compatible with: iPad, iPad 2

iPod/iPhone/iPad App

- App name: DockStudio, Free download from App store
- Compatibility: iOS 4.3 to iOS 10.3
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later
- 7000+ Internet radio stations
- 5-day weather forecast
- Playback: album/track navigation, playback controls
- Sound settings: 5 band equalizer, DBB, DSC-Flat, Pop, Rock, Jazz, Classic
- Clock: analog display, digital display
- Alarm: multiple alarms, sleep timer

Sound

- Sound system: stereo
- Volume control: up/down
- Sound enhancement: Dynamic Bass Boost
- Output power: 20 W RMS

Accessories

- Cables/Connection: MP3 Link cable, USB cable
- Remote control

Connectivity

- Aux in
- Bluetooth
- Bluetooth profiles: A2DP, AVRCP
- Bluetooth range: Line of sight, 10M or 30FT

Convenience

- Charging device: iPod, iPhone, iPad

Dimensions

- Product dimensions (WxDxH): 285 x 145 x 140 mm
- Packaging dimensions (WxDxH): 366 x 147 x 169 mm
- Product weight: 1.3 kg
- Weight incl. Packaging: 1.5 kg

Power

- Power supply: 100 - 240V AC, 50/60Hz



DS3600/37

Highlights

Dynamic Bass Boost (DBB)



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Bluetooth music streaming

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to other Bluetooth devices, so you can play your favorite music from your iPod, iPhone or iPad on your Philips audio system - conveniently, anytime you want.

DockStudio app on App Store



The free app adds an array of exclusive cool features to your docking speaker. You can check the weather, tell the time and even use your favorite images as wallpaper. DockStudio also lets you listen to thousands of Internet radio stations worldwide. More updates on skin styles and new functions on the way.



Issue date 2017-12-21

Version: 4.1.3

12 NC: 8670 000 86153
UPC: 6 09585 22262 5

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com