

Philips
Micro Hi-Fi System



MCM240

Unique Style - Great Sound - Wall Mountable

Trendy and progressive, unique innovation and style appeals to you. And so will the vividly chic MCM240 with dynamic sound performance packed in a sleek design with MP3-CD playback that can also be wall mounted.

Longer listening, greater enjoyment

- 10 hours of MP3-CD music

Enrich your sound experience

- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- 2x5W RMS total output power

Start the day your way

- Wake-Up and Sleep Timer
- Digital tuning with 40 preset stations for extra convenience

Watch your disc spin

- Front motorized CD door with viewing window
- Super sleek and flexible wall-mountable design

PHILIPS
sense and simplicity

Highlights

10 hours of MP3-CD music



MP3 stands for "MPEG 1 Audio layer-3".MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

2x5W RMS total output power



2x5W RMS total output power

Wake-Up and Sleep Timer



Many of alarm clocks feature a variety of alarm choices. This Philips Clock radio awakens you to radio or the traditional alarm buzzer. The Sleep Timer allows you to program the required length of time for music to coincide with how long you normally take to fall asleep.

No matter what your alarm clock needs, whether it's a morning buzzer that produces a steady tone, or listening to your favorite music as you go to sleep, this clock radio has it all.

40-preset digital tuning




Digital radio offers you additional music options to your music collection on your Philips audio system. Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

Front motorized CD door

A motorized sliding front door adds even more panache to the already sleek design of this system. The stylish yet functional door housing the disc slides up and down vertically in a smooth motion at the touch of a button whenever you feel like changing your music selection. Just sit back and enjoy the dynamic sound performance while watching the disc play through the transparent window.

Wall-Mountable

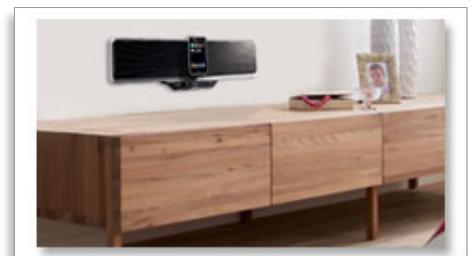

Super sleek and flexible wall-mountable design



Specifications

Sound

- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost
- Output Power: 10W Total Power

Loudspeakers

- Main Speaker: 3" woofer, Bass Reflex Speaker System, Piezo tweeter

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Disc Playback Modes: 40-Track Programmable, Repeat/one/all/program, Shuffle Play
- Loader Type: Front, Motorised

Tuner/Reception/Transmission

- Auto digital tuning
- Tuner Bands: FM Stereo, MW
- Tuner Enhancements: Auto Store
- Station presets: 40

Connectivity

- Headphone: 3.5 mm

- Other connections: AM Antenna, FM Antenna
- Aux in: Line in

Convenience

- Alarms: CD Alarm, Radio Alarm, Sleep timer
- Backlight color: Blue
- Clock: On main display
- Display Type: LCD

Accessories

- Included Accessories: Screws for wall mounting x2, AM/FM Antenna
- Remote control: 23-key with battery

Dimensions

- Weight incl. Packaging: 5.3 kg
- Set dimensions (W x H x D): 250 x 245 x 96 mm
- Packaging dimensions (W x H x D): 305 x 314 x 375 mm
- Main speaker dimensions (W x H x D): 166 x 245 x 90 mm



Issue date 2009-08-09

Version: 2.0.4

12 NC: 9073 100 12793
UPC: 0 37849 96295 4

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com