

Philips
Dual screen portable DVD
player

18cm/ 7" LCD
Dual screens



PD7022



Enjoy your movies on the road

with two widescreen LCDs

Play your movies and music in car! The Philips PD7022 featuring two 7"/18cm TFT LCD display screens let you indulge in enjoying your DVD/DivX[®] movies, music and photos on the road. Install and mount easily for in-car enjoyment.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Enrich your AV entertainment experience

- 17.8 cm/7" TFT color LCD display in 16:9 wide screen format
- Expand movie enjoyment with dual TFT LCD screens
- Built-in stereo speakers

Extra touches for your convenience

- Car adaptor and mounting strap included
- Full Resume on Power Loss
- AC/DC adapter included
- Stereo headphone jack for better personal music enjoyment

PHILIPS

Highlights

18 cm/7" TFT color LCD (16:9)



The color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at top and bottom of the picture and without the quality loss that comes from scaling, altering an image to fit on a different screen size.


MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without

radically degrading their audio quality. A single CD can store up to 10 hours of music.

DVD, DVD+/-RW, (S)VCD, CD

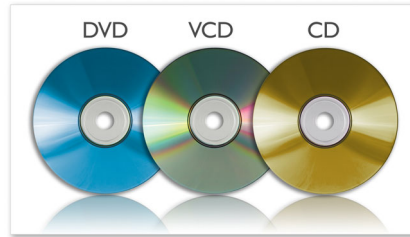

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

Dual TFT LCD display screens



Dual screens allow you to display same videos or images from the portable DVD players.

Simply plug in and mount the screens on the headrests in your car. Now you can enjoy your favorite DVD movies and JPEG photos with family and friends at the backseats easily and comfortably.

DivX Certified

With DivX[®] support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified[®] Philips device.

Power Resume

The DVD-Video player remembers where you stop watching last time when it is powered off directly or when the power supply discontinued. If you did not switch to play another disc, your player will resume play where you have stopped the movie last time just by reloading the disc. Making your life a lot easier!



Specifications

Product dimensions

- Product dimensions (W x H x D):
20 x 15,5 x 5,5 cm
- Weight: 0,906 kg

Packaging dimensions

- Packaging dimensions (W x H x D):
36 x 29,5 x 7,2 cm
- Nett weight: 1,254 kg
- Gross weight: 1,649 kg
- Tare weight: 0,395 kg
- EAN: 87 12581 53151 5
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy

Outer Carton

- Outer carton (L x W x H): 37 x 23 x 30,5 cm
- Nett weight: 3,762 kg
- Gross weight: 5,282 kg
- Tare weight: 1,520 kg
- Number of consumer packagings: 3

Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size: 7 inch / 18 cm
- Resolution: 480(w)x234(H)x3(RGB)

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 10mW RMS(earphone)
- Signal to noise ratio: >80dB(earphone),
>62dB(built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward,

- Fast Forward, OSD, Repeat, Shuffle Play, Zoom, Resume Playback from Stop
- Video disc playback system: NTSC, PAL
- Compression formats: Divx, MPEG4

Audio Playback

- Compression format: Dolby Digital, MP3
- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9V, 0.8A
- Headphone jack: 3.5mm Stereo Headphone x 2
- AV output: Composite (CVBS) x1

Accessories

- AC/DC Adaptor: DC-in 9V, 0.8A (110-240v, 50/60Hz)
- Cables: 3.5mm AV cable
- Car kit: cigarette charger, headrest mounting straps x 2
- User Manual: English
- Second LCD screen: 7" TFT LCD (PAC134) x 1 pcs

Convenience

- Shock proof

Dimensions

- Master carton dimensions: 225 x 305 x 370 mm
- Master carton quantity: 3
- Master carton weight: 7.65 kg
- Packaging dimensions (W x H x D):
360 x 295 x 70 mm
- Product dimensions (W x H x D):
199 x 38 x 153 mm
- Product weight: 1 kg
- Packaging type: D-box



Issue date 2017-04-05

Version: 2.1.5

12 NC: 8670 000 61081
EAN: 87 12581 53151 5

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of
DivXNetworks, Inc. and are used under license.