

Philips
DVD home theatre system



HTS3011



Powerful home theatre

Relax and immerse yourself in movies in your very own living room. Enjoy high quality multi-channel surround sound from practically any type of disc.

Brings audio and video to life

- Dolby Digital and Pro Logic II surround sound
- 12-bit/108 MHz video processing for sharp, natural images
- Advanced Class D Amplifier for compact, powerful sound

Easy to set up

- Easy-fit™ connectors with colour-coding for a simple setup

Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Built-in FM tuner
- Plays DivX, MP3, WMA and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL

PHILIPS
sense and simplicity


Highlights

DivX Ultra Certified




With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra combines DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Dolby Digital and Pro Logic II

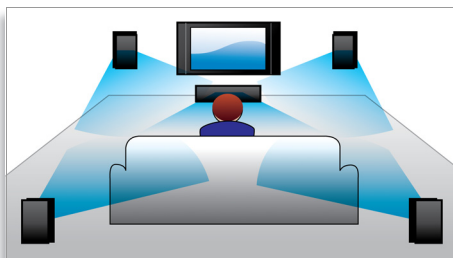

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

12-bit/108 MHz video DAC

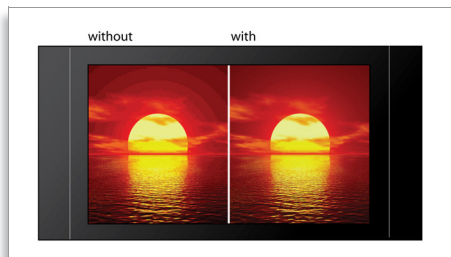


12-bit video DAC is a superior Digital-to-Analogue Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colours, resulting in a more vibrant and natural picture. The limitations of the standard 10-bit DAC become particularly apparent when it is used with large screens and projectors.

Advanced Class D Amplifier



Advanced Class D Amplifier for compact, powerful sound


Plays it all

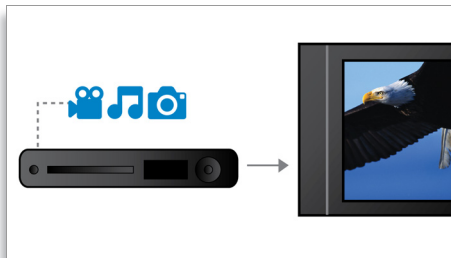

Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG.


Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

Plays it all

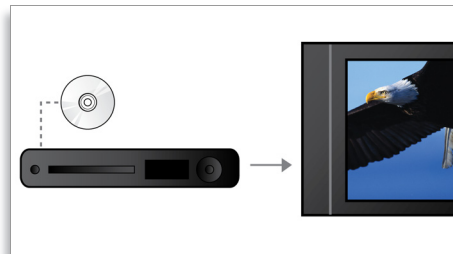

Play virtually any disc you want - whether they are CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW, DVD-RW or DVD+R DL. Experience unbeatable flexibility and the convenience of playing all your discs on the one device.

Easy-fit™ connectors

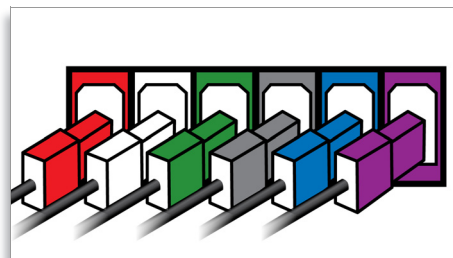

Colour-coded connectors provide a simple and user-friendly solution for connecting the speakers and subwoofer to the centre unit of the home entertainment system simply by plugging the connectors into the matching coloured interface at the rear of the centre unit.



Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive Scan

Sound

- Total Output Power: 200 W
- Output power (RMS): 4 x 25W + 2 x 50W
- D/A converter: 24-bit, 192 kHz
- Frequency response: 180 - 18000 Hz
- Signal to noise ratio: >60 dB
- Sound System: Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Lounge, Rock, Sports

Video Playback

- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG4
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: Audio CD, CD-R/RW, DVD+R/+RW, DVD-R/-RW
- Compression format: MP3, WMA
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW
- Picture compression format: JPEG
- Picture enhancement: Rotate, Zoom, Slideshow with music playback

Tuner/Reception/Transmission

- Tuner Bands: FM
- No. of pre-set Audio Channels: 40

Connectivity

- Rear Connections: Composite video (CVBS) output, FM Antenna, AUX in, Easy-Fit speaker connectors, Component Video output

Power

- Power supply: 120/230 VAC, 50/60 Hz
- Standby power consumption: < 1 W
- Power consumption: 40 W

Loudspeakers

- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20,000 Hz
- Centre Speaker: Magnetically shielded
- Centre speaker drivers: 3" full-range woofer
- Centre freq range: 150-20,000 Hz

- Centre speaker impedance: 8 ohm
- Subwoofer driver: 6.5" high-efficiency woofer
- Subwoofer type: Passive
- Subwoofer impedance: 8 ohm
- Subwoofer freq range: 45 - 150 Hz

Accessories

- Included Accessories: Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, User Manual, Quick start guide, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 360 x 55 x 332 mm
- Set weight: 2.58 kg
- Surround Speaker dimensions (W x H x D): 100 x 95.5 x 83.5 mm
- Surround Speaker Weight: 0.47 kg
- Center speaker dimensions (W x H x D): 100 x 95.5 x 83.5 mm
- Centre Speaker Weight: 0.52 kg
- Subwoofer dimensions (W x H x D): 131 x 315.5 x 386 mm
- Subwoofer Weight: 3.6 kg
- Packaging dimensions (W x H x D): 570 x 310 x 392 mm
- Weight incl. Packaging: 10.4 kg

Outer Box

- Gross weight: 10.03 kg
- Gross weight: 22.112 lb
- Outer carton (L x W x H): 22.1 x 15.5 x 12.1 inch
- Outer carton (L x W x H): 56.2 x 39.4 x 30.7 cm
- Net weight: 8.822 kg
- Net weight: 19.449 lb
- Tare weight: 2.663 lb
- Tare weight: 1.208 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 56.2 x 30.7 x 39.4 cm
- Packaging dimensions (W x H x D): 22.1 x 12.1 x 15.5 inch
- Gross weight: 10.03 kg
- Gross weight: 22.112 lb
- Net weight: 19.449 lb
- Net weight: 8.822 kg
- Tare weight: 2.663 lb
- Tare weight: 1.208 kg

Product dimensions

- Cable length: 0 cm
- Cable length: 0 inch
- Product dimensions (W x H x D): 0 x 0 x 0 inch
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 lb
- Weight: 0 kg



Issue date 2009-05-07

Version: 3.0.7

12 NC: 8670 000 36282
UPC: 6 09585 14689 1

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com